OIMMERGAS

MAGIS PRO 4/6/9 V2

ΙE


Instructions and recommendations

Installer User

Maintenance technician

Technical Data



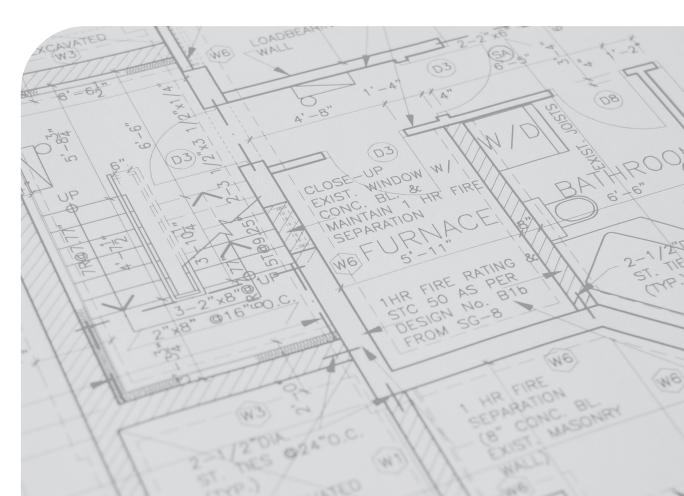

INDEX

Dear (Customer	4
Gener	al Recommendations	5
Safety	rsymbols used	6
Persoi	nal protective equipment	6
1	Installing the Indoor Unit	
1.1	Description of the product	
1.2	Installation warnings	
1.3	Data plate	
	.1 Data nameplate positioning	
1.3.	.2 Key for data nameplate	
1.4	Indoor Unit main dimensions	
1.5	Minimum installation distances	
1.6	Antifreeze protection	15
1.7	Indoor Unit connection unit	
1.8	Hydraulic connection	17
1.9	Connecting the chiller line	
1.10	Electrical connection	18
	Room chrono-thermostats (Optional)	
1.12	MODBUS temperature and humidity room probes (Optional)	23
1.13	Remote zone control (Optional)	24
1.14	Dominus V2 (optional)	24
	Humidistat ON/OFF (Optional)	
1.16	External temperature probe (Optional)	25
1.17	Temperature control setting	26
1.18	System filling	27
1.19	Operating limits	28
1.20	Indoor Unit start-up (ignition).	29
1.21	UPM3 circulation pump	30
1.22	UPM4circulation pump	31
1.23	Configurable relay interface kit (Optional)	33
1.24	Kits available on request	33
1.25	Main components	34
	Instructions for use and maintenance	
2.1	General recommendations	
2.2	Cleaning and maintenance	
	Control panel	
2.4	System use	
2.5	Fault and anomaly signals	
2.6	Parameters and information menu	
2.7	Indoor Unit shutdown	
2.8	Restore central heating system pressure	
2.9	Draining the system	
	Antifreeze protection	
	Prolonged inactivity	
	Cleaning the case	
	Permanent shutdown	
2.14	Use of the remote zone panel (Optional)	55
2 1	Instructions for maintenance and initial cheels	
	Instructions for maintenance and initial check	
3.1	Initial check	
	Yearly appliance check and maintenance	57 57
	DALLY GLANDELY ALVELY ALICHIALIE HALLE	1 /

Coil maintenance	58
Hydraulic diagram	59
Wiring diagrams	60
System filter	72
Troubleshooting	72
Parameters and information menu	73
First ignition parameter setting.	83
Anti-legionella (if paired with a storage tank unit)	83
DHW (Domestic hot water) recirculation	83
Active plant phase and generic alarm	84
Puffer in preheating	
Pump anti-block	84
Three-way anti-block	84
System setpoint correction	84
Integration with system electrical resistance	85
Zone 1 safety thermostat	85
Zone 2/3 safety thermostat	85
Conjunction Mode	86
Outdoor Unit disabling	86
Diverter valve management (summer / winter)	
Photovoltaic	86
Automatic vent	86
Pre-heat	86
Screed heater	87
Dehumidify	88
Outdoor unit Test mode	88
Outdoor Unit Pump Down	
Night mode	89
Central heating/cooling selector	89
Casing removal	90
Fachnical data	02
Darameters for filling in the poskage fishe	101
	Hydraulic diagram. Wiring diagrams System filter. Troubleshooting. Parameters and information menu First ignition parameter setting Anti-legionella (if paired with a storage tank unit). DHW (Domestic hot water) rectivulation. Active plant phase and generic alarm. Puffer in preheating. Pump anti-block Three-way anti-block. System setpoint correction. Integration with system electrical resistance. Zone I safety thermostat. Conjunction Mode. Outdoor Unit disabling. Diverter valve management (summer / winter). Photovoltaic. Automatic vent Pre-heat Screed heater. Dehumidify Outdoor unit Test mode. Outdoor Unit Pump Down Night mode. Central heating/cooling selector. Casing removal. Fechnical data. Technical data table. Product fiche M AGIS PRO 4 V2 (in compliance with Regulation 811/2013). Table 2 regulation 813/2013 (M AGIS PRO 6 V2). Product fiche M AGIS PRO 6 V2 (in compliance with Regulation 811/2013). Table 2 regulation 813/2013 (M AGIS PRO 6 V2). Product fiche M AGIS PRO 9 V2 (in compliance with Regulation 811/2013). Table 2 regulation 813/2013 (M AGIS PRO 6 V2). Product fiche M AGIS PRO 9 V2 (in compliance with Regulation 811/2013). Table 2 regulation 813/2013 (M AGIS PRO 6 V2). Product fiche M AGIS PRO 9 V2 (in compliance with Regulation 811/2013). Table 2 regulation 813/2013 (M AGIS PRO 6 V2). Product fiche M AGIS PRO 9 V2 (in compliance with Regulation 811/2013). Table 2 regulation 813/2013 (M AGIS PRO 6 V2).

Dear Customer

Congratulations for having chosen a top-quality Immergas product, able to assure well-being and safety for a long period of time. As an Immergas customer you can also count on a Qualified Authorised After-Sales Technical Assistance Centre, prepared and updated to guarantee the constant efficiency of your products. Read the following pages carefully: you will be able to draw useful tips on the proper use of the device, compliance with which will confirm your satisfaction with the Immergas product.

For assistance and routine maintenance, contact Authorised Technical Service Centres: they have original spare parts and are specifically trained directly by the manufacturer.

Thermal systems must undergo periodic maintenance and scheduled checks of the energy efficiency in compliance with national, regional or local provisions in force.

The company **IMMERGAS S.p.A.**, with registered office in via Cisa Ligure 95 42041 Brescello (RE), declares that the design, manufacturing and after-sales assistance processes comply with the requirements of standard **UNIEN ISO 9001:2015**. For further details on the product CE marking, request a copy of the Declaration of Conformity from the manufacturer, specifying the

The manufacturer declines all liability due to printing or transcription errors, reserving the right to make any modifications to its technical and commercial documents without forewarning.



appliance model and the language of the country.



GENERAL RECOMMENDATIONS

This book contains important information for the:

Installer (section 1);

User (section 2);

Maintenance Technician (section 3).

For instructions on the AUDAX PRO V2 Outdoor Unit, please refer to the relevant instruction manual;

- The user must carefully read the instructions in the specific section (section 2).
- The user must limit operations on the appliance only to those explicitly allowed in the specific section.
- Every operation carried out on the heat pump (e.g. set up, inspection, installation and commissioning), must mandatorily be performed by authorised personnel alone and in possession of a technical engineering or professional degree qualifying them to perform these tasks. They must also have attended a refresher course acknowledged by competent authorities. This particularly applies to personal specialised in C.H. and air-conditioning systems and qualified electricians who, due to their specialised training, skills and experience are experts in the correct installation and maintenance of C.H., cooling and air-conditioning systems.
- The appliance must be installed by qualified and professionally trained personnel.
- The instruction booklet is an integral and essential part of the product and must be given to the new user in the case of transfer or succession of ownership.
- · It must be stored with care and consulted carefully, as all of the warnings provide important safety indications for installation, use and maintenance stages.
- In compliance with the legislation in force, the systems must be designed by qualified professionals, within the dimensional limits established by the Law. Installation and maintenance must be performed in compliance with the regulations in force, according to the manufacturer's instructions and by professionally qualified staff, meaning staff with specific technical skills in the plant sector, as provided for by Law.
- Improper installation or assembly of the Immergas device and/or components, accessories, kits and devices can cause unexpected problems for people, animals and objects. Read the instructions provided with the product carefully to ensure proper installation.
- This instructions manual provides technical information for installing Immergas products. As for the other issues related to the installation of products (e.g. safety at the workplace, environmental protection, accident prevention), it is necessary to comply with the provisions of the standards in force and the principles of good practice.
- All Immergas products are protected with suitable transport packaging.
- The material must be stored in a dry place protected from the weather.
- Damaged products must not be installed.
- Maintenance must be carried out by skilled technical staff. For example, the Authorised Service Centre that represents a guarantee of qualifications and professionalism.
- The appliance must only be destined for the use for which it has been expressly declared. Any other use will be considered improper and therefore potentially dangerous.
- · If errors occur during installation, operation and maintenance, due to non-compliance with technical laws in force, standards or instructions contained in this booklet (or however supplied by the manufacturer), the manufacturer is excluded from any contractual and extra-contractual liability for any damages and the device warranty is invalidated.
- In the event of malfunctions, faults or incorrect operation, turn the appliance off and contact an authorised company (e.g. the Authorised Technical Assistance Centre, which has specifically trained staff and original spare parts). Do not attempt to modify or repair the appliance alone.



SAFETY SYMBOLS USED



GENERICHAZARD

Strictly follow all of the indications next to the pictogram. Failure to follow the indications can generate hazard situations resulting in possible harm to the health of the operator and user in general, and/or property damage.



ELECTRICAL HAZARD

 $Strictly follow all of the indications \, next to \, the \, pictogram. \, The \, symbol \, indicates \, the \, appliance \, \dot{s} \, electrical \, components \, or, \, in \, decrease \, decr$ this manual, identifies actions that can cause an electrical hazard.



WARNING FOR INSTALLER

Read the instruction booklet carefully before installing the product.



LOW FLAMMABILITY MATERIAL

The symbol indicates that the appliance contains low flammability material.



WARNINGS

Strictly follow all of the indications next to the pictogram. Failure to follow the indications can generate hazard situations resulting in possible minor injuries to the health of both the operator and the user in general, and/or slight material damage.



ATTENTION

Read and understand the instructions of the appliance before carrying out any operation, carefully following the instructions given. Failure to observe the instructions may result in malfunction of the unit.



INFORMATION

Indicates useful tips or additional information.



EARTH TERMINAL CONNECTION

The symbol identifies the appliance's earth terminal connection point.



DISPOSALWARNING

The user must not dispose of the appliance at the end of its service life as municipal waste, but send it to appropriate collection centres.

PERSONAL PROTECTIVE EQUIPMENT



SAFETY GLOVES



EYEPROTECTION



SAFETY FOOTWEAR

1

INSTALLING THE INDOOR UNIT

1.1 DESCRIPTION OF THE PRODUCT

Magis Pro 4-6-9 V2 is a heat pump consisting of:

- Magis Pro Indoor Unit (hereinafter it will only be referred to as Indoor Unit);
- Audax Pro 4-6-9 V2 Outdoor Unit (hereinafter it will only be referred to as Outdoor Unit).

Magis Pro V2 is perfectly operational only if the two units are correctly powered and interconnected.

The Indoor Unit was designed solely for wall mounted installations for heating and air conditioning (and to produce domestic hot water for domestic use and similar purposes only if paired with a storage tank unit).

For normal operation is must be paired with the following Outdoor Units:

- AUDAX PRO 4 V2 Outdoor Unit;
- Audax Pro 6 V2 Outdoor Unit;
- Audax Pro 9 V2 Outdoor Unit.

Comply with all of the rules regarding safety and the use of both appliances.

1.2 INSTALLATION WARNINGS



Operators who install and service the appliance must wear the suitable personal protective equipment required by applicable law.





The place of installation of the appliance and relative Immergas accessories must have suitable features (technical and structural) such to allow (always in safety, efficiency and easy conditions):


- installation (according to the provisions of technical legislation and technical regulations);
- maintenance operations (including scheduled, periodic, routine and special maintenance);
- removal (to outdoors in the place for loading and transporting the appliances and components) as well as the eventual replacement of those with appliances and/or equivalent components.



The wall surface must be smooth, without any protrusions or recesses enabling access to the rear part. They are not designed to be installed on plinths or floors (Fig. 1).



Installation must be carried out according to regulation standards, current legislation and in compliance with local technical regulations and the required technical procedures.

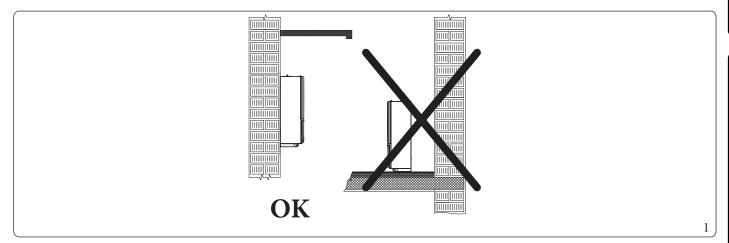





The appliance operates with R32 refrigerant gas.

This gas is ODOURLESS.

Pay the utmost attention

Strictly follow the instruction handbook of the Outdoor Unit before installation and any type of operation on the chiller line.



R32 refrigerant gas belongs to the low flammability refrigerant category: class A2L according to standard ISO 817. It guarantees high performance with low environmental impact. The new gas reduces the potential environmental impact by one third compared to R410A, having less effect on global warning (GWP 675).



The manufacturer declines all liability in the event of damage caused by appliances removed from other systems or for any non-conformities with such equipment.



Only a professionally enabled company is authorised to install Immergas appliances.



 $Check the \,environmental \,operating \,conditions \,of all \,parts \,relevant \,to \,installation, referring \,to \,this \,booklet.$



If installing a kit or servicing the appliance, first empty the system's circuit when necessary, so as not to compromise the appliance's electrical safety (Parag. 2.9).

 $Always \, disconnect \, the \, appliance \, from \, voltage \, and, \, depending \, on \, the \, type \, of \, operation, \, decrease \, the \, pressure \, and/or \, bring \, it \, to \, zero \, in \, the \, system \, circuit.$



Before installing the appliance, ensure that it is delivered in perfect condition; if in doubt, contact the supplier immediately. Packing materials (staples, nails, plastic bags, polystyrene foam, etc.) constitute a hazard and must be kept out of the reach of children.

If the appliance is installed inside or between cabinets, ensure sufficient space for routine servicing; for minimum installation distances, see Fig. 5.



 $Keep\,all\,combustible\,material\,away\,from\,the\,appliance\,(paper, rags, plastic, polystyrene, etc.).$



 $For the aforementioned \, reasons, we \, recommend \, not \, placing \, furnishings, furniture, etc. \, under the \, Indoor \, Unit.$



Any modification to the appliance that is not explicitly indicated in this section of the booklet is forbidden.



In any configuration do no install the Indoor Unit and Outdoor Unit at altitudes above 2000 m.



Installation standards



This Indoor Unit can be installed outdoors in a partially protected area.

A partially protected area is one in which the Indoor Unit is not exposed to the direct action of the weather (rain, snow, hail, etc.).



This type of installation is possible when permitted by the laws in force in the appliance's country of destination.



The appliance is not intended to be used in potentially explosive atmospheres.



Potential ignition sources must be kept away from the work area, installation, repair, removal and waste disposal site where the flammable refrigerant could be released in the surrounding environment.



Do not install in places/rooms that constitute public areas of apartment buildings, internal stairways or other escape routes (e.g. floor landings, entrance halls, etc.).



Do not install near sources of heat.

Using specific kits, the Indoor Unit can be paired with other Immergas products and installed inside an outdoor wall using the specific Solar Container recessed frame or mounted on an indoor wall in the Domus Container.



Pay attention not to generate sparks as follows:

- Do not remove the fuses while the unit is on. It is recommended to install the outlet high up. Lay the cables in such a way that they do not get tangled.



 $In stalling the wall \, recessed \, frame \, kit \, must \, guarantee \, the \, Indoor \, Unit \, stable, efficient \, support.$

The recessed frame kit ensures appropriate support only if installed correctly (according to the rules of good practice), following the instructions on its instructions leaflet.

 $The recessed frame for the Indoor \, Unit is \, not \, a \, supporting \, structure \, and \, must \, not \, replace \, the \, wall \, removed. \, It is \, necessary \, to \, position \, the \, boiler \, inside \, the \, wall.$

 $For safety \, reasons \, against \, any \, leaks \, it \, is \, necessary \, to \, plaster \, the \, housing \, compartment \, of \, the \, Indoor \, Unit \, in \, the \, brick \, wall.$



Wall mounting of the Indoor Unit must guarantee stable and efficient support for the generator.

The plugs (standard supply) are only to be used to fix the Indoor Unit to the wall; they only ensure adequate support if inserted correctly (according to technical standards) in walls made of solid or semi-hollow brick or block. In the case of walls made from hollow brick or block, partitions with limited static properties, or in any case walls other than those indicated, a static test must be carried out to ensure adequate mount.



 $These \, appliances \, are \, used \, to \, heat \, water \, to \, below \, boiling \, temperature \, in \, atmospheric \, pressure.$





They must be attached to a heating system suitable for their capacity and voltage.



 $The Storage Tank \ Unit must also be installed in an environment in which the temperature cannot fall below 0 ^{\circ}C.$



Anti-Legionella can only be activated if the optional DHW electrical resistance is installed; The anti-Legionella function is programmed <u>directly on the control panel</u>.

 $During this phase, the temperature of the water inside the tank exceeds 60 ^{\circ}C with the subsequent risk of burns.$

Keep this domestic hot water treatment under control (and inform the users) to prevent unforeseeable damage to people, animals, things. If required install a thermostatic valve on the domestic hot water outlet to prevent scalding.



The appliance is built to also operate in cooling mode.

If cold water production, during summer, could interfere and damage the central heating only systems, necessary precautions must be taken to prevent that an unintentional production of cold water enters the heating only system.



The minimum water content required within the system is 30 litres; otherwise, it will be necessary to install an inertial storage tank (optional).

For proper system operation, make sure that the minimum flow rate in operating conditions never drops below 500 l/h.



When the circulation within each room central heating loop is controlled by remotely operated valves, it is important to guarantee the minimum water content (30 litres), even if all the valves are closed.


When the circulation within each or certain room central heating loops is controlled by remotely operated valves, it is important to guarantee the minimum flow rate, even if all the valves are closed. It is necessary to have a loop that is always open on the system (by-pass or non-intercepted zone), to allow some functions such as, for example, the antifreeze function.



Failure to comply with the above implies personal responsibility and invalidates the warranty.

1.3 DATA PLATE

1.3.1 Data nameplate positioning

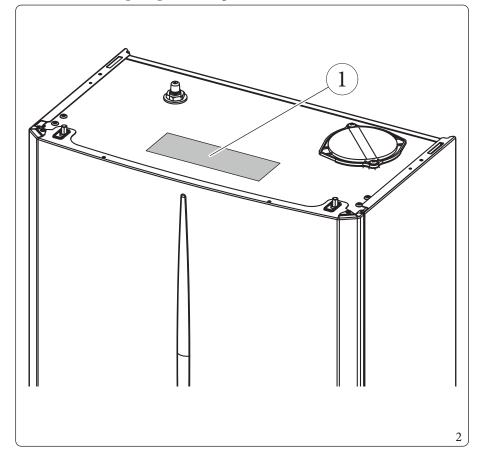

Key (Fig. 2):
1 - Data plate

1.3.2 Key for data nameplate


Md.		Cod. Md.	Sr N°	
Туре			DHW Tank	·
			1	
Power Supply 1			Net weight	
Power Supply 2 / Optional				
CH - Max Temp:	Max Press:			
DHW - Max Temp:	Max Press:			
·				

i

 $The \, technical \, data \, are \, provided \, on \, the \, data \, plate \, on \, the \, appliance.$

	ENG
Md.	Model
Cod.Md.	Model code
Sr N°	Serial Number
СНК	Check
Туре	Type of appliance
DHW Tank	DHW tank capacity
1	Electric protection rating
Power Supply 1	Electric power supply 1 (voltage, frequency and rated power) of the heat pump (HP) and of the DHW electric resistance (DHW EH)
Net weight	Netweight
Power Supply 2 / Optional	Electric power supply 2/Optional (voltage, frequency and rated power) of the central heating electric resistance
CH - Max Temp / Max Press	Maximum temperature / Maximum pressure in CH mode
DHW - Max Temp / Max Press	Maximum temperature / Maximum pressure in DHW mode

INDOOR UNIT MAIN DIMENSIONS

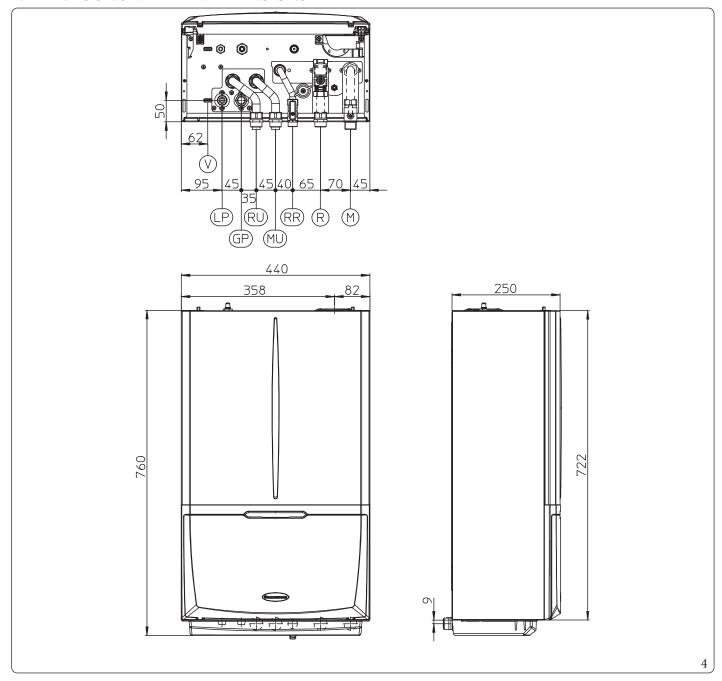

Height (mm)		Width (mm)	Depth (mm)	
760		440	250	
CONNECTIONS				
LINE CHILLER LINE		D.H.W.	SYS	ГЕМ
LP	GP	RR	R-M	RU - MU
SAE 1/4"	SAE 5/8"	G 1/2"	G3/4"	G3/4"

Key (Fig. 4):


V $Electrical\ connection$ RRSystem filling

Śtorage tank unit return RUMUStorage tank unit flow

R System return M System flow

LP Chiller line - liquid phase GPChiller line - gaseous phase

MINIMUM INSTALLATION DISTANCES

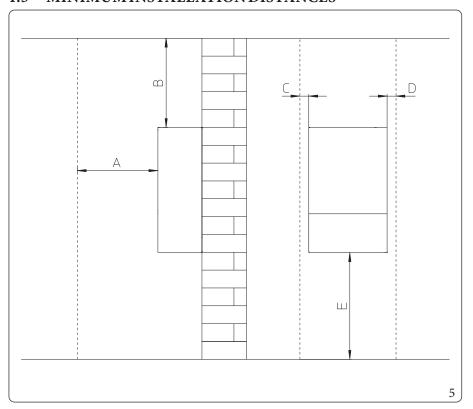

Key (Fig. 5): $450\,mm$ В 350 mm C $30\,mm$ D $30\,mm$ E $350\,mm$

ANTIFREEZE PROTECTION

Minimum room temperature -5°C

System integration enabled

The Indoor Unit comes standard with an anti-freeze function that activates the Outdoor Unit when the temperature of the water inside of the contraction of the contit falls below 4°C.

System integration disabled

The Indoor Unit comes standard with an anti-freeze function that activates the Outdoor Unit when the temperature of the water inside of the composition of the compit falls below 11°C.



In these conditions, the Indoor Unit is protected against freezing up to an ambient temperature of 5°C.



If the Indoor Unit is installed in a place where the temperature drops below 5°C, the appliance can freeze.

To prevent the risk of freezing follow the instructions below:

- protect the central heating circuit from freezing by inserting a good-quality antifreeze liquid into this circuit, which is specially suited for central heating systems and which is manufacturer guaranteed not to cause damage to the heat exchanger or other components of the Indoor Unit. The antifreeze liquid must not be harmful to one's health. The instructions of the manufacturer of this liquid must be strictly followed regarding the necessary percentage with respect to the minimum temperature at which the system must be kept.
- The materials used for the central heating circuit of Immergas Indoor Unit resist ethylene and propylene glycol based antifreeze liquids (if the mixtures are prepared perfectly).
- An aqueous solution must be made with potential pollution class of water $2 \times 1717:2002$ or local standards in force).



The excessive use of glycol could jeopardise the proper functioning of the appliance.



Follow the supplier's instructions for the life cycle duration and possible disposal of the antifreeze liquid.

Minimum room temperature -15°C

Protect the condensate drain siphon and the system fill-up pipe from freezing by using an accessory that is supplied on request (antifreeze kit), including an electric resistance, the relevant wiring and a control thermostat (carefully read the installation instructions in the accessory kit pack).



In the previously mentioned conditions and with the addition of the antifreeze kit, the Indoor Unit is protected against freezing up to a temperature of -15°C.

Indoor Unit anti-freeze protection (both 5°C and -15°C) is only ensured if:

- Indoor Unit and Outdoor Unit are properly connected to each other and to the electrical power supply circuits;
- the units are continuously powered;
- The Indoor Unit is not in "off" mode;
- the units are not in anomaly (Parag. 2.5);
- the antifreeze unit and/or kit essential components are not faulty.

The warranty does not cover damage due to interruption of the electrical power supply and failure to comply with that stated on the previous pages.



If the Indoor Unit is installed in places where the temperature drops below 0°C, the domestic hot water connection pipes must be insulated (if paired with Storage Tank Unit).




The antifreeze systems described in this chapter are only to protect the Indoor Unit. The presence of these functions and devices does not exclude the possibility of parts of the circuits outside the Indoor Unit from freezing.

MAGIS PRO 4/6/9 V2



1.7 INDOORUNIT CONNECTION UNIT

- The hydraulic connection unit is supplied as per standard with MAGIS PRO V2. Make the hydraulic connection as shown below, making sure to protect the system flow and return pipes with their supplied insulating sheaths.
- The R32 circuit wall connection unit is supplied as an extra kit. Connect the circuit, following the instructions provided in the Outdoor Unit instructions booklet.

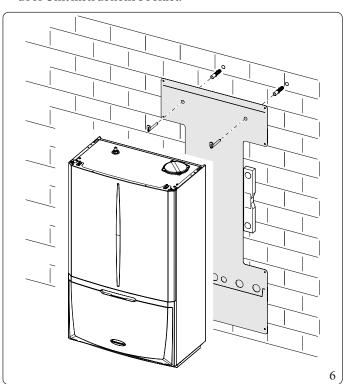

The hydraulic connection kit includes (Fig. 6):

N°1 - Adjustable expansion bolts

N°2 - Indoorunit support hooks

N°1 - G3/4" storage tank unit return pipe (RU)

 $N^{\circ}1$ - G3/4" storage tank unit flow pipe (MU)

 $N^{\circ}1 - G1/2$ " system filling pipe (RR)

 $N^{\circ}1$ - G1/2" ball valve (RR)

 $N^{\circ}1$ - G3/4" system return pipe (R)

 $N^{\circ}1$ - 3/4" system flow pipe G(M)

 $N^{\circ}1$ - G3/4" ball valve (M)

 $N^{\circ}2$ - Insulating sheath for system pipes (R-M)

N°4 - G3/4" telescopic fittings (RU-MU-R)

Gaskets, screws and seal O-Ring

The R32 circuit wall connection kit (optional) includes:

N°1 - SAE 1/4" liquid phase chiller line pipe (LP)

N°1 - SAE 5/8" gaseous phase chiller line pipe (GP)


Already installed on the module:

 $N^{\circ}1$ - System shut-off valve with G 3/4" filter (R)

1.8 HYDRAULIC CONNECTION



Before connecting the Indoor Unit, in order not to invalidate the warranty, carefully wash the heating system (pipes, heating bodies, etc.) with special pickling or descaling agents capable of removing any residues that could compromise the proper functioning of the Indoor Unit.

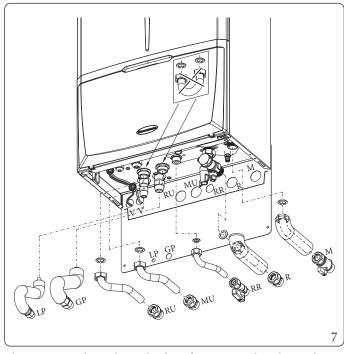

Key (Fig. 7):

V - Electrical connection

RR - System filling

RU - Storage tank unit return
MU - Storage tank unit flow
R - System return

M - System flow

LP - Chiller line - liquid phase GP - Chiller line - gaseous phase

The current technical standards in force prescribes the washing and treatment of the water in the heating and water system, in order to protect the system and the appliance from deposits (e.g. scale), slurry or other hazardous deposits.

Water connections must be made in a rational way using the couplings on the Indoor Unit template.



 $The \, manufacturer \, declines \, all \, liability \, in \, the \, event \, of \, damage \, caused \, by \, the \, installation \, of \, an \, automatic \, filling \, system.$

In order to meet the system requirements established by EN 1717 in terms of pollution of drinking water, we recommend installing the IMMERGAS anti-backflow kit to be used upstream of the cold water inlet connection of the Indoor Unit. We also recommend using category 2 heat transfer fluid (ex: water + glycol) in the Indoor Unit primary circuit (heating and/or cooling circuit), as defined in standard EN 1717.



To preserve the duration of appliance efficiency features, in the presence of water whose features can lead to the deposit of lime scale, installation of the "polyphosphate dispenser" kit is recommended.



1.9 CONNECTING THE CHILLER LINE

As far as connecting the cooling line is concerned, all the instructions contained in the Outdoor Unit instructions booklet must be followed.

Make the connections directly on the Indoor Unit couplings, or use the rear outlet kit (optional).

1.10 ELECTRICAL CONNECTION

The Indoor Unit has an IPX4D degree of protection; electrical safety of the appliance is achieved only when it is properly connected to an efficient earthing system, as specified by current safety standards.



The manufacturer declines any responsibility for damage or physical injury caused by failure to connect the Indoor Unit to an efficient earthing system or failure to comply with the IEC reference standards.

Connection cables must respect the prearranged routes.

Use 3 clips (c) (not supplied) to group the individual cables (max. 1.5 mm² into the lower terminal board.

Use the specific fairleads (d) on the left side, making sure to put at most 2 multi-polar cables (max 3 x 1 mm²) in each fairlead.

The figure 8 shows cables in a hypothetical connection. To make the connections based on your own requirements, see the instructions below.

Open the control panel connections compartment

Fig. 8.

To carry out electrical connections, all you have to do is open the connections compartment as follows.

- 1. Remove the front panel.
- 2. Disassemble the cover.
- 3. Loosen the screws (a).
- 4. Remove the cover (b) from the control panel (c).

At this point, you can access the terminal board.

Also ensure that the electrical installation corresponds to maximum absorbed power specifications as shown on the Indoor Unit data-plate.

Indoor Units are supplied complete with an "X" type power cable without plug.





MAINTENANCE TECHNICIAN

The power supply cable must be connected to a 230V $\pm 10\%$ / 50Hz mains supply respecting L-N polarity and earth connection; this network must also have a multipole circuit breaker with class III overvoltage category in compliance with installation regulations.



To protect from possible leakage of DC voltage, it is necessary to provide a type A or type F residual current safety device with 30 mA sensitivity.



If the power cable is damaged, contact a qualified company (e.g. the Authorised Technical Assistance Centre) for its replacement to avoid a hazard. It is recommended to contact a qualified company (e.g. the Authorised After-Sales Technical Assistance Centre) for replacement to avoid a hazard.



The power supply cable must be laid as shown (Fig. 8).

 $If the fuses on the circuit boards need to be replaced, this must also be done by qualified personnel: use a F3.15A H250V fuse on the P.C.B.\\ For the main power supply to the appliance, never use adapters, multiple sockets or extension leads.$

Make the various electrical connections according to your needs (Fig. 9, 10):

Outdoor Unit electrical connection


The indoor unit must be coupled to an outdoor unit by connecting terminals F1 and F2 as shown in the wiring diagram (Fig. 10). The Inodoor Unit is powered at 230 V, regardless of the Outdoor Unit.

Photovoltaic system installation


Connecting the product to a photovoltaic system enhances use of the outdoor unit when the photovoltaic panels are operating. Carry out the connection as indicated (Fig. 10).

Dehumidifiers

 $Carry \, out \, the \, connection \, as \, indicated \, (Fig. \,\, 10). To \, complete \, the \, connection \, operations, insert \, the \, 2-relay \, Board \, optional \, kit.$

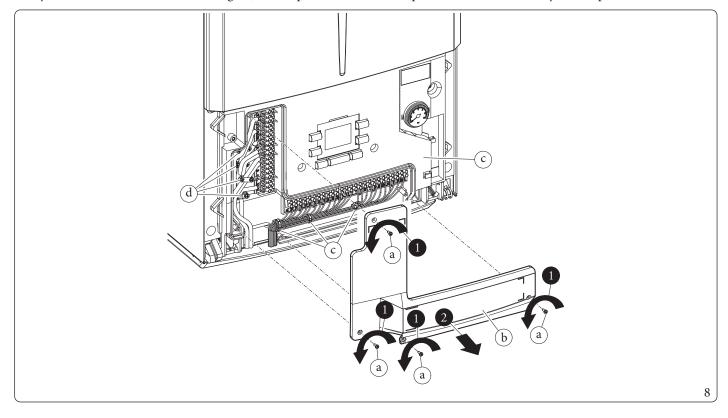

Vertical terminal block electrical connection diagram.

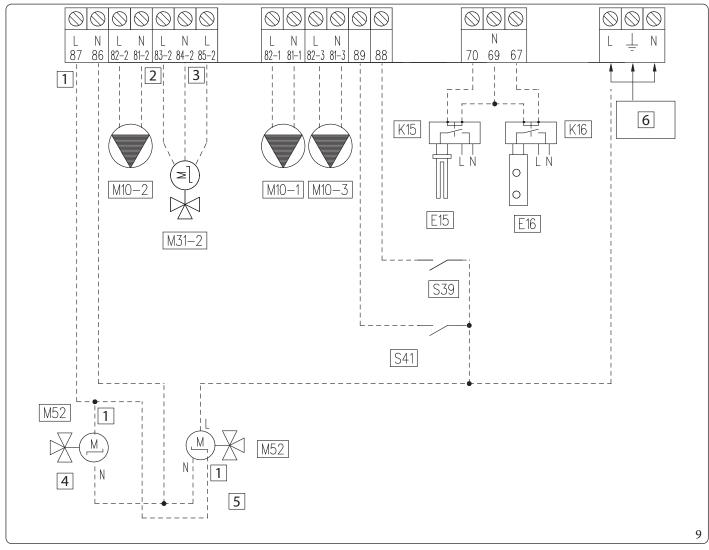

Terminal 87		
0V	Close	Winter
230V	Open	Summer with cooling

Key (Fig. 9):	
1	

1 - Open/Close 2 - Close

3 - Open
 4 - 2-point valve
 5 - 3-point valve
 6 - 230 Vac - 50 Hz

E15 - Domestic hot water integration resistance E16 - External system integration resistance K15 - DHW integrative resistance relay K16 - System integrative resistance relay

M10-1 - Zone 1 pump (optional)

M10-2 - Zone 2 circulator pump (optional)
 M10-3 - Zone 3 circulator pump (optional)
 M31-2 - Zone 2 mixing valve (optional)
 M52 - Hot cold three-way (optional)

S39 - Solarinlet


S41 - Outdoor unit disable function

A 3rd zone (mixed) can also be managed on the system by means of the configurable relay interface kit (optional). In this case, the zone 3 pump must be connected according to diagram (M10-3).

The zone 3 dehumidifier, if any, will be managed by means of the configurable relay interface kit, which the zone 3 mixer will also be connected to.



For the connection diagram, see paragraph 3.6 (LV terminal blocks connection wiring diagram).

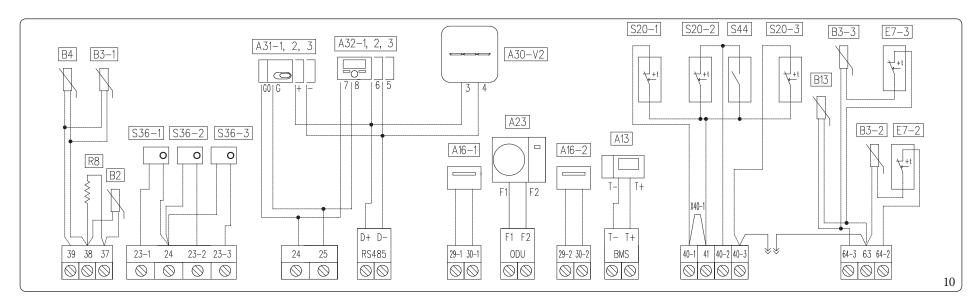

Key (Fig.):

A13 - System manager (optional)

A16-1 - Zone 1 dehumidifier (optional with dehum. management board)

A16-2 - Zone 2 dehumidifier (optional with dehum. management board)

A23 - Outdoor Unit

A30-V2 - Dominus V2 (optional)

A31-1 - Modbus humidity sensor zone 1 (optional)

A31-2 - Modbus humidity sensor zone 2 (optional)

 $A31\text{-}3 - Modbus \, humidity \, sensor zone \, 3 \, (optional)$

A32-1 - Zone 1 remote panel (optional)

A32-2 - Zone 2 remote panel (optional)

 $A32\text{-}3 \ - \quad Zone \, 3 \, remote \, panel \, (optional)$

B2 - Storage tank probe (optional)

B3-1 - Zone 1 flow probe (optional)

B3-2 - Zone 2 flow probe (optional)

B3-3 - Zone 3 flow probe (optional)

B4 - External probe (optional)

B13 - Central heating probe (optional)

E7-2 - Zone 2 safety thermostat (low temperature) (optional)

E7-3 - Zone 3 safety thermostat (low temperature) (optional)

R8 - Storage tank resistance

S20-1 - Zone 1 room thermostat (optional)

S20-2 - Zone 2 room thermostat (optional)

S20-3 - Zone 3 room thermostat (optional)

S36-1 - Zone 1 humidistat (optional)

S36-2 - Zone 2 humidistat (optional)

S36-3 - Zone 3 humidistat (optional)

S44 - Central Heating/Cooling Selector

X40-1 - Zone 1 room thermostat link

 $A 16-1 \, and \, A 16-2 \, dehumidifiers \, can \, be \, connected \, only \, after \, installing \, 2-relay \, board \, (optional).$

 $Remove link \, X40\text{--}1 \, before the electrical connection of the room thermostat zone \, 1.$

The TA inputs, 40-1 etc..., must be electrically decoupled; e.g. a single command cannot pilot multiple inputs.

With A13 available, the zone devices must not be connected.

The room thermost ats of zone 2, zone 3 and contact S44 cannot be installed simultaneously.

It is not possible to install at the same time:

- Heating probe B13 and Zone 3 probe B3-3;
- External probe B4 with zone 1 B3-1;
- Remote panel A32 with humidity sensor A17 in the same zone.



1.11 ROOM CHRONO-THERMOSTATS (OPTIONAL)

The Indoor Unit is prepared for the application of room chrono-thermostats, which are available as optional kits.

All Immergas chrono-thermostats are connected with 2 wires only.

A maximum of 3 temperature controllers can be applied directly to the appliance.

Carefully read the user and assembly instructions contained in the accessory kit.



Disconnect power to the unit before making any electrical connections.

Immergas digital chrono-thermostat On/Off.

The chrono-thermostat allows:

- set two room temperature value: one for day (comfort temperature) and one for night (reduced temperature);
- set a weekly programme with four daily switch on and switch off times;
- selecting the required function mode from the various possible alternatives:
- manual mode (with adjustable temperature);
- automatic mode (with set programme);
- forced automatic operation (momentarily changing the temperature of the automatic program).

The chrono-thermostat is powered by two 1.5V LR6 type alkaline batteries.

On/Off chrono-thermostat electrical connection (Optional).



The operations described below must be performed after having removed the voltage from the appliance.

On/Off ambient thermostat or chrono-thermostat: must be connected to the 40-1/41 terminals, eliminating the X40-1 link for zone 1 and 40-2/41 for zone 2 and 40-3/42 for zone 3.

Make sure that the On/Off thermostat contact is of the "clean" type, i.e. independent of the mains voltage, otherwise the P.C.B. would be damaged.

The connections must be made on the terminal board inside the appliance's control panel (Fig. 10).



 $If the area \, remote \, panel \, or \, any \, other \, On/Off chrono-thermostat \, is \, used, arrange \, two \, separate \, lines \, in \, compliance \, with \, current \, regulations \, regarding \, electrical \, systems.$

No Indoor Unit pipes must ever be used to earth the electric system or telephone lines.


Ensure elimination of this risk before making the Indoor Unit electrical connections.


1.12 MODBUS TEMPERATURE AND HUMIDITY ROOM PROBES (OPTIONAL)


The temperature and humidity probe is used to detect room humidity and to calculate the relative dew point by regulating the flow temperature during the cooling phase.

Connect the appliance as shown (Fig. 10);

DIP-Switch configuration table

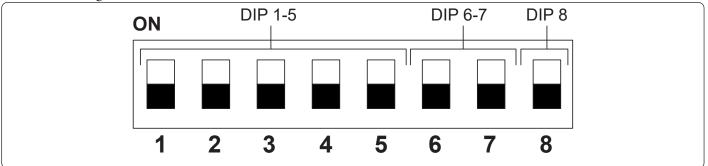

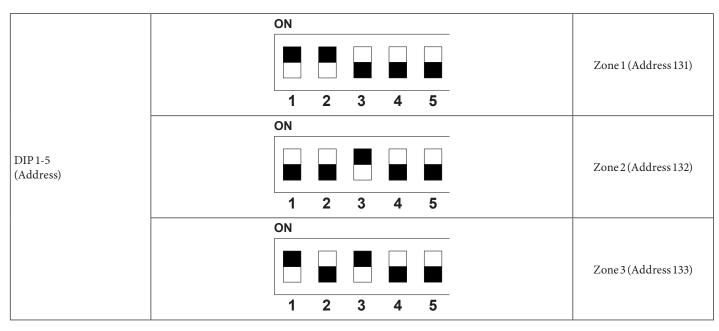

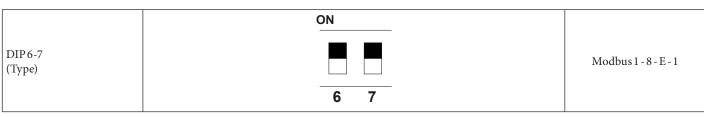

	ON	
DIP8 (Speed)		9600 bit/s
	8	

USER

1.13 REMOTE ZONE CONTROL (OPTIONAL)

This remote device is used to adjust the setpoints and to view the main information of the zone where it was configured. Connect the appliance as shown (Fig. 10);



When the connections are complete, switch off and re-power the appliance.

To correctly configure the device, set the parameters as described below:

Assistance Menu -> Device configuration			
	Zone 1 = 41		
Slave address: Address to configure according to the zone where the device is installed	Zone 2 = 42		
	Zone 3 = 43		
Baud Rate	9600		
Paritybit	Even		
Stopbits	1		
Heat pump control	NO		

 $Using \, a \, Zone \, Remote \, Panel \, with \, firmware \, version \, 2.00 \, or \, higher: \,$

- the item "Head pump control" is no longer present;
- it is possible to enable room probe modulation;
- the dew point control can be enabled.



For correct operation it is necessary to install the link on the thermostat of the zone associated to the panel. If necessary, this link can be replaced with a safety thermostat.



A restart of the machine is recommended after connecting the remote panel.

1.14 DOMINUS V2 (OPTIONAL)

The system can be remote controlled using the optional Dominus V2 kit.

Connect the appliance as shown (Fig. 10);

The following is necessary to enable Dominus:

- position the Dip Switches: OFF-OFF-OFF-ON;
- set the A30 parameter on the control panel = ON;
- $\quad configure \, the \, Dominus \, APP \, profile \, on \, Mag is \, Pro-Combo \, V2.$



The Dominus firmware must be updated to at least revision 2.02.

For further information, consult the relative instruction sheet.

1.15 HUMIDISTAT ON/OFF (OPTIONAL)

You can make a dehumidification demand by using a humidistat. Connect the appliance as shown (Fig. 10);

1.16 EXTERNAL TEMPERATURE PROBE (OPTIONAL)

 $The \, Outdoor \, Unit \, has \, a \, standard \, external \, probe \, that \, can \, be \, used \, as \, an \, external \, probe \, of \, the \, heat \, pump.$

If the Outdoor Unit is positioned in an area that is not suitable for temperature reading, it is advisable to use an additional external probe (Fig. 11) which is available as an optional kit.

Refer to the relative instruction sheet for positioning of the external probe.

For the proper operation of the optional probe it must be connected where envisaged (Fig. 10) and then enable it.



Once the probe is enabled, switch the appliance off and back on.

The presence of the external probe allows the system flow temperature to be set automatically based on the outdoor temperature in order to adapt the heating or cooling provided to the system.


The system flow temperature is determined by the setting on the "Heat regulation" menu and by the "User" menu for the offset values based on the curves shown in the diagram (Parag. 1.17).



If the system is divided into two or three zones, the flow temperature is calculated based on the zone with the higher temperature in central heating mode and with the lower temperature in cooling mode.

The electric connection of the external probe must be made on terminals 38 and 39 on the terminal board on the indoor unit control panel (Fig. 10).


In case of failure, after having powered off and back on, the outdoor temperature is automatically detected by the external probe on the Outdoor Unit.

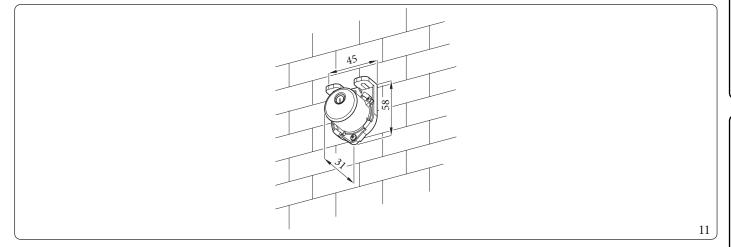



1.17 TEMPERATURE CONTROL SETTING


By setting the parameters in the "Heat regulation" menu, you can adjust how the system operates.


The curves (Fig. 12, 13, 14, 15, 16, 17) show the default settings in the various operating modes available both with external probe and without.

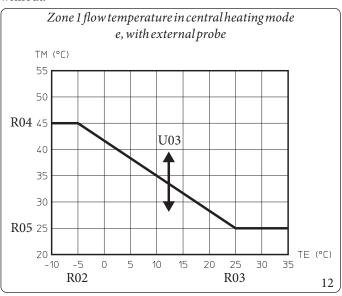


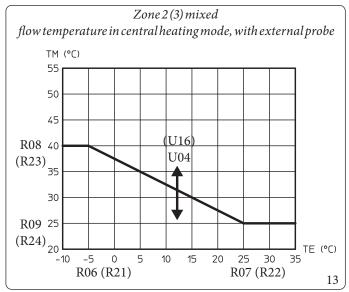

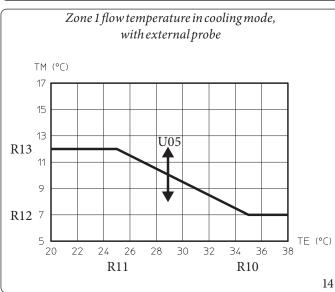

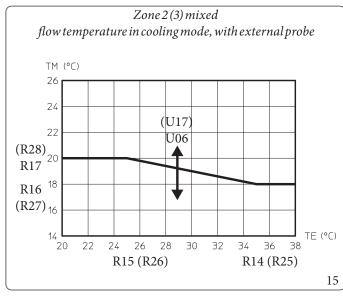

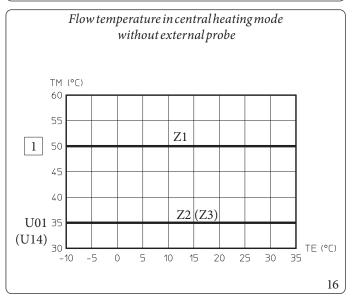

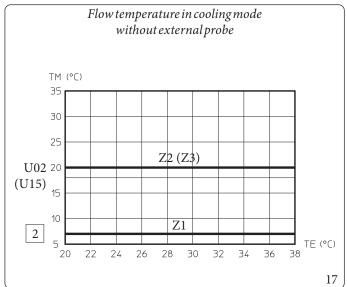

Key (Fig	g. 12, 13, 14, 15, 16, 17)	U04 - Offset value compared to the curve set by the external probe
1	- Central heating set	on central heating zone 2
2	- Cooling set	U05 - Offset value compared to the curve set by the external probe
Rxx	- Temperature control menu parameter	on cooling zone 1
TE	- External temperature	U06 - Offset value compared to the curve set by the external probe
TM	- Flow temperature	on cooling zone 2
U01	- Zone 2 flow temperature in "User" menu central heating	U14 - Zone 3 flow temperature in "User" menu central heating
	mode	mode
U02	- Zone 2 flow temperature in "User" menu cooling mode	U 15 - Zone 3 flow temperature in "User" menu cooling mode
U03	- Offset value compared to the curve set by the external probe	U 16 - Offset value compared to the curve set by the external probe
	on central heating zone 1	on central heating zone 3
		U 17 - Offset value compared to the curve set by the external probe
		on cooling zone 3
		Zx - Heating system zone

1.18 SYSTEM FILLING

 $Once the Indoor \, Unit \, is \, connected, fill \, the \, system \, using \, the \, filling \, cock \, (Fig. \,\, 23).$

 $The Indoor \, Unit \, has \, one \, incorporated \, automatic \, vent \, valve \, located \, on \, the \, circulator \, and \, another \, on \, the \, central \, heating \, manifold.$



Make sure that the hoods are loosened.

 $The filling \ valve \ must be \ closed \ when \ the \ Indoor \ Unit \ pressure \ gauge \ indicates \ approximately \ 1.2 \ bar.$



During these operations, enable the "Venting" functions by setting the "U 50" parameter to ON, which lasts about 18 hours.

System minimum water content.


Minimum water content favours the **proper execution of defrosting cycles** and operation in cooling mode.


 $To this end, the minimum amount of water to guarantee is {\it 30 litres} for any type of system and in any operating mode.$




1.19 OPERATINGLIMITS

The system was designed to work in a specific range of temperatures and at a specific maximum flow temperature. The chart (Fig. 18, 19, 20) shows these limits.

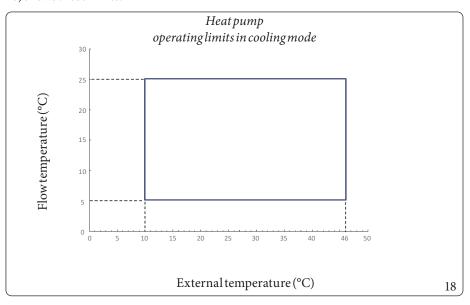

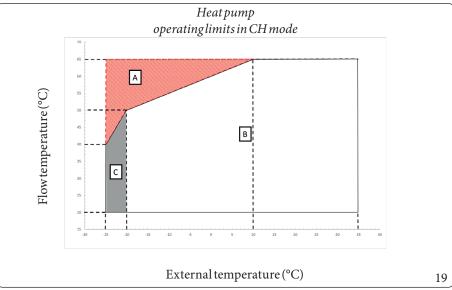

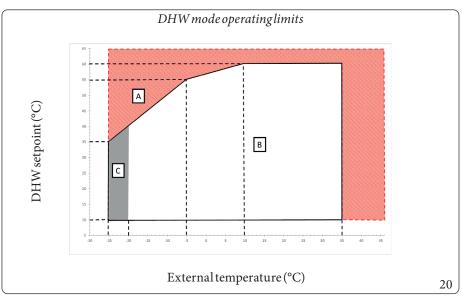

Key (Fig. 19):

A = Only with system integration resistance (optional) enabled

B = Heat pump operating range

C = For outdoor temperatures below -20°C, the capacity of the heat pump is not guaranteed

Key (Fig. 20):

A = Only with system integration resistance (optional) enabled

B = Heat pump operating range

C = For outdoor temperatures below -20°C, the capacity of the heat pump is not guaranteed

1.20 INDOOR UNIT START-UP (IGNITION).

After having installed the chiller lines on the Outdoor Unit, to commission the heat pump (the operations listed below must only be performed by qualified personnel and in the presence of staff only):

- $1. \quad Check \, connection \, to \, a \, 230 \, \text{V} \sim 50 \, \text{Hz} \, power \, mains, correct \, L-N \, polarity \, and \, the \, earthing \, connection; \\$
- Switch the indoor unit on and check correct ignition;
- Check the intervention of the main switch located upstream from the Indoor Unit and in the Indoor Unit.



The system must not be started up if even only one of the checks should be negative.



After installation, check for leaks. Toxic gas could be generated if the unit comes into contact with a source of ignition, such as thermal fan, stove and cylinders. Make sure that only refrigerant recovery cylinders are used.



MAGIS PRO 4/6/9 V2

1.21 UPM3 CIRCULATION PUMP

The appliance is supplied with a variable speed pump which operates as follows:

- Fixed ("A 05" = 0): The pump speed is fixed and corresponds to parameter "A 04".
- Δ T constant ("A 05" = 5 K): the pump speed varies to maintain the Δ T = 5K constant between the system flow and return. Also, you can adjust the pump operating range, by setting the maximum speed "A 04" and the minimum speed "A 03".



For proper system operation, make sure that the minimum flow rate in operating conditions never drops below 500 l/h.

PumpLED

The LED flashes green when the pump is powered and the pwm control signal is connected.



The LED lights up steady green when the pump is powered and the signal cable disconnected. In these conditions the pump works at maximum and without control.

If the pump detects an alarm, the LED switches from green to red; this can mean one of the following failures:

- low supply voltage;
- rotor seized;
- electrical error.

For a detailed description of the meaning of the red LED, refer to Paragraph 3.8.



USER

The LED, in addition to being green or red, can also remain off.

It is normal for the LED to be off when the pump is not powered, whereas with the pump powered, the LED must be lit: if switched off, it means there is a fault.

Pump release.

If after a long period of inactivity, the circulator is blocked, adjust the screw in the centre of the head in order to manually release the motor shaft.

Take great care during this operation to avoid damage to the motor.

1.22 UPM4CIRCULATION PUMP

The appliance is supplied with a variable speed pump which operates as follows:

- Fixed ("A 05" = 0): The pump speed is fixed and corresponds to parameter "A 04".
- ΔT constant ("A 05" = 5 K): the pump speed varies to maintain the ΔT = 5K constant between the system flow and return. Also, you can adjust the pump operating range, by setting the maximum speed "A 04" and the minimum speed "A 03".




For proper system operation, make sure that the minimum flow rate in operating conditions never drops below 500 l/h.

Pump symbols (Fig. 21):

With the pump powered and the pwm control signal connected and operating (pump ON or in stand-by), the symbol 2 flashes green (

If the symbol 2 turns steady green (1), the pump detects no command on the pwm signal and always runs at maximum speed. If the pump detects an alarm, symbol 1 lights up red $(\sqrt{2})$. This can mean that there is one of the following faults:

- Low power supply voltage.
- Rotor seized (Cautiously turn the screw in the centre of the head to manually release the motor shaft).
- Electrical error.

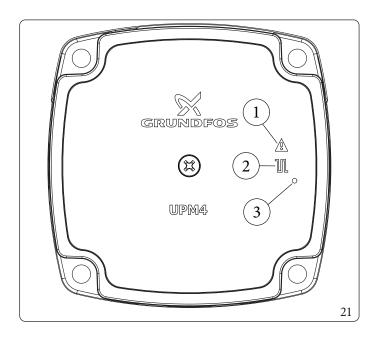

Key (Fig. 21):

- Alarm signal (Red)
- Functioning status signal (Steady green/Flashing green)
- Led (Not used on this model)


Pump release.

If after a long period of inactivity, the circulator is blocked, adjust the screw in the centre of the head in order to manually release the mo-

MAGIS PRO 4/6/9 V2

Take great care during this operation to avoid damage to the motor.



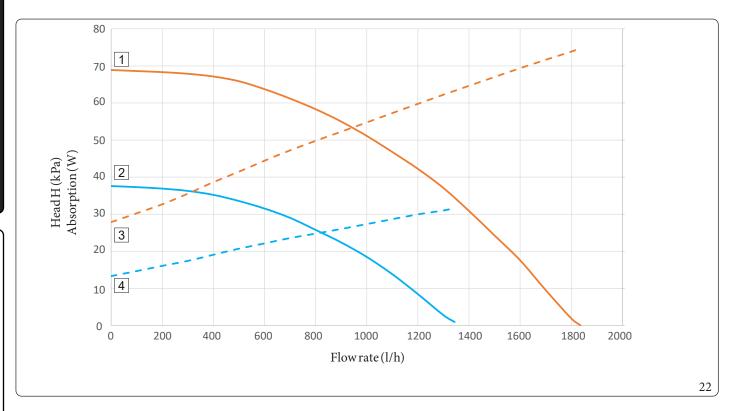

Key (Fig. 22):

1 = Head available to the system with maximum fixed speed

2 = Head available to the system with minimum fixed speed

3 = Absorbed power by the pump at maximum fixed speed

= Absorbed power by the pump at minimum fixed speed

Area between curves 1 and 2 = Available system head Area between curves 3 and 4 = Pump absorbed power



 $In \, domestic \, hot \, water \, mode, the \, circulator \, pump \, always \, runs \, at \, full \, speed.$

1.23 CONFIGURABLE RELAY INTERFACE KIT (OPTIONAL)

The Indoor Unit is set-up for functioning with the relay P.C.B. (optional), which can be configured.

Relay 1 (optional) - Parameter P03

- -0 = Off
- 1 = DHW recirculation
- 2=General alarm
- 3 = Central heating / cooling mode active
- 4 = Puffer mode active
- 5 = Dehumidifier zone 3

Relay 2 (optional) - Parameter P04

- -0 = Off
- 1 = DHW recirculation
- 2=General alarm
- 3 = Central heating / cooling mode active
- 4 = Puffer mode active
- 5 = Zone 3 mixing valve closing

Relay 3 (optional) - Parameter P05

- -0 = Off
- 1 = DHW recirculation
- 2=General alarm
- 3 = Central heating / cooling mode active
- 4 = Puffer mode active
- 5 = Zone 3 mixing valve opening


1.24 KITS AVAILABLE ON REQUEST



Check the complete list of kits available and which can be combined with the product, consult the Immergas website, the Immergas Price List or the technical-commercial documentation (catalogues and data sheets).



1.25 MAIN COMPONENTS

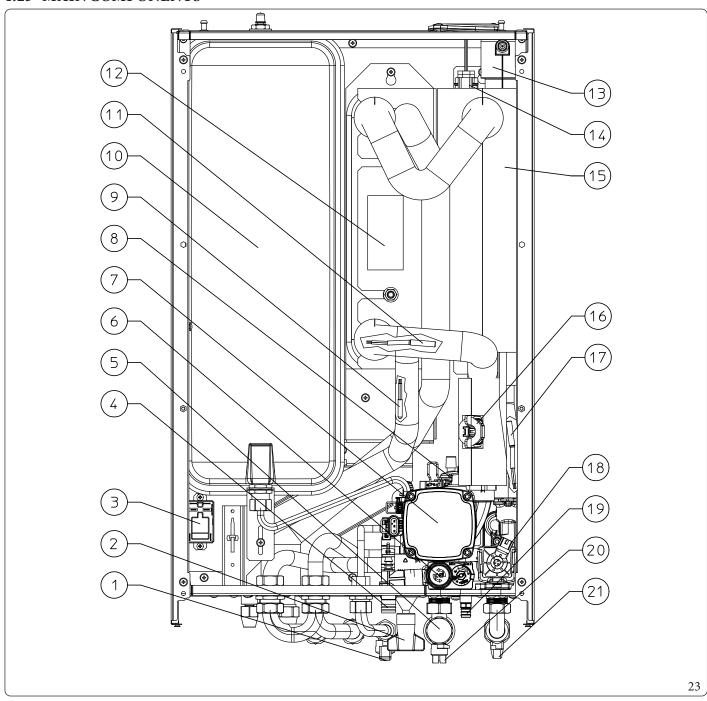

Key (Fig. 23):

- 1 Domestic hot water inlet valve
- 2 System filling valve
- 3 Relay (optional)
- 4 3-bar safety valve drain fitting
- 5 Filter that can be inspected
- 6 3 bar safety valve
- 7 Pump
- 8 Airventvalve
- 9 Liquid phase detection probe10 System expansion vessel
- 11 Return probe

- 12 Plate heat exchanger
- 13 Air vent valve
- 14 Heating system integrated electrical resistance cap (optional)
- 15 Central heating manifold
- 16 Systemflow-meter
- 17 Flowprobe
- 18 3-way valve (motorised)
- 19 System draining valve
- 20 System shut-off valve
- 21 System shut-off valve

2

INSTRUCTIONS FOR USE AND MAINTENANCE

2.1 GENERAL RECOMMENDATIONS



Never expose the Indoor Unit to direct vapours from a hob.



The device can be used by children at least 8 years old as well as by persons with reduced physical, sensory or mental capabilities, or lack of experience or required knowledge, provided that they are under surveillance, or after they have been instructed relating to the safe use and have understood the potential dangers.

Children must not play with the appliance.

 $Cleaning and \ maintenance \ destined \ to \ be \ performed \ by \ the \ user \ can \ not \ be \ carried \ out \ by \ unsupervised \ children.$



If temporary shutdown of the HP is required, proceed as follows:

- a) drain the system if antifreeze is not used;
- b) shut off the electrical and water supply.



Never clean the appliance or connected parts with easily flammable substances.



Never leave containers or flammable substances in the same environment as the appliance.



Do not open or tamper with the appliance.



Do not climb on the appliance, do not use the appliance as a support base.



Only use the user interface devices listed in this section of the booklet.



The use of components involving use of electrical power requires some fundamental rules to be observed such as:

- do not touch the appliance with wet or moist parts of the body; do not touch when barefoot;
- never pull electrical cables or leave the appliance exposed to atmospheric agents (rain, sunlight, etc.);
- the appliance power cable must not be replaced by the user;
- in the event of damage to the cable, switch off the appliance and contact exclusively qualified staff for replacement;
- if the appliance is not to be used for a certain period, disconnect the main Indoor Unit external switch.



MAINTENANCE TECHNICIAN



(If paired with a storage tank unit) water at a temperature of more than 50 °C can cause serious burns.

Always check the water temperature before any use.



The temperatures indicated by the display have a tolerance of ± -3 °C due to environmental conditions that cannot be blamed on the Indoor Unit.



At the end of its service life, the appliance must not be disposed of like normal household waste nor abandoned in the environment, but must be removed by a professionally authorised company as required by current legislation.


Contact the manufacturer for disposal instructions.

2.2 CLEANING AND MAINTENANCE



To preserve the system's integrity and keep the safety features, performance and reliability, which distinguish the assembly, unchanged over time, you must execute maintenance operations on a yearly basis in compliance with what is stated in the relative point at "annual check and maintenance of the appliance", in compliance with national, regional, or local standards in force.

2.3 **CONTROL PANEL**

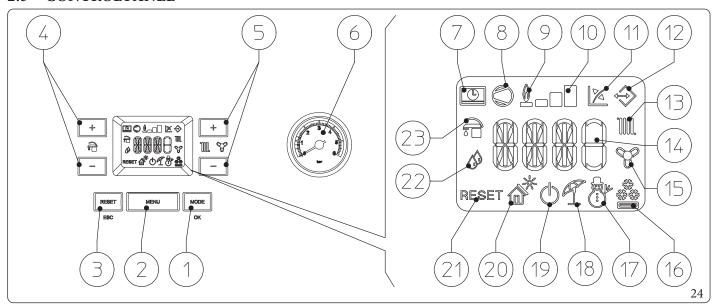

Key (Fig. 24):

- Operating mode (winter air conditioning summer -1 stand-by-off) and parameter confirm button
- 2 Menu selection button
- 3 Reset and exit menu button
- $Domestic hot water temperature selection \, buttons$ 4
- $Heating \, system \, temperature \, selection \, buttons$ 5
- Indoor Unit pressure gauge 6
- 7 Remote control connection (optional)
- 8 Outdoor Unit in operation
- 9 Not used on this model
- 10 Dispensed output level
- Operation with external temperature probe active (option-11

- 12 $Connection \, to \, other \, Immergas \, units$
- 13 $Central \, heating \, room \, mode \, function \, active$
- $\label{lem:temperature} \begin{picture}(100,0) \put(0,0){\line(1,0){100}} \put(0,0){\line(1,0){100$ 14
 - Room cooling mode operation active 15
- 16 Operation in cooling mode
- 17 Operation in winter mode
- 18 Operation in summer mode
- 19 Stand-by Mode
- 20 Not used on this model
- Locked Indoor Unit, it needs to be unlocked by pressing the 21 "RESET" button
- 22 $Operation \, in \, dehumidification \, mode$
- 23 DHW production phase operating mode active

MAGIS PRO 4/6/9 V2

2.4 SYSTEM USE




Before ignition, make sure the system is full of water, checking that the pressure gauge needle (6) points to a value between 1 and 1.2 bar and make sure that the chiller circuit has been filled as described in the Outdoor Unit instructions booklet.

- Press the button (1) until the display switches on. The system now goes back to the state prior to switch-off. (During ignition, the display shows in sequence: display segments all lit, parameter A11, parameter A13).
- If the Indoor Unit is in stand-by, press the button (1) again to activate it. If this is not the case, go to the next point.
- Then press the button (1) in sequence and set the system to summer \mathcal{L} , winter \mathcal{L} or air-conditioning \mathcal{L} and, if necessary, the deaeration timer.

Summer 🐬


In this mode, the system only works to produce domestic hot water, the temperature is set using the buttons (4) and the corresponding temperature is shown on the display by the indicator (14).

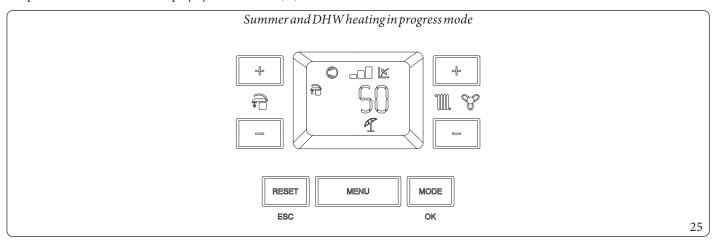

Winter 🖑

In this mode, the system works both to product domestic how water and room central heating.

The temperature of the DHW is always regulated via buttons (4), the central heating temperature is regulated via buttons (5) and the relative temperature is shown on the display by the indicator (14).

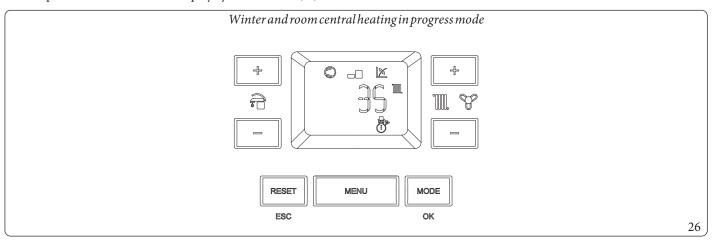


Air conditioning

In this mode, the system works both to produce DHW and to cool the room.

The temperature of the DHW is always regulated via buttons (4), the central heating temperature is regulated via buttons (5) and the relative temperature is shown on the display by the indicator (14).

From here on, the system works automatically. If there are no requests (room central heating, DHW production or cooling), the system goes into the "stand-by" function.

Each time the Outdoor Unit ignites, the display shows the corresponding symbol (8) with the corresponding power scale (10).

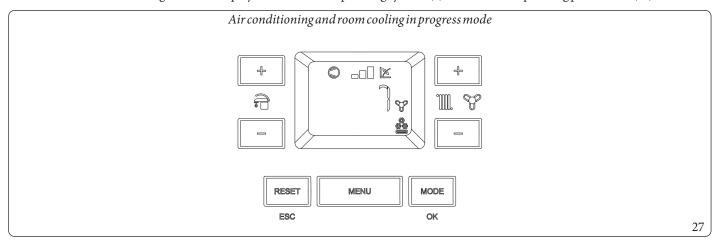

Operation with external probe 12/2

The system is set up to use the Outdoor Unit external probe or an optional external probe.

With the external probe connected, the system flow temperature for room heating and air conditioning is managed by the external probe based on the outdoor temperature measured (Parag. 1.16).


You can change the flow temperature by choosing the offset value in the specific user menu.

In this case, any settings made on the Indoor Unit will not affect system operation.

Dehumidify 🔗

If the system is coupled to a humidistat (optional) or a humidity temperature sensor or a remote zone panel (optional), you can manage the room humidity in summer air conditioning mode.

- If coupled to a humidistat, set the degree of humidity on the humidistatitself (see the instruction booklet).
- If coupled to a humidity temperature sensor, set the humidity percentage in the relative user menu.
- If coupled to a zone remote panel, set the humidity percentage in the relative user menu of the control panel or directly in the menu of the panel (see instruction booklet).

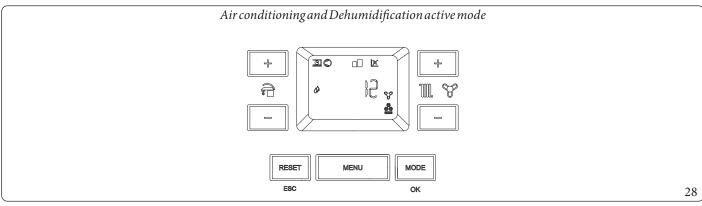



In central heating or cooling request mode, if the temperature of the water in the system meets the request, the system can work simply by activating the circulator pump.

MAGIS PRO 4/6/9 V2



"Stand-by" Mode

Press button (1) repeatedly until the symbol (1) appears. The system remains off from this moment, though the antifreeze, pump anti-block and 3-way function and signalling of any anomalies are guaranteed.



In these conditions the system must still be considered powered.

OFF mode

By holding the button (1) down for 8 seconds, the display switches-off and the Indoor Unit is off completely. In this mode, the safety functions are not guaranteed and the remote devices are disconnected.



In these conditions the Indoor Unit is considered still live even if there are no functions active.

"Automatic vent" mode

Every time the Indoor Unit is electrically powered, the system automatic vent function is activated (lasting 8 minutes). This function is displayed via a countdown signalled by the indicator (14).

During this period the DHW and CH functions are not active.

The "Automatic vent" function can be annulled by pressing the "Reset" button (3).

Display operation

The display lights up while the control panel is being used; after a set inactivity period, the brightness drops until only the active symbols are displayed. The lighting mode can be varied via parameter T08 in the P.C.B. programming menu.

System operating with Outdoor Unit disabled

You can disable the outdoor unit through a prearranged connection.

This status is signalled by the flashing of the symbol "Outdoor unit operation in progress" (8) and the flashing of the anomaly code "E194".



In this condition the requests are met by the integration electric resistances (optional).

2.5 FAULT AND ANOMALY SIGNALS

 $The Indoor \, Unit \, signals \, any \, anomalies \, by \, flashing \, a \, code \, on \, the \, display \, (14) \, according \, to \, the \, following \, table.$

Error Code	Anomalysignalled	Cause	Indoor Unit status / Solution			
E5	Delivery probe fault	The board detects an anomaly on the flow NTC probe.	The system does not start (1).			
E8	Maximum N° of resets	Number of allowed resets already performed.	Attention: the fault may be reset up to 5 times consecutively, after which the function in inhibited for at least one hour. One attempt is gained every hour for a maximum of 5 attempts. By switching the appliance on and off again, the 5 attempts are re-acquired.			
E 12	Storage tank probe anomaly (optional)	The board detects an anomaly on the storage tank probe.	The Indoor Unit cannot produce domestic hot water (1).			
E 15	Configuration error	If the board detects an anomaly or incongruity on the electric wiring, the appliance will not start.	If normal conditions are restored, the heat generator restarts without having to be reset (1).			
E24	Push button control panel anomaly	The board detects an anomaly on the pushbutton panel.	If normal conditions are restored, the system restarts without having to be reset (1).			
E 26	System flowmeter anomaly	The board detects an anomaly on the system flowmeter. Booster pump, if any, always working.	The system does not start (1). Make sure the booster pump (optional) only activates when requested.			
E 27	Circulation insufficient	This occurs if there is overheating in the Indoor Unit due to insufficient water circulating in the primary circuit; the causes can be: -low system circulation; check that no shut-off devices are closed on the central heating circuit and that the system is free of air (deaerated); -pump blocked; free the pump; -damaged flowmeter.	Check system circulation and flowmeter. Press the Reset button (1).			
E 32	Mixed zone 2 probe anomaly	$If the board detects an anomaly on the mixed zone 2 probe, \\ the system cannot work in the affected area.$	(1)			
E 33	Mixed zone 3 probe anomaly	$If the board detects an anomaly on the mixed zone 3 probe, \\ the system cannot work in the affected area.$	(1)			
(1) If the	(1) If the shutdown or fault persists, contact an authorised company (e.g. Authorised After-Sales Technical Assistance Centre).					



Error Code	Anomaly signalled	Cause	Indoor Unit status / Solution
E34	Safety thermostat intervention Mixed zone 2	During normal operation, if an anomaly causes excessive overheating of the flow temperature in the mixed zone 2, the unit indicates the malfunction.	The unit does not meet the zone central heating requirement. (1)
E35	Safety thermostat intervention Mixed zone 3	During normal operation, if an anomaly causes excessive overheating of the flow temperature in the mixed zone 3, the unit indicates the malfunction.	The unit does not meet the zone central heating requirement. (1)
E37	Low power supply voltage	This occurs when the power supply voltage is lower than the allowed limits for correct system operation.	If normal conditions are restored, the system restarts without having to be reset (1).
E46	Safety thermostat intervention zone 1	During normal operation, if an anomaly causes excessive overheating of the flow temperature in zone 1, the unit indicates the malfunction.	The unit does not meet the zone central heating requirement (1).
E50	External probe missing or faulty	In the event the external probe is not connected or is faulty, the anomaly is indicated.	Check the external probe connection. The system continues to operate with the external probe integrated in the Outdoor Unit (1). In case of replacement of the external probe, repeat the installation operations.
E 54	Central heating storage tank probe anomaly (optional)	The central heating storage tank has an out of range resistive value	Puffer mode is disabled. (1)
E55	Mixed zone 1 probe anomaly	If the board detects an anomaly on the mixed zone 1 probe, the system cannot work in the affected area.	(1)
E 121	Zone 1 device offline alarm	The device connected to zone 1 is offline.	(1)
E 122	Zone 2 device offline alarm	The device connected to zone 2 is offline.	(1)
E 123	Zone 3 device offline alarm	The device connected to zone 3 is offline.	(1)
E 125	Zone 1 room temperature probe anomaly	The zone 1 room probe has an out of range resistive value.	(1)
E126	Zone 2 room temperature probe anomaly	The zone 2 room probe has an out of range resistive value.	(1)

Error Code	Anomalysignalled	Cause	Indoor Unit status / Solution		
E 127	Zone 3 room temperature probe anomaly	The zone 3 room probe has an out of range resistive value.	(1)		
E129	Zone 1 humidity probe anomaly	Anomaly on the zone 1 humidity probe.	In addition to the humidity, the dew point is not calculated for the zone either (1). Zone humidity cannot be checked.		
E130	Zone 2 humidity probe anomaly	Anomaly on the zone 2 humidity probe.	In addition to the humidity, the dew point is not calculated for the zone either (1). Zone humidity cannot be checked.		
E 131	Zone 3 humidity probe anomaly	Anomaly on the zone 3 humidity probe.	In addition to the humidity, the dew point is not calculated for the zone either (1). Zone humidity cannot be checked.		
E 138	Screed heater in progress	Screed heater function in progress.	(1).		
E 139	De-aeration in progress	Vent function in progress.	No demand can be made until the end of the function in progress (1).		
E 142	Dominus offline alarm	Communication with Dominus is offline.	(1)		
E 177	DHW maximum time block	Domestic hot water production is not met within the pre-established time (see parameter P014).	The system continues to operate with non-optimal performance (1).		
E 178	Anti-Legionella cycle block not successful	The anti-Legionella cycle is run without success within the pre-established time (see parameter P013).	Press the Reset button (1).		
E 179	Liquid phase probe anomaly	The board detects an anomaly on the liquid phase NTC probe.	The system does not start (1).		
E250	Anti-legionella function enabled with DHW integration disabled	The anti-legionella function has been enabled but DHW integration is disabled.	If DHW integration is restored, the heat generator restarts without having to be reset (1).		
(1) If the	(1) If the shutdown or fault persists, contact an authorised company (e.g. Authorised After-Sales Technical Assistance Centre).				

Error Code	Anomalysignalled	Cause	Indoor Unit status / Solution	
E 182	Outdoor unit alarm	An anomaly appears on the Outdoor Unit.	The system does not start (1).	
E 183	Outdoor unit in test mode	A signal notifies that the condensing unit is in test mode.	During this time, room heating/air conditioning and domestic hot water production requirements cannot be met.	
E 184	Communication error with Outdoor Unit	A signal notifies an anomaly due to a communication prob- lem between the Indoor Unit and the Outdoor Unit.	Have the electrical connection between the units checked. The system does not start (1).	
E 187	Return probe anomaly	The board detects an anomaly on the return NTC probe.	The system does not start (1).	
E 188	Request with temperature out of range	A request is made with the outdoor temperature exceeding the operating limits (Parag. 1.19)	The system does not start (1). Wait for the outdoor unit to be restored within operating limits.	
E 189	Time out alarm with communication board	If communication between the printed circuit boards is lost, an anomaly is signalled.	The system does not start (1). Check communication between the P.C.B. and the interface board.	
E 190	Communication board alarm	An anomaly appears on the communication board.	The system does not start (1).	
E 193	Appliance in test mode	A signal notifies that the appliance is in test mode.	The system continues operating properly.	
E 194	Outdoor unit disabled	A signal notifies that the Outdoor Unit has been disabled through the appropriate input in the terminal board	The system continues operating properly.	
E 195	Liquid phase probe low temperature anomaly	Too low temperature is detected in the liquid phase.	Check that the cooling circuit is working properly (1).	
E 196	Flowhigh temperature block	Excessively high temperature is detected in the flow circuit of the heat pump.	Check the hydraulic circuit (1).	
E 197	Interface Board Configuration Error	An incorrect interface board configuration has been detected.	The system does not start (1).	
E 198	Cooling demand with heat pump not present	In case of use of cooling mode without heat pump.	The system does not start (1).	
E250	Anti-legionella function enabled with DHW integration disabled	The anti-legionella function has been enabled but DHW integration is disabled.	If DHW integration is restored, the heat generator restarts without having to be reset (1).	
(1) If the shutdown or fault persists, contact an authorised company (e.g. Authorised After-Sales Technical Assistance Centre).				

List of outdoor unit anomalies

 $If the Outdoor \ Unit is faulty, the error \ code is signalled on the control \ panel \ (Fig. 24) \ and \ on the interface \ board \ (Parag. "Interface board -7-segment \ display").$

On the control panel, the error is displayed with an "A" + error code.

On the interface board, the error is displayed with an "E" + error code, showing a sequence of two digits.

For example:

Error 101 is displayed as follows: E1 alternated with 01.

The following is the list of alarms as displayed on the control panel.

Error Code	Anomalysignalled	Indoor Unit status / Solution
		Check the communication cable to the Outdoor Unit. Check that
A101	Outdoor Unit communication error	the interface board works properly.
		(1)
A109	Communication error due to incorrect address of	Check the address on the interface board.
A109	interface board	(1)
		Check communication between the management board and inter-
A122	MODBUS communication error	face boards.
		(1)
A162	EEPROM error	Replace the main board of the Outdoor Unit
11102	DET ROMACTO	(1)
A177	Emergency error	(1)
A198	Error of thermal fuse terminal board (open)	(1)
		Check the communication cable to the Outdoor Unit.
A201	Communication error (failed coupling) between	Check that the interface board and main board of the Outdoor
71201	interface board and Outdoor Unit	Unitworkproperly
		(1)
		Check the communication cable to the Outdoor Unit.
A202	Communication error (failed coupling) between Indoor Unit and interface board	Check that the interface board and main board of the Outdoor
11202		Unitworkproperly
		(1)
		Check wiring of communication between the two boards.
A203	Communication error between Inverter and main	Replace the main board.
11203	board of the Outdoor Unit	Replace the inverter board
		(1)
		Check the position of the sensor.
A221	OutdoorUnitairtomporaturasansararrar	Check the relative wiring
A221	Outdoor Unit air temperature sensor error	Replacethesensor
		(1)
		Check the position of the sensor.
4.001		Check the relative wiring
A231	Condenser temperature sensor error	Replace the sensor
		(1)
		Check the position of the sensor.
A251	Discharge temperature sensor error	Checktherelative wiring
		Replace the sensor
(1) If the shu	tdown or fault persists, contact an authorised compa	any (e.g. Authorised After-Sales Technical Assistance Centre).
, ,110 0210		1 1 100



Error Code	Anomaly signalled	Indoor Unit status / Solution
		Check the position of the sensor.
A 220	Compressor sensor error (overload protection sensor)	Check the relative wiring
A320		Replace the sensor
		(1)
		Check the chiller cycle.
A403		Check the temperatures of the plate heat exchanger
		(1)
		Check the chiller cycle.
	D., 4. 4: f O., 4 I 4	Check the compressor connections.
A404	Protection of Outdoor Unit when in overload (during safety start-up, normal operating status)	Check the resistances between the different phases of the compressor
		(1)
A407	Compressor not working due to high pressure	Check the chiller cycle
A40/	Compressor not working due to nigh pressure	(1)
A416	The compressor discharge is overheated	(1)
A430	Outdoor Unit EEV operation error	(1)
A425	Power line failure error (three-phase model only)	Check the power connection of the Outdoor Unit (1)
A440	Central heating blocked (outdoor temperature beyond 35°C)	(1)
A441	Cooling blocked (outdoor temperature below 9°C)	(1)
A458	Error of Outdoor Unit fan no.1	(1)
		Check the chiller cycle.
		Check the compressor connections.
A461	Compressor start-up error (Inverter)	Check the resistances between the different phases of the compres-
		sor
		Check the inlet current.
A462	Inverter total current overload error	Check the refrigerant charge.
		Check normal operation of the fan.
A463	Compressor overheated sensor	Check the compressor sensor.
		(1) Check the compressor connections and its normal operation.
		Check the refrigerant charge.
		Check whether there are obstacles around the Outdoor Unit.
A464	Inverter IPM current overload error	
		Check whether the service valve is open.
		Check whether the installation pipes are mounted properly.
		nny (e.g. Authorised After-Sales Technical Assistance Centre).

Error Code	A nomaly signalled	Indoor Unit status / Solution
		Check the compressor connections and its normal operation.
A465	Compressor overload error	Check the resistances between the different phases of the compres-
A403	Compressor overload error	sor.
		(1)
		Check the input voltage.
A466	Low voltage error of DC circuit	Check the power connections.
		(1)
		Check the compressor connections.
A467	Compressor rotation error	Check the resistances between the different phases of the compres-
A407	Compressorrotationerror	sor.
		(1)
A468	Current sensor error (inverter)	Check the main board.
71400	Current sensor error (miver ter)	(1)
		Check the power connector of the inverter board.
A469	Voltage sensor error of DC circuit (inverter)	Check the connectors RY21 and R200 of the inverter board.
		(1)
A470	EEPROM reading/writing error of Outdoor Unit	Check the main board.
A4/0	EEPROM reading/writing error of Outdoor Unit	(1)
A471	EEPROM reading/writing error of Outdoor Unit	Check the main board.
A4/1	ELF ROWITEaunig/writingerror of Outdoor Chit	(1)
A474	Inverter temperature sensor error	Replace inverter board (1)
	Eman of Out do on Unit for mo 2 (who we muse out)	Check the wiring.
A475		Check that the fan is powered.
A4/3	Error of Outdoor Unit fan no.2 (where present)	Check the board fuses.
		(1)
		Check inductances.
A484	PFC overload	Replace inverter board.
		(1)
A485	Incoming current sensor error	Replace inverter board.
A403	Theolittig current sensor error	(1)
		Check temperature of inverter board. Switch the machine off. Wait
A500	IPM overheated	for the inverter to cool down. Switch the machine back on.
		(1)
		Check that the coolant is charged
		Check the liquid sensor of the Indoor Unit
A554	Gasleakerror	Check whether the service valve is open
		Check whether the installation pipes are mounted properly.
		(1)
		Check normal operation of the main board.
A590	Inverter board error	Replace the main board
		(1)
A601	Not present	(1)
(1) If the shu	tdown or fault persists, contact an authorised comp	any (e.g. Authorised After-Sales Technical Assistance Centre).

Error Code	Anomalysignalled	Indoor Unit status / Solution
A604	Notpresent	(1)
A653	Notpresent	(1)
A654	Notpresent	(1)
A899	Notpresent	(1)
A900	Not present	(1)
		Indoor Unit error.
A901	Notused	Check Indoor Unit.
		(1)
		Indoor Uniterror.
A902	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A903	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A904	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A906	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A911	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A912	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A916	Notused	Check Indoor Unit.
		(1)
		Indoor Unit error.
A919	Notused	Check Indoor Unit.
		(1)
(1) If the shu	tdown or fault persists, contact an authorise	d company (e.g. Authorised After-Sales Technical Assistance Centre).

2.6 PARAMETERS AND INFORMATION MENU

Pressing the "MENU" button (2), the display cyclically shows the "Data" menu, "User" menu and a menu protected by a "0000" access code with the first flashing digit reserved for a qualified technician.

To access an individual menu, once it appears, press the "OK" button (1).

To scroll through the menu items and to edit the values, use the heating temperature control buttons (5). Pressing the "OK" button (1) confirms the parameter, while pressing the "ESC" button (3) goes back to the previous menu or exits.

 $A\,minute\,after\,the\,last\,operation, the\,system\,automatically\,exits\,any\,of\,the\,menus.$



The menus of the control panel, found in the booklet, refer to rev. 8.0 of the P.C.B. firmware.

Data Menu.

Parameter ID	Description	Range
D03	Storage Tank Unit temperature (if paired with a Storage Tank Unit)	-10÷130°C
D04	Value calculated for system setting	5÷65°C
D05	Set value for the DHW set (if paired with a Storage Tank Unit)	10 ÷ 65 °C
D06	D 06 Outdoor temperature (if the Outdoor Unit external probe is connected or if the optional external probe is available)	
D08	System return water temperature	-10 ÷ 130 °C
D09	List of the last five anomalies (to scroll the list press "OK" (1)).	-
D10	Anomaly list reset. Once "D 10" is displayed, press "OK".	-
D 14	Circulator pump flow rate	0÷9999
D 17	Zone 1 flow temperature (if configured)	0÷99°C
D 20	System flow temperature	-10÷130°C
D22	DHW 3-way (DHW = domestic hot water, CH = central heating) (if paired with a Storage Tank Unit)	DHW-CH
D24	Chiller circuit liquid temperature	-10÷130°C
D25	Zone 2 flow temperature (if configured)	-10÷130°C
D26	Probe for primary solar storage (puffer)	-10 ÷ 130 °C
D28	System circulator pump instantaneous speed	0 ÷ 100 %
D31	DHW integration function (if paired with a Storage Tank Unit)	OFF-ON
D32	System integration function	OFF-ON
D34	Heat pump disabling	OFF-ON
D35	Solar system inlet	OFF-ON
D38	Delta T due to operation of system electrical resistance (if activated)	0÷99°C
D41	Relative humidity zone 1 (if zone 1 humidity sensor active)	0 ÷ 99 %
D42	Relative humidity zone 2 (if zone 2 humidity sensor active)	0 ÷ 99 %
D43	Zone 1 humidistat (if zone 1 humidistat active)	OFF-ON
D44	Zone 2 humidistat (if zone 2 humidistat active)	OFF-ON
D45	Dehumidifier zone 1	OFF-ON
D46	Dehumidifier zone 2	OFF - ON
D 47	Zone 1 circulator pump	OFF-ON
D48	Zone 2 circulator pump	OFF - ON
D49	Central heating/cooling system separation 3-way (CL = cooling, HT = heating)	CL-HT
D 51	Zone 1 remote panel	OFF-ON

Parameter ID	Description	Range	
D 52	Zone 2 remote panel	OFF-ON	
D53	System setting with remote connection in zone 1	5÷65°C	
D54	System setting with remote connection in zone 2	5÷65°C	
D 55	Zone 1 thermostat	OFF-ON	
D56	Zone 2 thermostat	OFF-ON	
D61	System model definition (MP = Magis Pro V2; MCI = Magis Combo V2; MCP = Magis Combo Plus V2)	MP - MCI - MCP	
D62	Communication with interface board	OFF-ON	
D63	Communication with other Immergas devices	OFF-ON	
D71	Outdoor Unit operating frequency	0 ÷ 150 Hz	
D72	Compressor temperature	-20÷200°C	
D73	Compressor discharge temperature	-20 ÷ 100 °C	
D74	Evaporator coil temperature	-20 ÷ 100 °C	
D75	Out door Unit compressor absorption (make sure the value reading refers to the inverter and the refore not a value read with an amperometric clamp).	0 ÷ 10 A	
D76	Outdoor Unit fan speed	0÷800rpm	
D77	Electronic expansion valve position	0÷2000	
D78	4-way side (CL = cooling, HT = heating)	HT/CL	
D79	Temperature detected by the external probe of the Outdoor Unit	- 55 ÷ + 45°C	
D80	Heat pump status (reserved for Authorised After-Sales Technical Assistance Centre)	-	
D91	P.C.B. software version	1÷99	
D97	Heat pump demand status (reserved to Authorised After-Sales Technical Assistance Centre)	0÷999	
D98	Thermal generator demand status (reserved for Authorised After-Sales Technical Assistance Centre)	0÷999	
D99	System status (reserved for Authorised After-Sales Technical Assistance Centre)	0÷999	
D101	Zone 3 flow temperature	1÷99	
D102	Zone 3 relative humidity	1÷99	
D103	Zone 3 humidistat	OFF-ON	
D104	Dehumidifier zone 3	OFF-ON	
D105	Zone 3 circulator pump	OFF - ON	
D106	Zone 3 remote panel	OFF - ON	
D107	Zone 3 setpoint	5 ÷ 55	
D108	Zone 3 thermostat	OFF-ON	
D120	Outdoor Unit main board firmware version (1/4)	1÷99	
D121	Outdoor Unit main board firmware version (2/4)	1÷99	
D122	Outdoor Unit main board firmware version (3/4).	1÷99	
D123	Outdoor Unit main board firmware version (4/4)	1÷99	
D124	Interface board firmware version (1/4)	1÷99	
D125	Interface board firmware version (2/4)	1÷99	

Parameter ID	Description	Range
D126	Interface board firmware version (3/4)	1÷99
D127	Interface board firmware version (4/4)	1÷99
D128	Outdoor Unit inverter board memory version (1/4)	1÷99
D129	Outdoor Unit inverter board memory version (2/4)	1÷99
D130	Outdoor Unit inverter board memory version (3/4)	1÷99
D131	Outdoor Unit inverter board memory version (4/4)	1÷99
D132	Outdoor Unit inverter board firmware version (1/4)	1÷99
D133	Outdoor Unit inverter board firmware version (2/4)	1÷99
D134	Outdoor Unit inverter board firmware version (3/4)	1÷99
D135	Outdoor Unit inverter board firmware version (4/4)	1÷99
D140	Internal clock	0÷23
D141	Internal clock	0 ÷ 59
D142	Day of the week	Mo-Tu-We-Th-Fr-Sa-Su
D143	Current day	1÷31
D144	Current month	1÷12
D145	Currentyear	0÷99

MAGIS PRO 4/6/9 V2

User Menu.

Parameter ID		Range	Default	Customised value	
U 01	Zone 2 heating flow set point in case of no thermal regulation (``R 01'' = OFF).		20÷65°C	25	
U 02	Zone 2 cooling flow set point in	case of no thermal regulation ("R 01" = OFF)	5÷25°C	20	
U 03	Zone 1 central heating offset	It is possible to correct the flow temperature with	-15÷+15°C	0	
U 04	Zone 2 central heating offset	respect to the adjustment curve of the external probe in central heating mode (Parag. 1.17, Offset value)	-15÷+15°C	0	
U 05	Zone 1 cooling offset	The flow temperature with respect to the adjust-	-15÷+15°C	0	
U06	Zone 2 cooling offset	ment curve of the external probe in cooling mode can be corrected (Parag. 1.17, Offset value)	-15÷+15°C	0	
U 07	Zone 1 humidity setting	The humidity temperature sensor (optional) de-	30 ÷ 70 %	50	
U08	Zone 2 humidity setting	fines room humidity in the corresponding area	30 ÷ 70 %	50	
U 11	Nightfunction	Activating the function allows you to reduce the compressor frequency during the outdoor unit operation in the time slot set in the U 12 and U 13 parameters. Make sure the additional power sources needed to meet potential requirements that may present themselves during active operation are available (e.g. additional resistances)	OFF-ON	OFF	
U 12	Night function enabling time		0 ÷ 23	0	
U 13	Night function disabling time		0 ÷ 23	0	
U 14	Zone 3 heating flow set point in	case of no thermal regulation ("R 01" = OFF).	20÷65°C	25	
U 15	Zone 3 cooling flow set point in	case of no thermal regulation ("R 01" = OFF)	5÷25°C	20	
U 16	Zone 3 central heating offset.	It is possible to correct the flow temperature with	-15 ÷ +15 °C	0	
U 17	Zone 3 cooling offset.	respect to the adjustment curve of the external probe in central heating mode (Parag. 1.17, Offset value)	-15 ÷ +15 °C	0	
U 18	Zone 3 humidity setting.	The humidity temperature sensor (optional) defines room humidity in the corresponding area	30 ÷ 70	50	

Parameter ID	Description		Range	Default	Customised value
U 21	Hour setting (internal clock)		0-23 hours	-	
U22	Minutes setting (internal clock)		0-59 minutes	-	
U23	Day of the week		Mo-Tu-We- Th-Fr-Sa-Su	-	
U24	Current day		1÷31	-	
U25	Current month		1 ÷ 12		
U26	Currentyear		00÷99		
U32	Start time of the DHW recirculation.		0÷23	0	
U33	Stop time of the DHW recirculation.		0÷23	0	
U50	Venting	In the case of new central heating systems and in particular mode for floor systems, it is very important that de-aeration is performed correctly. The function consists of the cyclic activation of the pump (100 s ON, 20 s OFF) and the 3-way valve (120 s D.H.W., 120 s heating system).	OFF-ON	OFF	
		The function lasts for 18 hours and it is possible to stop it by pressing "ESC" and setting the function on "OFF". Activation of the function is signalled by the countdown shown on the indicator (14).	ı		



 $The parameters \, referring \, to \, zone \, 2 \, can \, only \, be \, displayed \, if \, there \, is \, a \, zone \, 2 \, on \, the \, system \, and \, it \, is \, configured \, correctly.$



 $The parameters \, referring \, to \, zone \, 3 \, can \, only \, be \, displayed \, if there \, is \, a \, zone \, 3 \, on \, the \, system \, and \, it \, is \, configured \, correctly.$

2.7 INDOORUNITSHUTDOWN

Switch off the Indoor Unit, putting it in "OFF" mode. Switch off the omni-polar switch outside the unit. Never leave the unit powered if left unused for prolonged periods.

2.8 RESTORE CENTRAL HEATING SYSTEM PRESSURE

- 1. Periodically check the system water pressure (the Indoor Unit's pressure gauge hand must indicate a value between 1 and 1.2 bar).
- $2. \quad If the pressure is less than 1 bar (with the system cold), you must restore it using the cock located at the bottom of the unit (Parag. 1.25).$
- 3. Close the valve after the operation.
- 4. If the pressure reaches values around 3 bar, there is a risk of tripping the safety valve (in this case, remove water from a radiator air vent valve until a pressure of 1 bar is achieved, or ask for assistance from professionally qualified personnel).
- 5. In the event of frequent pressure drops, contact qualified staff for assistance to eliminate the possible system leakage.

2.9 DRAININGTHESYSTEM

- 1. Ensure that the filling valve is closed.
- 2. Open the draining valve (Par.1.25).
- 3. Open all vent valves.
- 4. At the end, close the draning valve.
- 5. Close all previously opened vent valves.



If fluid containing glycol was added to the system circuit, make sure it is recovered and disposed of in accordance with standard EN 1717.

2.10 ANTIFREEZEPROTECTION

 $All\,information\,on\,antifreeze\,protection\,can\,be\,found\,in\,the\,Installer\,section\,at\,Parag,\,1.6.$

2.11 PROLONGED INACTIVITY

In case of prolonged inactivity (e.g. second home), we recommend:

- 1. to switch off the power supply;
- 2. Completely empty the CH circuit (to be avoided if glycol is present in the system) and the DHW circuit (if combined with a storage tank) of the Indoor Unit. In systems that are drained frequently, filling must be carried out with suitably treated water to eliminate hardness that can cause lime-scale.

2.12 CLEANING THE CASE

1. Use damp cloths and neutral detergent to clean the Indoor Unit casing.



Never use abrasive or powder detergents.

2.13 PERMANENT SHUTDOWN

Should the system be shut down permanently, have professional staff carry out the procedures, making sure that the electrical and water supply lines have been previously shut off.

2.14 USE OF THE REMOTE ZONE PANEL (OPTIONAL)

For general operation of the zone remote panel, see the relative instruction booklet.

The settings on the remote panel, such as operating mode, flow setting, humidity setting etc. are synchronised with those on the machine control panel.

Moreover, the control panel is not disabled if there is any zone remote panel.

Using a Zone Remote Panel with firmware version 2.00 or higher, it is possible to:

- edit the DHW setpoint;
- read the domestic hot water temperature;
- remotely reset the errors that appear;
- set the flow setpoint and offset from the Zone Setpoint Menu;
- set Eco, Comfort and manual DHW (Domestic hot water) setpoint from the DHW (Domestic hot water) Setpoint Menu;
- enable and configure the DHW time slots;
- read information on flow and return of the enabled generators;
- set the minimum central heating setpoint.

The parameters that are not managed by the appliance will be displayed on the Zone Remote Panel with the symbol "--".



INSTRUCTIONS FOR MAINTENANCE AND INITIAL CHECK

GENERAL RECOMMENDATIONS



Operators who install and service the appliance must wear the suitable personal



protective equipment (PPE) required by applicable law.
The list of possible PPE is not all-comprehensive as it is indicated and chosen by the Employer of the authorised company (installer or maintenance).



Before carrying out any maintenance work, make sure that:



- you have disconnected the power to the appliance;



- you have discharged the pressure from the system and domestic hot water circuit.



Supply of spare parts

The device's warranty shall be rendered null and void if unapproved or unsuitable parts are used for maintenance or repairs. These will also compromise the product's compliance, and the said product may no longer be valid and fail to meet the current regulations. In regard to the above, only use original Immergas spare parts when replacing components.



If additional documentation needs to be consulted for extraordinary maintenance, contact the Authorised After-Sales Service.



The appliance operates with R32 refrigerant gas.



This gas is ODOURLESS. Pay the utmost attention

Strictly follow the instruction handbook of the Outdoor Unit before installation and any type of operation on the chiller line.



R32 refrigerant gas belongs to the low flammability refrigerant category: class A2L according to standard ISO 817. It guarantees high performance with low environmental impact. The new gas reduces the potential environmental impact by one third compared to R410A, having less effect on global warning (GWP 675).



3.2 INITIAL CHECK

To commission the package, you must:

- check connection to a 230V-50Hz power mains, correct L-N polarity and the earthing connection;
- make sure the central heating system is filled with water and the Indoor Unit pressure gauge reads a pressure of 1-1.2 bar;
- make sure the chiller circuit has been filled according to what is described in the Outdoor Unit instructions booklet;
- check the activation of the main switch located upstream of the Indoor Unit;
- ensure activation of all adjustment devices;
- check the production of DHW (if paired with a storage tank unit);
- check the tightness of the hydraulic circuits;



Even if just one single safety check provides a negative result, do not commission the system.

3.3 YEARLY APPLIANCE CHECK AND MAINTENANCE



The following checks and maintenance should be performed once a year to ensure operation, safety and efficiency of the appliance over time.

- Check for water leaks or oxidation from/on the fittings.
- Check, after discharging the system pressure and bringing it to zero (read on Indoor Unit pressure gauge), that the expansion vessel charge is at 1.0 bar.
- Check that the system static pressure (with system cold and after refilling the system by means of the filling valve) is between 1 and 1.2 bar.
- Visually check that the safety and control devices have not been tampered with and/or short-circuited.
- Check the condition and integrity of the electrical system and in particular:
- the power supply wires must be housed in the cable glands;
- there must be no traces of blackening or burning.
- Check correct lighting and operation.
- Check correct operation of control and adjustment devices and in particular:
- system regulation probes intervention.
- Check chiller line connections.
- Check mesh filter on system return.
- Check the correct flow rate on plate heat exchanger.
- Check the integrity of the internal insulation.



In addition to yearly maintenance, one must also check the energy efficiency of the thermal system, with frequency and procedures that comply with the indications of the technical regulations in force.

MAGIS PRO 4/6/9 V2



3.4 COILMAINTENANCE



We recommend regularly inspecting the finned air coils to check the level of fouling.


 $This \, depends \, on \, the \, environment \, where \, the \, unit \, is \, in stalled.$

The level of fouling will be worse in urban and industrial sites, as well as near trees that lose their leaves.

There are two maintenance levels to clean the coils:

- If the air heat exchangers are encrusted, clean them gently with a brush in a vertical direction.
- Turn off the fans before working on the air heat exchangers.
- To perform this type of intervention, stop the unit only if the maintenance considerations allow it.
- Perfectly clean air heat exchangers ensure an optimal operation of the unit. When the air heat exchangers begin to encrust, they must be cleaned. The cleaning frequency depends on the season and location of the unit (ventilated, wooded, dusty, etc.).
- $Do \, not \, use \, pressur is ed \, water \, without \, a \, large \, diffuser. \, Do \, not \, use \, high-pressure \, cleaners \, for \, Cu/Cu \, and \, Cu/Al \, air \, coils.$
- Concentrated and/or rotating water jets are strictly prohibited. Never use fluid with a temperature above 45°C to clean the air heat exchangers.
- Proper and frequent cleaning (approx. every three months) prevents 2/3 of corrosion problems. Clean the air coil using suitable products.

HYDRAULIC DIAGRAM 3.5

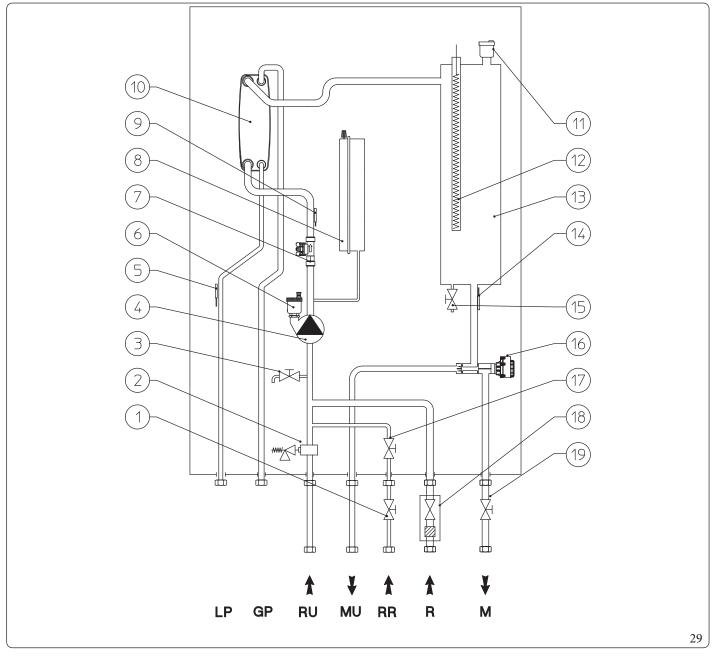


Kon	(Fig	29).

Key (Fi	g. 29):	14	-	Flowprobe
1	-	System shut-off valve	15	-	System draining valve
2	-	3 bar safety valve	16	-	3-way valve (motorised)
3	-	System draining valve	17	-	System filling valve
4	-	Pump	18	-	System shut-off fitting with filter
5	-	Liquid phase detection probe	19	-	System shut-off valve
6	-	Airventvalve			
7	-	System flow-meter	LP	-	Chiller line - liquid phase
8	-	System expansion vessel	GP	-	Chiller line - gaseous phase
9	-	Return probe	RU	-	Storage tank unit return
10	-	Plate heat exchanger	MU	-	Storage tank unit flow
11	-	Airventvalve	RR	-	System filling
12	-	Central heating integrated electric resistance (optional)	R	-	System return
13	-	Central heating manifold	M	-	Systemflow



3.6 WIRING DIAGRAMS

General connection wiring diagram

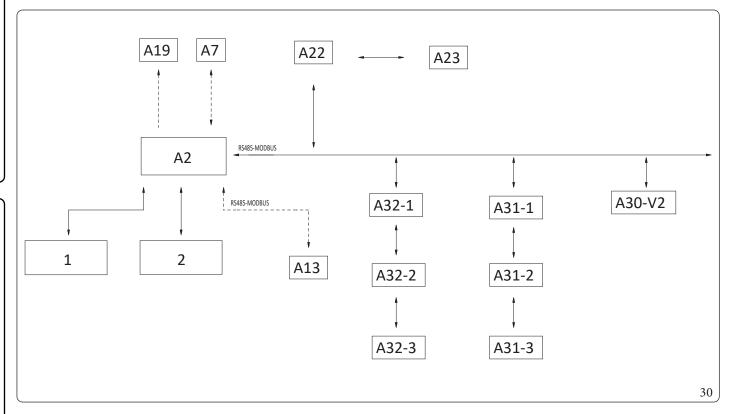

Key (Fig. 30):

V2 - P.C.B. adjustment

 $1 \qquad - \quad Low \, voltage \, electrical \, connection \, terminals \, (230 \, Vac)$

2 - Very low safety voltage electrical connection terminals

A7 - Three-relay board (optional) A13 - System manager (optional)

A31-1 - Modbushumidity probezone 1 (optional)

A31-2 - Modbus humidity probe zone 2 (optional)

A32-3 - Zone 3 remote control (optional)

A31-3 - Modbus humidity probe zone 3 (optional)

A19 - Two-relay board (optional)

A22 - Condensing unit interface board


A23 - Outdoor Unit


A30-V2 - Dominus V2 (optional)

A32-1 - Zone 1 remote control (optional)

A32-2 - Zone 2 remote control (optional)

A32-3 - Zone 3 remote control (optional)

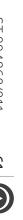

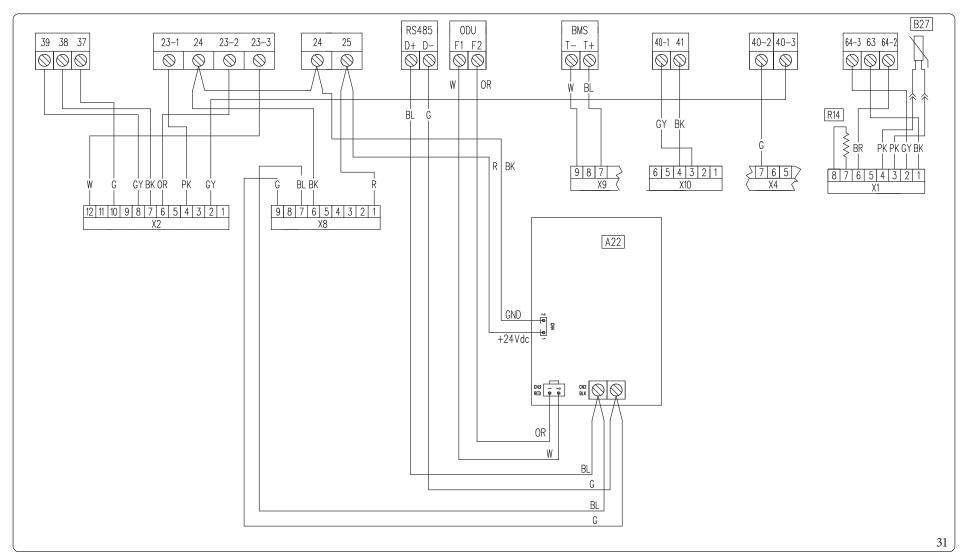

Key (Fig. 31):

A22Condensing unit interface board

Liquid phase probe Configuration resistance Colour code key (Fig. 31):

BKBlack Blue Brown

GGreen GYGrey

Yellow/Green

Orange OR

Purple Pink

Red

White


Yellow

White/Black W/BK -



MAGIS PRO 4/6/9 V2

ST.004860/011

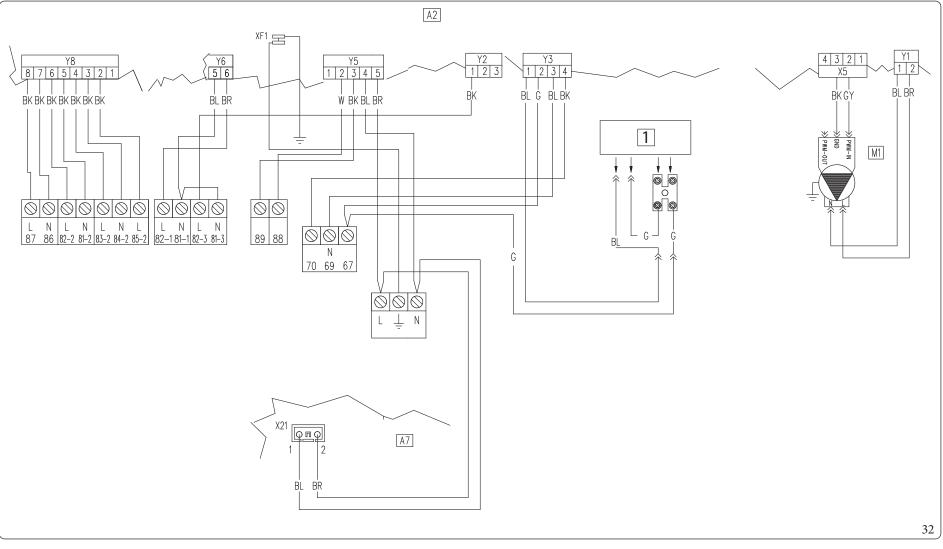

Key (Fig. 32):

Internal integrated resistance kit for 3 kW system

A2P.C.B.

Relay board *A7*

Heat pump circulator pump M1

Colour code key (Fig. 32):

- Black BK

Blue

Brown Green GYGrey

Yellow/Green

Orange OR

Purple


Pink

Red White

Yellow

White/Black W/BK -

Probe connection wiring diagram

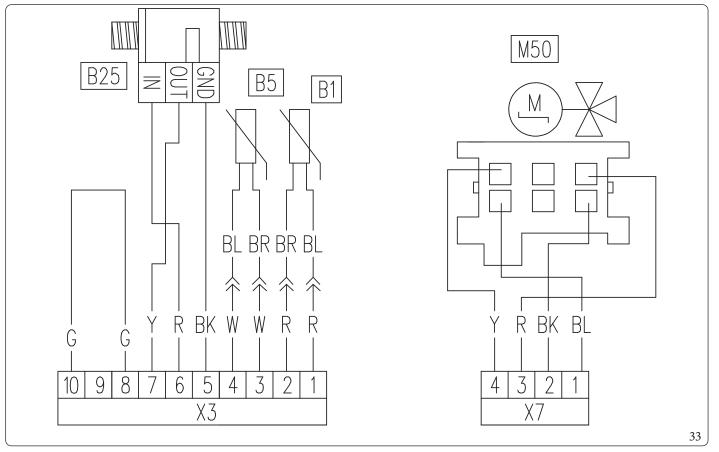


Key (Fig. 33):

B1 - Heat pump flow probe
 B5 - Heat pump return probe
 B25 - System flow meter
 M50 - DHW priority 3-way valve

Colour code key (Fig. 33):

BKBlack BLBlue BRBrown GGreenGYGrey G/YYellow/Green Orange ORPurplePinkPKRed RW White Y Yellow W/BK -White/Black

Relay board connection wiring diagram (optional)

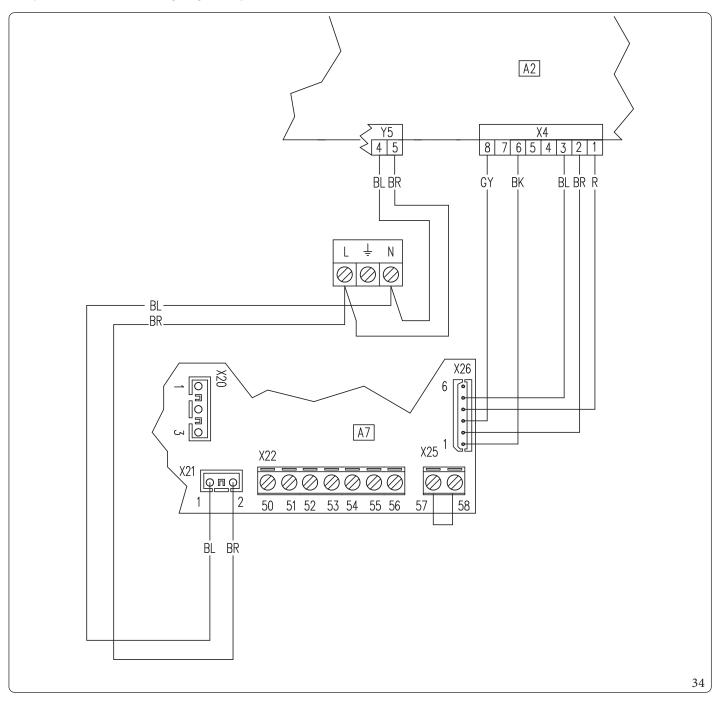

Key (Fig. 34):

A2 - P.C.B.

A7 - Three-relay board (optional)

Colour code key (Fig. 34):

BK - Black

BL - Blue BR - Brown

G - Green

GY - Grey

G/Y - Yellow/Green

OR - Orange

P - Purple PK - Pink

PK - Pink


R - Red W - White

Y - Yellow

W/BK - White/Black

DHW recirculation function relay board connection practical wiring diagram

All relays can be configured as DHW recirculation function, the diagram shows the connection on relay 2. In the event relay 2 is used, it is $necessary\ to\ jumper\ pins\ 57\ and\ 58\ of\ connector\ X25\ positioned\ on\ the\ relay\ board.$

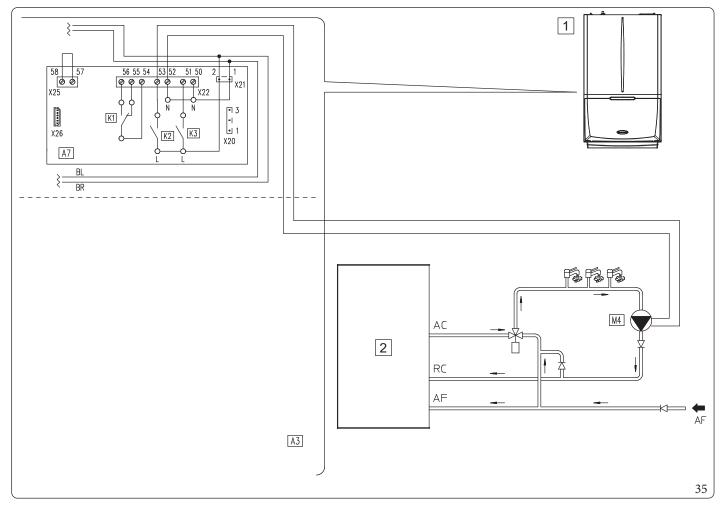

Key (Fig. 35):

Appliance 1

2 Storage tank/Cylinder A3Integrated P.C.B. A7Three-relay board

Domestic hot water recirculation pump M4-1

Configurable relay K1Configurable relay *K*2 *K*3 Configurable relay

The diagram (Fig. 35) represents the connection on relay K2.




For more details, see Parag. 3.12.



Wiring diagram with active system phase and generical arm

 $All K1, K2 and K3 \, relays \, can \, be \, configured \, as \, an \, active \, system \, phase \, and \, generic \, alarm; the \, diagram \, represents the \, connection \, on \, relay \, 2.$ In the event this relay is used, it is necessary to jumper pins 57 and 58 of connector X25 positioned on the relay board.

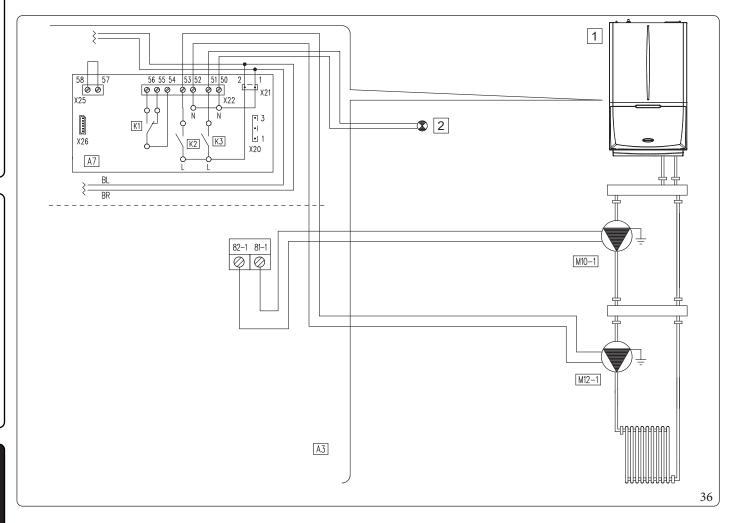

Key (Fig. 36):

1 - Genericalarm signaller

2 Appliance A3Integrated P.C.B. A7Three-relay board M10-1 -Zone 1 circulator pump Zone 1 booster pump M12-1 -K1Configurable relay K2Configurable relay *K*3 Configurable relay


 $The \, diagram \, (Fig. \, 36) \, shows \, the \, connection \, on \, relay \, K2 \, and \, generic \, alarm \, signalling \, on \, relay \, K3.$



For more details, see Parag. 3.12.

Wiring diagram with puffer mode active

All relays can be configured as active puffer mode, the diagram shows the connection on relay 2. In the event this relay is used, it is neces $sary \, to \, jumper \, pins \, 57 \, and \, 58 \, of \, connector \, X25 \, positioned \, on \, the \, relay \, board.$ $Active \, puffer \, mode \, excludes \, activation \, of the \, third \, zone \, mode.$

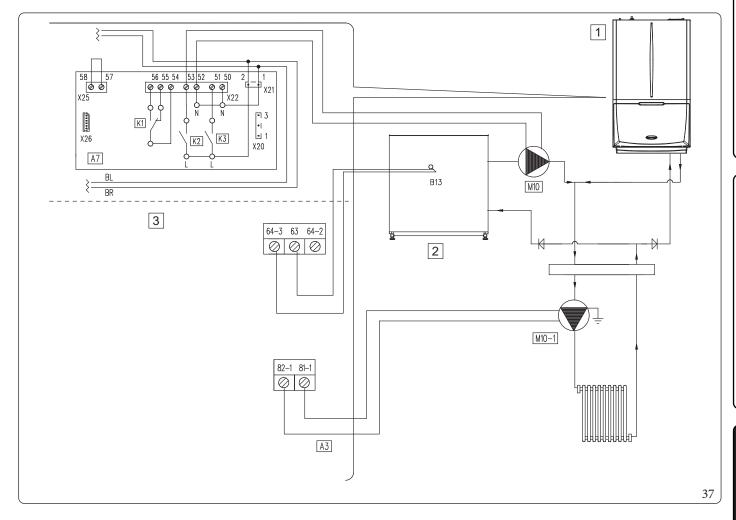

Key (Fig. 37):

Appliance 1 2 Puffer

3 230 Vacvauxiliaries A3Integrated P.C.B. Three-relay board A7B13 Centralheatingprobe M10Puffer circulator M10-1 -Zone 1 circulator pump *K*1

Configurable relay Configurable relay *K*2 *K*3 Configurable relay

 $The \, diagram \, (Fig. \, 37) \, represents \, the \, connection \, on \, relay \, K2.$



For more details, see Parag. 3.14.




Wiring diagram with 3 zones

It is possible to configure the device to manage a third mixed zone.

 $Relays\,can\,be\,used\,to\,control\,the\,Zone\,3\,mixing\,valve.$

In particular, relay 3 can be used for opening the valve and relay 2 for closing it.

In addition, relay 1 can be used for the possible activation of a zone 3 dehumidification request.

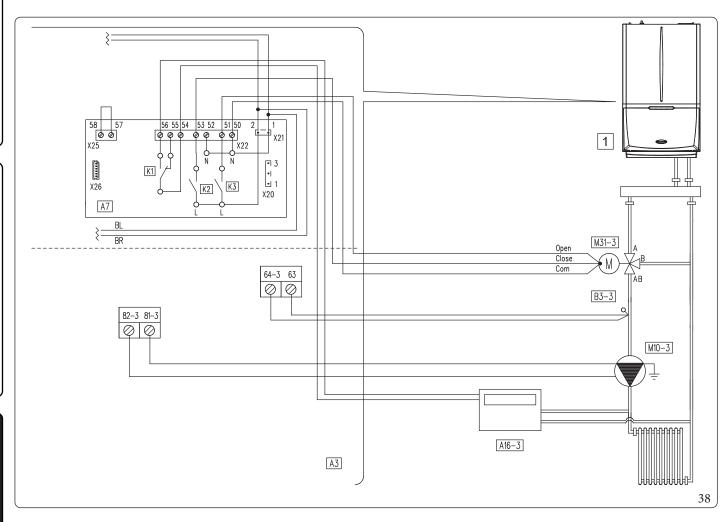

Key (Fig. 38):

*K*3


1 **Appliance** A3Integrated P.C.B. A7Integrated P.C.B. A16-3 -Dehumidifier zone 3 B3-3 -Zone 3 flow probeZone 3 circulator pump M10-3 -M31-3 - $Zone\,3\,mixing\,valve$ *K*1 Configurable relay Configurable relay *K*2

 $It is \, necessary \, to \, insert \, a jumper \, on \, connector \, X25 \, (Fig. \, 38).$

Relay K1: Dehumidification request Relay K2: Mixing valve closure

Configurable relay

Relay K3: Mixing valve opening

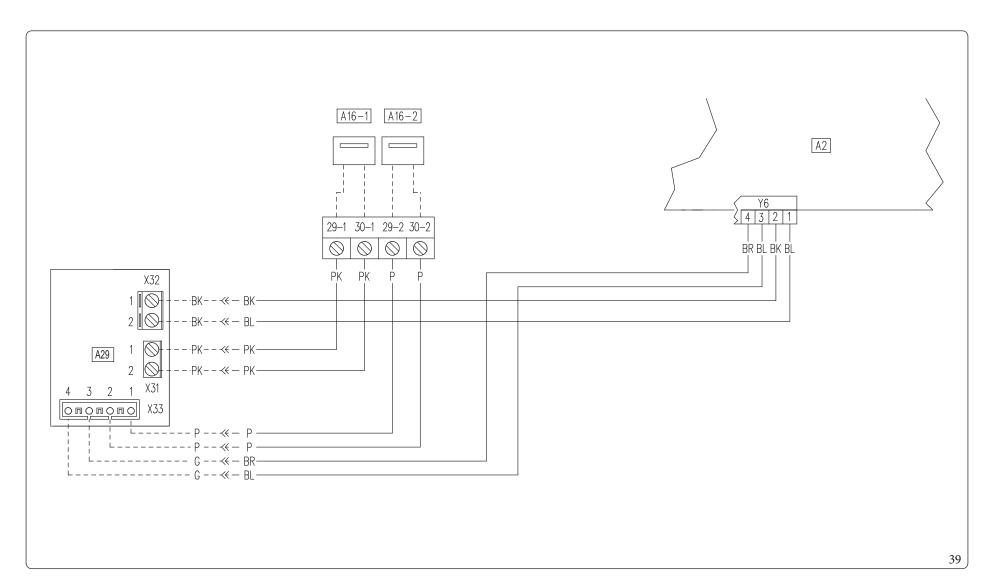

Key (Fig. 39):

A2 - P.C.B.

Zone 1 dehumidifier (optional) Zone 2 dehumidifier (optional) Two-relay board (optional)

Colour code key (Fig. 39):

- Black Blue Brown Green Grey


G/Y - Yellow/Green

- Orange

Purple PinkRed White Yellow W/BK - White/Black




P.C.B.

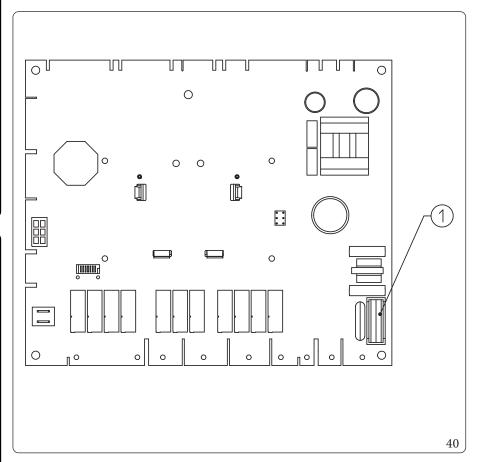

Key (Fig. 40): 1 - F3.15A H250V fuse


Interface board - setting switch

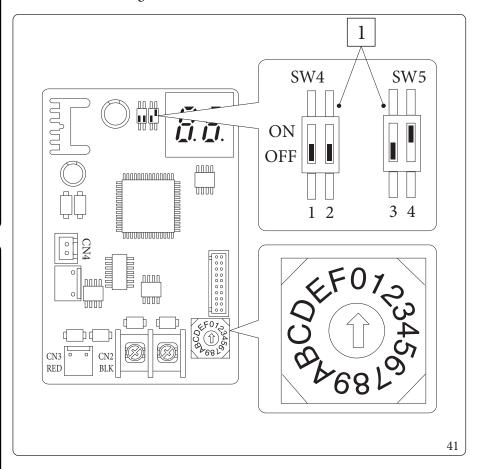

Key (Fig. 41):

- Factory setting: do not change

Interface board - indicator LED

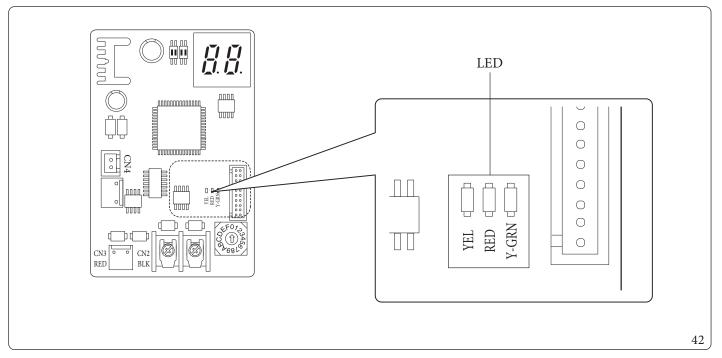

Key (Fig. 42):

 $Red \, LED \, flashing = Communication \, between \, interface \, board \, and \, P.C.B. \, valid \, \\ Green \, LED \, flashing = Communication \, between \, interface \, board \, and \, Outdoor \, Unit \, valid \, \\ Yellow \, LED = Not \, Used$

Interface board - 7-segment display

During normal operation, the display shows "A0" for 1 second, followed by "30" for 1 second:

	SEGMENTS		
VALID COMMUNICATION			

 $In case of an error of the Outdoor \ Unit, a sequence of two \ digits at a time is \ displayed: "E" plus Outdoor \ Uniterror \ code:$


ERROR CODES	SEGMENTS
E101	

3.7 SYSTEM FILTER

The Indoor Unit has a filter on the system return fitting to keep the system in good operating conditions.

Periodically and when necessary, the filter can be cleaned as described below (Fig. 43).

Close the tap (3) with a size 12 spanner and tap (5) by hand, drain out the water contained in the Indoor Unit using the draining valve (4). Open the cap (1) and clean the filter (2).

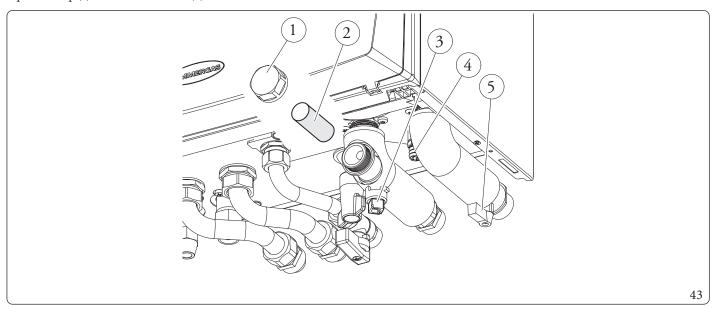

3.8 TROUBLESHOOTING



 $Main tenance\ operations\ must\ be\ carried\ out\ by\ an\ authorised\ company\ (e.g.\ Authorised\ After-Sales\ Technical\ Assistance\ Centre).$

Noise due to air in the system.

Check opening of the hood of the special air vent valve (Fig. 23).

 $Make sure the system \, pressure \, and \, expansion \, tank \, factory-set \, pressure \, values \, are \, within \, the \, set \, limits.$

 $The factory-set pressure \ values of the \ expansion \ vessel \ must be \ 1.0 \ bar, the \ value \ of \ system \ pressure \ must be \ between \ 1 \ and \ 1.2 \ bar.$

Red pump LED

There can be three possible causes for this anomaly:

- Low power supply voltage. About 1-2 seconds after the voltage drops below 145 Vac, the LED switches from green to red and the pump stops. Wait for the supply voltage to raise above 155 Vac approximately: the pump starts back up and the LED goes back to green with a delay of about one second (Note: naturally the flow rate decreases with the decrease of the supply voltage).
- **Rotor locked.** Powering the pump with the rotor seized, after about 4 seconds the LED switches from green to red. Carefully act on the screw in the middle of the head to manually release the crankshaft; circulation starts up immediately after the rotor is released and the LED switches from red to green after about 10 seconds.
- **Elettrical fault.** Pump, wiring or P.C.B. fault. Check the indicated components.

3.9 PARAMETERS AND INFORMATION MENU

 $The \, water \, heater \, is \, set \, up \, for \, possible \, programming \, of \, several \, operation \, parameters. \, By \, modifying \, these \, parameters \, as \, described \, below, \, the \, system \, can \, be \, adapted \, according \, to \, specific \, needs.$

To access the programming phase, press the "MENU" button (2) until the "Password" menu appears. Enter the password, modify the numerical values using the "central heating regulation" buttons (5) and confirm with the "OK" button (1).

Once you have accessed programming, you can scroll through the parameters in the "System" menu.

Using the ``central heating regulation" button, select the parameter and edit the value.

To save the parameter change, press the "OK" button.

 $Wait for 1\,minute\,or\,press\,the\,``ESC"\,button\,(3)\,to\,exit\,programming\,mode.$

Id Parameter	Parameter	Description	Range	Default	Value customized
A 03	Minimum speed	Defines the minimum operating speed of the system circulator pump	0 ÷ 100 %	55	
A 04	Maximum fixed speed	Defines the maximum operating speed of the system circulator pump	45 ÷ 100 %	100	
A05	Circulator mode	0=Fixed (See Parag. "Circulation pump") 5-25 K = ΔT constant (See Parag. "Circulation pump")	0-25°C	0	
A 11*	Outdoor Unit model	Establishes the Outdoor Unit model paired with the Indoor Unit. If set to OFF, only the integrated generators are activated.	OFF-4-6-9	9	
A 12	System vent	Enables the automatic vent function. This function activates as soon as the unit is powered.	OFF - ON	ON	
A 13	Number of zones	Defines the number of zones in the heating system	1-3	1	
A 14	Zone 2 max temperature	Defines the maximum temperature acceptable by zone 2	20÷80°C	45	
A 15	Zone 3 max temperature	Defines the maximum temperature acceptable by zone 3	20÷80°C	45	
A 16	Zone 1 humidity sensor	Defines the type of control on zone 1 humidity	SE = Humidity temp. Sensor ST = Humidistat RP - Remote panel	ST	
A 17	Zone 2 humidity sensor	Defines the type of control on zone 2 humidity	SE = Humidity temp. Sensor ST = Humidistat RP - Remote panel	ST	



* Parameter A11=OFF, may only be used temporarily and only by an authorised technician; failure to do so will invalidate the warranty.



Id Parameter	Parameter	Description	Range	Default	Value customized
A 20	System electrical resistance size	Defines the power size of the installed system electrical resistance	10 - 160 (tenths of a kW)	30	
A 21	BMS communi- cation address	Defines the communication protocol between the Indoor Unit and the Outdoor Unit	1 ÷ 247	11	
A 22	BMS communication setting	OFF = BMS communication protocol on 485; use if connected to optional Immergas devices. 485 = Do not use	OFF-485	OFF	
A 23	Zone 3 humidity sensor	Defines the type of control on zone 3 humidity	SE= Humidity temp. Sensor ST= Humidistat RP-Remote panel	ST	
A 24	Zone 1 max temperature	Defines the maximum temperature acceptable by zone 1	20÷80°C	55	
A 25	Dew point enabling	In the presence of a remote device, enables calculation of the dew point	OFF-ON	ON	
A 27	Zone 1 flow probe	It allows enabling the zone 1 flow probe	OAT = Use of external probe on the Indoor Unit ZN1 = Use of zone 1 flow probe	OAT	
A 30	Dominus enabling	Allows you to enable the Dominus remote device	OFF-ON	OFF	
A31	Zone 1 room thermostat	Defines the temperature control in zone 1	RT = Room thermostat RP - Remote panel RPT = Remote panel with Thermostat	RT	

Id Parameter	Parameter	Description	Range	Default	Value customized
A 32	Zone 2 room thermostat	Defines the temperature control in zone 2	RT = Room thermostat RP - Remote panel RPT = Remote panel with Thermostat	RT	
A 33	Zone 3 room thermostat	Defines the temperature control in zone 3	RT = Room thermostat RP - Remote panel RPT = Remote panel with Thermostat	RT	
A 35	Room probe modulation	In the presence of Zone Remote panel, configured in RP, enables modulation with room probe	OFF-ON	ON	
A 39	Heating/ Cooling contact	Enables the Heating/Cooling function by means of a dry contact	OFF-ON	OFF	
A 41	Zone 1 heating/ cooling enable	Allows to determine heating, cooling mode or both of zone 1	HT/CL/H -C	H-C	
A 42	Zone 2 heating / cooling enable	Allows to determine heating, cooling mode or both of zone 2	HT/CL/H -C	H-C	
A 43	Zone 3 heating / cooling enable	Allows to determine heating, cooling mode or both of zone 3	HT/CL/H -C	H-C	
A 51	Dehumidifier flow setpoint zone 1	Setpoint used by the machine for dehumidification demand on zone 1 without cooling demands present	15÷25°C	20	
A 52	Dehumidifier flow setpoint zone 2	Setpoint used by the machine for dehumidification demand on zone 2 without cooling demands present	15÷25°C	20	
A 53	Dehumidifier flow setpoint zone 3	Setpoint used by the machine for dehumidification demand on zone 3 without cooling demands present	15÷25°C	20	
A 99	Factory parameter reset	Resets to default settings	OFF - ON	OFF	

Id Parameter	Parameter	Description	Range	Default	Value customized
P03	Relay 1 (optional)	See paragraph 1.23.	0 ÷ 4	0	
P04	Relay 2 (optional)	See paragraph 1.23.	0 ÷ 4	0	
P 05	Relay 3 (optional)	See paragraph 1.23.	0 ÷ 4	0	
P 07	External probe correction	If the reading of the external probe is not accurate, it is possible to correct it in order to compensate any environmental factors.	-9÷9K	0	
P 11	Gen. DHW setpoint offset	The DHW flow setpoint of the generator is calculated by adding P11 to the DHW setpoint	2÷30°C	10	
P12	DHW electric resistance tripping offset	Call an Authorised After-Sales Technical Assistance Centre	5÷50°C	10	
P 13	T max anti-Le- gionella	Maximum time to perform anti-Legionella function	1-24 hours	3	
P 14	TmaxDHW	Maximum time to perform DHW function	1-24 hours	5	
P 15	Anti-Legionella function enable	Enable running of anti-Legionella function	OFF-ON	OFF	
P 16	Anti-Legionella starttime	Allows to set when anti-Legionella function starts	0-23	2	
P 17	Anti-Legionella activation day	Allows to set the weekday on which to activate the anti-Legionella function. You may even activate the function continuously every day.	Mo-Tu-We- Th-Fr-Sa-Su	Мо	
P21	Activation time	Temperature setpoint - Activation time correction	0-120 minutes	20	
P 22	Increasetime	Temperature setpoint - Increment time correction	0-20 minutes	5	
P 23	Heat setpoint correction	Allows to correct the heating mode demand setpoint in presence of dispersions or system decoupling circuits	0 ÷ 10°C	0	
P24	Cool setpoint correction	Allows to correct the cooling mode demand setpoint in presence of dispersions or system decoupling circuits	0÷10°C	0	

Id Parameter	Parameter	Description	Range	Default	Value customized
T 02	D.H.W. thermostat	Establishes the unit ignition and switch-off mode in DHW mode. It is enabled when the water in the storage tank goes below the DHW set value and is disabled when the temperature exceeds the DHW set value.	0÷20°C	4	
T05	Ignitionstimer	The Indoor Unit has an electronic timer that controls restarting the compressor of the Outdoor Unit.	0 - 10 minutes	3	
Т07	Delay request from TA	The system is set to switch on immediately after a request for room air conditioning. For special systems (e.g. zone systems with motorised valves, etc.), it may be necessary to delay ignition.	0-240 seconds (10 sec step)	0	
Т08	Displaylighting	Establishes the display lighting mode. AU: the display lights up during use and lowers after 15 seconds of inactivity. In the event of an anomaly, the display flashes. OFF: the display lighting is always off. ON: the display lighting is always on.	AU-OFF -ON	AU	
Т09	Display	Establishes what the indicator displays 14 (Fig. 14). "Summer" mode: ON: active circulator, this displays the flow temperature, with circulator off the indicator is off OFF: the indicator is always off "Winter" and "cooling" mode: ON: circulator pump active displays the flow temperature, pump off displays the value set on the central heating selector. OFF: always displays the value set on the central heating selector	ON-OFF	ON	
T 21	Screed heating - days at minimum temperature	Defines the time spent at minimum operating temperature during the active function	0÷7days	3	
T22	Screed heating - ascent gradient	Defines the ascent gradient of the temperature	0÷30°C/day	30	
T23	Screed heating - days at maximum temperature	Defines the time spent at maximum operating temperature during the active function	0 ÷ 14 days	4	
T24	Screed heating - descent gradient	Defines the descent gradient of the temperature	0÷30°C/day	30	

Heat regul	ation menu.

Heat regulat Id					Value
Parameter	Parameter	Description	Range	Default	customized
R01	External probe	Defines if and which external probe is used to manage the system. OFF = no external probe used OU = external probe on Outdoor Unit IU = optional external probe connected to the Indoor Unit	OFF-OU-IU	OU	
R02	Outdoor temperature for max CH flow zone 1	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 1.	-15÷25°C	-5	
R03	Outdoor temperature for min CH flow zone 1	Establishes the outdoor temperature at which to have the minimum flow temperature of zone 1.	-15÷25°C	25	
R04	Zone 1 maximum central heating	Defines the maximum flow temperature in zone 1 room central heating mode	20÷65	45	
R05	Zone 1 minimum central heating	Defines the minimum flow temperature in zone 1 room central heating mode	20÷65	25	
R06	Outdoor temperature for max zone 2 CH flow mixed zone	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 2	-15÷25°C	-5	
R07	Outdoor temperature for min zone 2 CH flow mixed zone	Establishes the outdoor temperature at which to have the minimum flow temperature of zone 2	-15÷25°C	25	
R08	Zone 2 mixed zone maximum central heating	Defines the maximum flow temperature in zone 2 room central heating mode	20÷65	40	
R 09	Zone 2 mixed zone minimum central heating	Defines the minimum flow temperature in zone 2 room central heating mode	20÷65	25	
R 10	Zone 1 outdoor temperature for minimum cooling flow	Establishes the maximum outdoor temperature at which to have the minimum flow temperature in zone 1 cooling mode	20÷40	35	

Id Parameter	Parameter	Description	Range	Default	Value customized
R11	Outdoor temperature for Zone 1 maximum cooling flow	Establishes the minimum outdoor temperature at which to have the maximum flow temperature in zone 1 cooling mode	20÷40	25	
R12	Zone 1 minimum cooling	Defines the minimum flow temperature in zone 1 room cooling mode	5÷20	7	
R13	Zone 1 maximum cooling	Defines the maximum flow temperature in zone 1 room cooling mode	5 ÷ 25	12	
R 14	Outdoor temperature for zone 2 min cooling flow mixed zone	Establishes the outdoor temperature at which to have the minimum flow temperature of zone 2	20÷40	35	
R15	Outdoor temperature for zone 2 max cooling flow mixed zone	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 2	20÷40	25	
R 16	Zone 2 mixed zone minimum cooling	Defines the minimum flow temperature in zone 2 room cooling mode	5 ÷ 20	18	
R 17	Zone 2 mixed zone maximum cooling	Defines the maximum flow temperature in zone 2 room cooling mode	5 ÷ 25	20	
R21	Outdoor temperature for max CH flow zone 3	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	-15÷25°C	- 5	
R22	Outdoor temperature for min CH flow zone 3	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	-15÷25°C	25	
R23	Zone3 maximum central heating	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	20 ÷ 65	40	
R24	Zone 3 minimum central heating	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	20÷65	25	

Id Parameter	Parameter	Description	Range	Default	Value customized
R25	Outdoor temperature for Zone 3 low temperature zone min cooling flow	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	20÷40	35	
R 26	Outdoor temperature for Zone 3 low temperature zone max cooling flow	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	20÷40	25	
R27	Zone 3 low temperature zone minimum cooling	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	5 ÷ 20	18	
R28	Zone 3 low temperature zone maximum cooling	Establishes the outdoor temperature at which to have the maximum flow temperature of zone 3	5 ÷ 25	20	

Id Parameter	Parameter	Description	Range	Default	Value customized
I 01	DHW integra- tion enabling	Allows you to enable an alternative power source (AL) to integrate domestic hot water heating	OFF - AL	OFF	
I 02	System integration enabling	Using this function, you can enable an alternative (AL) or simultaneous (CO) power source to integrate heating system central heating.	OFF-AL-CO	OFF	
103	DHW max wait time	Establishes the maximum amount of time before activating DHW integration.	1 - 255 minutes	240	
I04	Central heating max wait time	Establishes the maximum amount of time before activating central heating integration.	20 - 240 minutes	120	
I 07	Activation band	Establishes a temperature range around the calculated temperature to determine which generator to switch on	0÷10°C	4	
108	Simultaneous D.H.W.	Enables the simultaneous operation in DHW mode and room air conditioning mode	OFF-ON	OFF	
109	DHW activation temperature	Establishes the outdoor temperature under which DHW integration is enabled	-25 ÷ 35°C	-20	
I 10	System activation temperature	Establishes the outdoor temperature under which system integration is enabled	-25 ÷ 35°C	-20	
I 11	Outdoor unit operating hours	Displays the hours of operation performed by the outdoor unit	-	-	
I 12	Heating integration resistance hours of operation	Displays the hours of operation of the central heating integration resistance (optional)	-	-	
I13	DHW integra- tion resistance hours of operation	Displays the hours of operation of the DHW integration resistance (optional)	-	-	
I 14	Position of electrical resistance	Determines the installation position of the system electrical resistance	Int-Ext	Int	
I15	Preheat function enabling temperature	If system integration is enabled, this is the temperature below which the preheat function is activated	14÷25°C	15	

Maintenance menu.

 $Accessing this \, menu, the \, unit \, goes \, into \, stand-by. \, By \, selecting \, every \, single \, parameter, you \, can \, activate \, a \, specific \, function \, for \, each \, load.$

Id Parameter	Parameter	Description	Range	Default	Value customized
M 02	System circulator pump speed	Establishes the system circulator pump speed	0 - 100%	0	
M 03	DHW 3-way	Moves the 3-way motor from system to DHW	DHW-CH- MD	DHW	
M04	Cooling 3-way	Moves the cooling circuit 3-way motor	OFF-ON	OFF	
M08	Zone 1 outdoor circulator pump	Enables the zone 1 outdoor circulator pump	OFF-ON	OFF	
M 09	Zone 2 outdoor circulator pump	Enables the zone 2 outdoor circulator pump	OFF-ON	OFF	
M 10	Mixer zone 2	Establishes zone 2 mixing valve positioning	OFF - OPEN - CLOSE	OFF	
M 11	DHW electrical resistance	Enables the DHW integrated electrical resistance	OFF-ON	OFF	
M 12	Central heating electrical resistance	Enables the room central heating integrated electrical resistance	OFF-ON	OFF	
M 13	Dehumidifier zone 1	Enables the dehumidifier in zone 1	OFF-ON	OFF	
M 14	Dehumidifier zone 2	Enables the dehumidifier in zone 2	OFF-ON	OFF	
M 15	Relay 1	Enables relay 1 on the 3-relay board	OFF-ON	OFF	
M 16	Relay 2	Enables relay 2 on the 3-relay board	OFF-ON	OFF	
M 17	Relay 3	Enables relay 3 on the 3-relay board	OFF-ON	OFF	
M 18	Zone 3 outdoor circulator pump	Enables the zone 3 outdoor circulator pump.	OFF-ON	OFF	
M 19	Dehumidifier zone 3	Enables the zone 3 outdoor circulator pump.	OFF-ON	OFF	
M 20	Zone 3 mixing valve	Enables the zone 3 outdoor circulator pump.	OFF - OPEN - CLOSE	OFF	
M40	Circulator pump flow rate	Determines the flow rate of the system circulator	0 - 9999	-	

3.10 FIRSTIGNITION PARAMETER SETTING

During the first activation of the appliance, it is necessary to customise the following parameters, which concern the generator operation, the type of Outdoor Unit and the type of system connected to the appliance.

Heat pump power

Set parameter A11 according to the type of Outdoor Unit connected.

Circulator speed

Set parameter A05 to define the operating mode of the pump.

Set parameters A03 and A04 to define the maximum and minimum speed of the pump.

It is necessary to adjust the pump speed according to the appliance power, to improve the operating efficiency of the machine.

It is suggested to set the values indicated in Parag. 1.21 - 1.22.

Number of zones

Set parameter A13 according to the number of zones in the system that are directly controlled by the machine.

3.11 ANTI-LEGIONELLA (IF PAIRED WITH A STORAGE TANK UNIT)

The Indoor Unit is equipped with a function to perform a thermal shock on the storage tank.

This function brings the generator temperature to the maximum allowed with DHW integrative resistance enabled.

The function is enabled via parameter "P 15" because it is not active as standard.

The function activates at the time set on parameter "P 16", on the weekday set on Parameter "P 17"; the function can be activated every day by setting "P 17"="ALL".

The maximum allowed duration of the function is "P 13" hours; if the function is not completed within the maximum allowed time, an alarm will be triggered.



Set the current date and time from the control panel by changing parameters U21 to U26 in the User menu (Parag. 2.6).



The function can only be activated in presence of integrative DHW resistance and eventually a thermostatic valve must be installed at the DHW outlet to prevent burns.



To clear a possible E250 error, it is necessary to re-enable DHW integration and, if necessary, disable the anti-legionella function if not required.

3.12 DHW (DOMESTIC HOT WATER) RECIRCULATION

The unit is designed for the management of a possible external pump for DHW recirculation (optional). The DHW recirculation function ensures greater comfort in the delivery of domestic hot water in very complex circuits or with high water content; the use of DHW recirculation also saves water and limits energy wastage.

To enable the DHW recirculation function, the start and end time of pump activation must be defined with parameters "U32" and "U33". The activation of DHW circulation also requires the selection of the relevant function in parameters P 03, P 04 and P 05.

For details and examples, see chapter 3.6 (DHW recirculation function relay board connection practical wiring diagram).



3.13 ACTIVE PLANT PHASE AND GENERIC ALARM

The unit is set up for the management of any external pump; the pump is powered in concomitance with the request phase on the system. The device is set up for the management of any generic alarms.

All the relays can also be configured as generic alarm. The 'generic alarm' signalling is enabled if any of the foreseen anomalies occur, see paragraph "2.5".

For details and examples, see chapter 3.6 (Wiring diagram with active system phase and generic alarm).

3.14 PUFFER IN PREHEATING

The device is set up for the management of any pre-heated puffer.

During a request for heating, in case the heating probe detects a temperature higher than the one requested, the system circulating pump is activated while the generator is kept off.

In the presence of an inertial storage tank heated by other sources of heat, following a central heating demand, it is possible to prevent the generators from being activated by using hot water coming from the puffer.

The function is activated by setting one of the relays of the relay board at 4 (see P03, P04, P05).

The puffer function requires the puffer probe. (Fig. 10).

For details and examples, see chapter 3.6 (Wiring diagram with puffer mode active).

3.15 PUMPANTI-BLOCK

The Indoor Unit has a function that starts the pump at least once every 24 hours for the duration of 30 seconds in order to reduce the risk of the pump becoming blocked due to prolonged inactivity.

3.16 THREE-WAY ANTI-BLOCK

The Indoor Unit has a function that activates the motorised three-way unit 24 hours after the last time it operated by running a complete cycle in order to reduce the risk of the three-way blocking due to prolonged inactivity.

3.17 SYSTEM SETPOINT CORRECTION

In the presence of hydraulic disconnections on the system which separate the appliance from the zones, a function can be activated which allows to meet the demands, by correcting the appliance's setpoint.

The corrections can be made either in heating or cooling mode only.

They are activated by setting the parameters P23 or P24 at a value > 0 °C.

 $After a \, request \, is \, made, the \, correction \, starts \, after \, a \, time \, equal \, to \, P \, 21 \, and \, continues \, 1^{\circ}C \, every \, P \, 22 \, minutes, \, until \, the \, maximum \, correction \, set \, with \, parameters \, P \, 23 \, or \, P \, 24 \, has \, been \, reached.$

To connect the B3-1, B3-2 and B3-3 probes, please refer to the wiring diagram (Fig. 10).

To enable the set point correction on zone 1, it is necessary to set the parameter A27=ZN1.



3.18 INTEGRATION WITH SYSTEMELECTRICAL RESISTANCE

The system electric resistance (optional) can be added to have an alternative source of energy available to use in the central heating mode. Enabling the electrical resistance is done via a parameter IO2 (setting IO2 = AL/CO).

By modifying the parameter IO4 you decide the time after which the electrical resistance is activated at the same time as the heat pump if the set flow set point is not reached.



With alternative integration mode, the wait time does not affect the functioning algorithm.

In normal operation when the outside temperature is lower than the parameter I10:

- with alternative mode (I02 = AL), only the resistance is activated;
- with simultaneous mode (I02 = CO), the resistance and heat pump are activated simultaneously after the heating wait time.

 $The system \ electric \ resistance \ can be installed \ inside \ or \ outside \ the \ appliance, using \ the \ parameter \ I14 \ to \ make \ a \ selection \ (I14 = Ext/Int).$ For the electrical connection of the external electric resistance, see the reference wiring \ diagram (Fig. 9).

For the electrical connection of the internal electric resistance, see the reference wiring diagram (Fig. 32).



 $The \, external \, electrical \, resistance, if any, should \, only \, be \, in stalled \, on \, the \, flow \, of \, the \, Indoor \, Unit.$



The power of the electric resistance must be set by means of the parameter A20, entering the installed power value in kW multiplied by a factor 10, e.g. for 3kW resistance, set A 20 = 30.

3.19 ZONE 1 SAFETY THERMOSTAT

When using the zone 1 probe, which can be configured by setting the parameter A27 = ZN1, temperature control is enabled, which prevents the distribution of water beyond a certain temperature.

A24 for zone 1

3.20 ZONE 2/3 SAFETY THERMOSTAT

In case of zone 2 or zone 3 installation, a control on the zone flow temperature is enabled which prevents the distribution of water above a certain temperature.

It is possible to modify these limits through the parameters

A14 for zone 2

 $A15\,for\,zone\,3$



USER

3.21 CONJUNCTION MODE

In the case of a simultaneous DHW and system request, it is possible to have the system take care of both services simultaneously using the available generators.

This is done by setting the parameter I08 = ON

A prerequisite for the activation of concurrency mode is to have DHW integration enabled (check that the parameter I01 = AL).

3.22 OUTDOOR UNIT DISABLING

With input active (contact "S41" Fig. 9), external unit operation is inhibited.

The demands can be met by any electrical resistances appropriately connected and configured.

3.23 DIVERTER VALVE MANAGEMENT (SUMMER/WINTER)

The unit electronics has a 230V outlet to manage the summer / winter diverter valves.

The voltage output is active when the appliance is in Air-conditioning mode.

3.24 PHOTOVOLTAIC

Should the photovoltaic contact (contact "S 39" Fig. 9) is closed, any sanitary storage tank is heated to the maximum temperature (Fig. 20) through heat pump operation in the absence of system requests.

3.25 AUTOMATICVENT

In the case of new central heating systems and in particular mode for floor systems, it is very important that deaeration is performed correctly.

The function consists of the cyclic activation of the pump and the 3-way valve.

The function is activated in two different ways:

- Each time the heat generator is re-powered;
- Using parameter "U 50".

In the first case, the function has a duration of 8 minutes and it can be interrupted by pressing the "Reset" button (3). In the second case, it has a duration of 18 hours and it can be interrupted simply by switching the heat generator on.

Activation of the function is signalled by the countdown shown on the indicator (14).

3.26 PRE-HEAT

In the case of a heating demand, if the water temperature is lower than the value set in parameter I15, the operation of the electric integration resistor is forced until the flow temperature value of I15+5 $^{\circ}$ C is reached.

The function remains active for a maximum of 2 hours.

 $If needed, the function \, can \, be \, by passed \, by \, disabling \, the \, system \'s \, electric \, resistance.$

3.27 SCREED HEATER

The Indoor Unit is equipped with a function to perform the thermal shock on new radiant panel systems, as required by the applicable standard.



The standard function lasts in total 7 days - 3 days at the lowest temperature set and 4 days at the highest temperature set (Fig.



To be able to activate the function there must be no remote control connected, while in case of system divided into zones it must be properly connected, both hydraulically and electrically.

The active zone pumps are those with ongoing requests, made via the room thermostatinput.

The function is activated from Indoor Unit in stand-by by pressing and holding the buttons "Reset" and "Mode" for more than 5 seconds (Fig. 44).

The standard function lasts in total 7 days - 3 days at the lowest temperature set and 4 days at the highest temperature set (Fig. 45).

Duration can be changed by changing the value of parameters "T 22" and "T 24".


After activating the function, the lower set (range $20 \div 45$ °C default = 25 °C) and the higher set (range $25 \div 55$ °C default = 45 °C) appear in


The temperature is selected by means of the buttons "+" and "-" of the system side (") and confirmed by pressing the button "Mode".

The display now shows the countdown of days alternated with the current flow temperature, as well as the normal operating symbols of the Indoor Unit.

In case of failure, the function is suspended and will resume when normal operating conditions are reset from the point where it was in-

When the time expires, the Indoor Unit automatically goes back to "Stand-by" mode, the function can also be stopped by pressing the button "Mode".

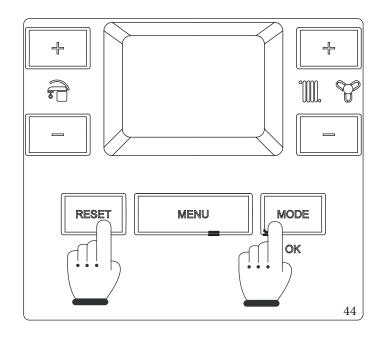

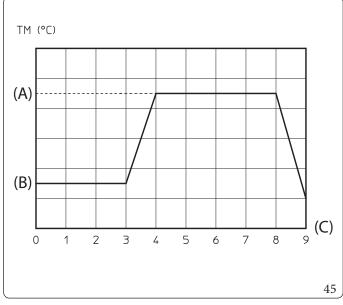

Key (Fig. 45):

(A) Top set (B)

Lowerset

(C)Days

Flow temperature

3.28 DEHUMIDIFY

Dehumidification can be performed according to three different types of devices:

- 1) Humidistat;
- 2) Humidity sensor;
- 3) Remote zone panel.

In the first case, the cooling mode temperature corresponds to:

- In the event of dehumidification request: maximum setpoint set for the request zone;
- In the event of dehumidification and cooling request: setpoint set for the request zone.

In the second and third cases, the cooling mode temperature corresponds to:

- In the event of dehumidification request: maximum setpoint set for the request zone;
- In the event of dehumidification request and cooling request: setpoint set for the request zone, but limited by the calculated dew temperature.



The dew temperature is only calculated for adjustments above or equal to 15°C.

3.29 OUTDOOR UNIT TEST MODE

When test mode is used (see Outdoor Unit instruction booklet), the Indoor Unit must be set in a mode other than "Stand-by" Before activating the Test mode function, wait at least 3 minutes after setting the operating mode. The alarm E183 is triggered during the test, meaning "Test mode" in progress.

3.30 OUTDOORUNITPUMPDOWN

If the pump down function is used (see Outdoor Unit instruction booklet) the Indoor Unit must be set in "Stand-by". The function can only be activated if the appliance is not under alarm.

3.31 NIGHT MODE

This function can be activated by setting the internal clock of the appliance (parameters U 21 and U 22).

 $Activating the function allows you to reduce the compressor frequency during the Outdoor Unit operation in the time slot set in the U\,12 and U\,13 parameters.$

Make sure the additional power sources needed to meet potential requirements that may present themselves during active operation are available (e.g. additional resistances).

3.32 CENTRALHEATING/COOLING SELECTOR

The cooling/central heating selector function uses the S44 contact in combination with the zone 1 Room thermostat to make central heating/cooling requests to the machine using free contacts.

The type of demand, central heating or cooling, can be selected from the external selector S44, see Horizontal terminal block electrical connection diagram (Par.1.10);

To use this command, the function in question must be enabled by means of the parameter A 39=ON.

To make the request, it is necessary to position the S44 selector as indicated in the following table:

S44Selector	Mode
Closed	Central heating
Open	Cooling

At the end, close the zone 1 Room thermostat contact.

The remote devices cannot be used when the function is enabled, except for the room thermostat of zone 1; even the demands of other zones, 2 or 3, are disabled automatically.




USER

3.33 CASINGREMOVAL

 $To facilitate Indoor \, Unit\, maintenance \, the \, casing \, can \, be \, completely \, removed \, as \, follows: \, a \, completely \, removed \, as \, follows: \, completely \, removed$


Lower grid (Fig. 46)

- Loosen the two screws (a).
- Press the hooks inwards, which block the lower grid (b).
- Remove the grid (b).

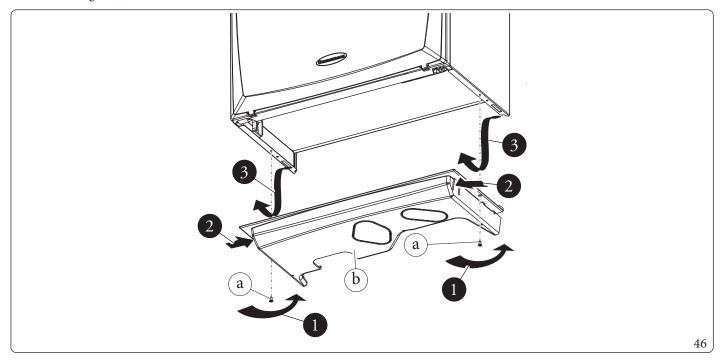


Front panel (Fig. 47)

- Open the protection door (e1) pulling it towards you.
- Remove the cover caps (c) and loosen screws (d).
- Pull the front panel (e) towards you and release it from its lower seat.

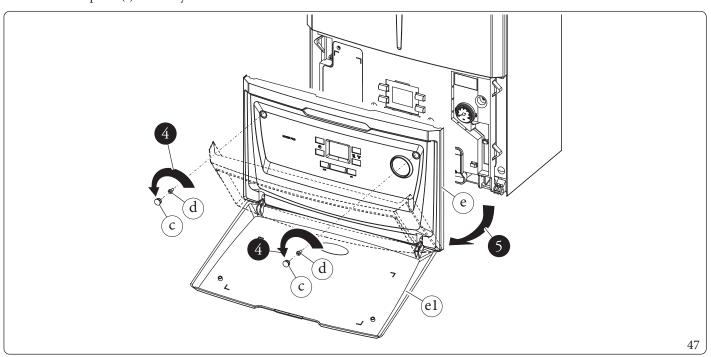

Front (Fig.48)

- Loosen the two screws (g).
- Pull the front (f) slightly towards you.
- $\ \ Release front (f) from pins (h) pulling it towards you while pushing it upwards at the same time.$

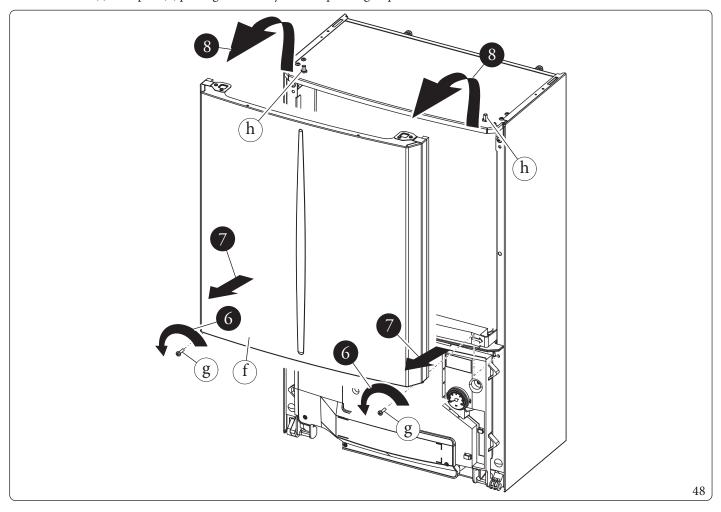


Control panel (Fig. 49)


- Press the hooks on the side of the control panel (i).
- Tilt the control panel (i) towards you.

 $The \, control \, panel \, (i) \, can \, rotate \, until \, the \, support \, cord \, (j) \, is \, completely \, extended.$

If the left side needs to be removed, unhook the support cord (j) from the control panel and proceed as follows.

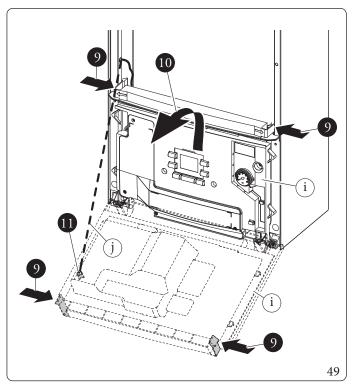


INTERFACE BOARD

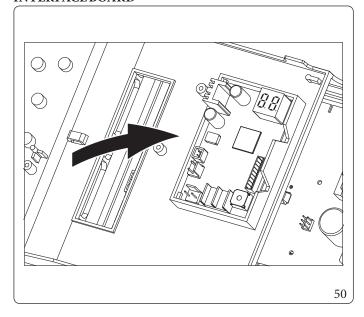

Sides (Fig. 51)

- Unscrewtheside(k) fastening screws(l).
- Remove the sides by extracting them from their rear seat (Ref. X).

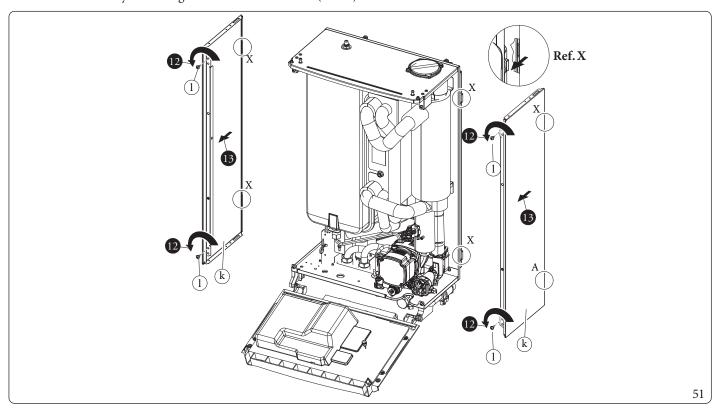

4

TECHNICAL DATA TABLE

TECHNICAL DATA

 $Nominal \, heating \, performance$

		MAGISPRO4V2	MAGIS PRO 6 V2	MAGIS PRO 9 V2
Outside Air Temperature 7°C/6°C - Water Temp	erature 30°C/35°C			
Output power	kW	4,40	6,00	9,00
Absorbed power	kW	0,85	1,22	1,87
COP		5,2	4,92	4,81
Outside Air Temperature 7°C/6°C - Water Temp	erature 40°C/45°C			
Output power	kW	4,20	5,40	8,60
Absorbed power	kW	1,09	1,51	2,33
COP		3,85	3,58	3,69
Outside Air Temperature 7°C/6°C - Water Temp	erature 47°C/55°C			
Output power	kW	3,90	4,80	8,00
Absorbed power	kW	1,32	1,81	2,73
COP		2,95	2,65	2,93
Outside Air Temperature 2°C/1°C - Water 2°C/1°C - Wate	erature 30°C/35°C			
Output power	kW	4,20	5,20	7,70
Absorbed power	kW	1,10	1,48	2,26
COP		3,81	3,51	3,41
Outside Air Temperature 7°C/8°C - Water Temp	erature 30°C/35°C			
Output power	kW	4,60	5,50	5,50
Absorbed power	kW	1,55	2,00	2,01
COP		2,97	2,75	2,74

 ${\color{red}Nominal cooling performance}$

		MAGIS PRO 4 V2	MAGIS PRO 6 V2	MAGISPRO9V2
Outside Air Temperature 35°C - Water Temperature 23	3°C/18°C			
Output power	kW	5,00	6,50	8,70
Absorbed power	kW	1,09	1,47	2,11
EER		4,59	4,42	4,12
Outside Air Temperature 35°C - Water Temperature 12	2°C/7°C			
Output power	kW	3,60	4,70	6,50
Absorbed power	kW	1,11	1,44	1,95
EER		3,24	3,26	3,33

		Unità Interna MAGIS PRO V2 (Audax Pro 4 V2)	Unità Interna MAGIS PRO V2 (Audax Pro 6 V2)	Unità Interna MAGIS PRO V2 (Audax Pro 9 V2)
Weight and dimensions				'
Weight of internal unit containing water	kg		44,8	
Empty indoor unit weight	kg		35,8	
Dimensions (LxHxD)	mm		440 x 760 x 250	
Water connections				
System side water connections - inlet	inches		3/4	
System side water connections - outlet	inches		3/4	
Storage tank unit water connections - inlet	inches		3/4	
Storage tank unit water connections - outlet	inches		3/4	
Primarycircuit				
Nominal water volume	1		9,0	
Expansion vessel: Nominal volume	1		12,0	
Expansion vessel: Total volume	1		- -	
Expansion vessel: Useful volume	1		6,1	
Expansion vessel: Pre-charge	kPa (bar)		100(1)	
Maximum operating pressure				
(System safety valve)	kPa (bar)		300(3)	
Maximum operating temperature	°C		70	
System minimum circulation flow rate	l/h		500	
Refrigerant gas connections	-			
Refrigerant gas connections - liquid phase line	inches	0		
Refrigerant gas connections - gas line	inches	0		
Weight and dimensions of Unit with packaging				
Weight of indoor unit with packaging	kg		41,0	
Dimensions of indoor unit with packaging (LxHxD)	mm		498 x 870 x 313	
Power supply electrical features 1 (by standard)				
Electrical connection		S	ingle-phase, 230Vac, 50H	
Rated absorbed power	W		70	
Ratedabsorbed current	A		0,50	
Absorbed power without integration resistance	W		70	
Absorbed current without integration resistance	A		0,50	
Power supply electrical features 2 (Optional)				
Electrical connection 2		S	ingle-phase, 230Vac, 50H	
Absorbed power 2 (internal system integration		_		
resistance)	W		3000	
Absorbed current 2 (internal system integration			12.0	
resistance)	A	13,0		
Other electrical data				
Protection class			IPX4D	
Outdoor unit operating range	°C	-5+40		
Outdoor unit operating range (with antifreeze kit)	°C		-15+35	
Primary pump rated power	W		75	
Primary pump rated current	A		0,66	
EEI primary pump			≤0,20 - Part.3	
Soundpower and pressure	1		_ 0,20 1 41 6.0	
Coundnesses	J.D.		0	

Soundpower

dB

40

43

Product data

		MAGISPRO4V2	MAGIS PRO 6 V2	MAGISPRO9V2
Centralheating				
Adjustable central heating temperature with heat pump (working range)	°C		+20 ÷ +65	
External central heating temperature with heat pump (working range)	°C		-25 ÷ +35	
Adjustable central heating temperature with Thermal Generator (working range)	°C		+20÷+65	
External central heating temperature with Thermal Generator (working range)	°C		-25 ÷ +35	
Cooling				
Cooling adjustable temperature (operating field)	°C		+5 ÷ +25	
Cooling outdoor temperature (operating field)	°C		+10 ÷ +46	
DHW				
Adjustable DHW temperature with heat pump (working range)	°C	+10÷+60		
External DHW temperature with heat pump (working range)	°C		-25 ÷ +35	
Adjustable DHW temperature with Thermal Generator (working range)	°C		+10 ÷ +65	
External DHW temperature with Thermal Generator (working range)	°C		-25 ÷ +46	
Seasonal efficiency data (average temperature)				
Rated heat output P _{rated}	kW	5	6	8
Room central heating seasonal energy efficiency η _s	%	127	129	127
Seasonal coefficient of performance (SCOP)	-	3,25	3,31	3,24
Seasonal efficiency data (low temperature)	<u> </u>			
Rated heat output P _{rated}	kW	5	6	9
Room central heating seasonal energy efficiency η _s	%	18	30	175
Seasonal coefficient of performance (SCOP)	-	4,58 4,45		4,45

4.2 PRODUCT FICHE MAGIS PRO 4 V2 (IN COMPLIANCE WITH REGULATION 811/2013)

A	Supplier's name or trademark	-	Immergas	
В	Supplier's model identifier	-	MAGIS PRO 4 V2	
С	For space heating Application temperature		-	Average temperature
C	Forwaterheating	Stated load profile	-	-
	Seasonal energy efficiency class of room heating	Average temperature	-	A++
D	Seasonal energy efficiency class of room heating	Lowtemperature	-	A+++
	Energy efficiency class of water heating		-	-
E	Nominal heat output (average climate condition)	Average temperature	kW	5
E	Nominameatoutput (average crimate condition)	Low temperature	kW	5
	Annual energy consumption for room heating (average	Average temperature	kWh	3178
F	climate condition)	Low temperature	kWh	2253
	Annual energy consumption for water heating (average of	climate condition)	kWh	-
	Seasonal energy efficiency of room heating (average	Average temperature	%	127
G	climate condition)	Low temperature	%	180
	Energy efficiency of water heating (average climate cond	%	-	
Н	Lwa sound power level indoors	dB	40	
I	Operation only during dead hours	Yes\No	No	
J	Specific precautions		-	-
	Naminalhast outnut (sold an dimeta son dition)	Average temperature	kW	4
K	Nominal heat output (colder climate condition)	Low temperature	kW	4
K	Nominal heat output (warmer climate condition)	Average temperature	kW	5
	Nominarileat output (warmer chinate condition)	Lowtemperature	kW	5
	Annual energy consumption for room heating (colder	Average temperature	kWh	3992
	climate condition)	Low temperature	kWh	2770
L	Annual energy consumption for room heating (warmer	Average temperature	kWh	1753
L	climate condition)	Low temperature	kWh	1134
	Annual energy consumption for water heating (colder cl	imate condition)	kWh	-
	Annual energy consumption for water heating (warmer	climate condition)	kWh	-
	Seasonal energy efficiency of room heating (colder	Average temperature	%	96
M	climate condition)	Lowtemperature	%	138
171	Seasonal energy efficiency of room heating (warmer	Average temperature	%	149
	climate condition)	Low temperature	%	233
N	Lwa sound power level outdoors		dB	51

4.3 TABLE 2 REGULATION 813/2013 (MAGIS PRO 4 V2)

Model	MAGISP	RO4V2					
Air/water heat pump			YES	Low temperature heat pump			NO
Water/water heat pump			NO	With Supplementary heater			NO
Brine/water heat pump			NO	Mixed central heating device with heat pum	o:		NO
The parameters are declared for average ter pumps are declared for low temperature ap The parameters are declared for average cli	plication		, except f	for low temperature heat pumps. The paramete	ers for low to	emperatu	reheat
Element	Symbol	Value	Unit	Element	Symbol	Value	Unit
Nominalheatoutput	Pnomi- nale	5	kW	Room central heating seasonal energy efficiency	η_s	-	%
Central heating capacity declared with a patern temperature equivalent to 20°C and outdo				$\begin{array}{c} Per formance coefficient declared with indoce \\ 20^{\circ}C and outdoor temperature T_{j} \end{array}$	ortemperat	ureequiv	alent to
T _j =-7 °C	Pdh	4,4	kW	$T_j = -7 ^{\circ}C$	COPd	2,10	-
$T_j = +2 ^{\circ}C$	Pdh	2,7	kW	$T_j = + 2 ^{\circ}C$	COPd	3,10	-
$T_j = +7 ^{\circ}C$	Pdh	1,7	kW	$T_j = +7 ^{\circ}C$	COPd	4,46	-
T _j =+ 12 °C	Pdh	1,9	kW	$T_j = + 12 ^{\circ}\text{C}$	COPd	5,72	-
T_j = bivalent temperature	Pdh	4,4	kW	T_j = bivalent temperature	COPd	2,10	-
T_j = operating limit temperature	Pdh	4,2	kW	T_j = operating limit temperature	COPd	1,51	-
for air/water heat pumps: $T_j = -15$ °C (se TOL < -20 °C)	Pdh	-	kW	for air/water heat pumps: $T_j = -15$ °C (se TOL < -20 °C)	COPd	-	-
Bivalenttemperature	$T_{\rm biv}$	-7,0	°C	For air/water heat pumps: Operating limit temperature	TOL	-10	°C
Central heating capacity cycle intervals	Pcych	-	kW	Cycle intervals efficiency	COPd	-	-
Degradation coefficient	Cdh	0,9	-	Water heating temperature operating limit	WTOL	65	°C
Different mode of energy consumption fro	m the active	mode		Supplementary heater			
OFF mode	P _{OFF}	0,022	kW	Nominal heat output	Psup	0,8	kW
Thermostat mode off	P _{TO}	0,022	kW				
Standby mode	P_{SB}	0,022	kW	Type of energy supply voltage		Electric	
Guard heating mode	P _{CK}	0,000	kW				
Otheritems							ı
Capacity control		variable		For air/water heat pumps: nominal air output to outside	-	2400	m³\h
Indoor/outdoor sound level	L_{WA}	40/51	dB	For water or brine/water heat pumps:			
Annualenergy consumption	Q _{HE}	-	kWh or GJ	nominal flow of brine or water, outdoor heat exchanger	-	-	m³\h
For mixed central heating appliances with appliances	heat pump						
Stated load profile		-		Water central heating energy efficiency	η_{wh}	-	%
Daily electrical power consumption	Q _{elec}	-	kWh	Daily fuel consumption	Q_{fuel}	-	kWh
Annual energy consumption	AEC	-	kWh	Annual fuel consumption	AFC	-	GJ
Contactinformation	Immerga	s S.p.A. vi	a Cisa Li	gure n.95			

4.4 PRODUCT FICHE MAGIS PRO 6 V2 (IN COMPLIANCE WITH REGULATION 811/2013)

A	Supplier's name or trademark	-	Immergas	
В	Supplier's model identifier	-	MAGISPRO6V2	
С	For space heating Application temperature		-	Average temperature
	For water heating	Stated load profile	-	-
	Seasonal energy efficiency class of room heating	Average temperature	-	A++
D	Seasonarenergy emclency class of room heating	Lowtemperature	-	A+++
	Energy efficiency class of water heating		-	-
E	Nominal heat output (average climate condition)	Average temperature	kW	6
E	Nonliniar near output (average crimate condition)	Lowtemperature	kW	6
	Annual energy consumption for room heating (average	Average temperature	kWh	3745
F	climate condition)	Lowtemperature	kWh	2705
	Annual energy consumption for water heating (average of	climate condition)	kWh	-
	Seasonal energy efficiency of room heating (average	Average temperature	%	129
G	climate condition)	Low temperature	%	180
	Energy efficiency of water heating (average climate cond	%	-	
Н	Lwa sound power level indoors	dB	40	
I	Operation only during dead hours	Yes\No	No	
J	Specific precautions		-	-
	Naminalhast outnut (sold an dimeta condition)	Average temperature	kW	5
K	Nominal heat output (colder climate condition)	Low temperature	kW	5
K	N i	Average temperature	kW	6
	Nominal heat output (warmer climate condition)	Low temperature	kW	6
	Annual energy consumption for room heating (colder	Average temperature	kWh	4951
	climate condition)	Lowtemperature	kWh	3305
L	Annual energy consumption for room heating (warmer	Average temperature	kWh	1953
L	climate condition)	Lowtemperature	kWh	1264
	Annual energy consumption for water heating (colder cl	imate condition)	kWh	-
	Annual energy consumption for water heating (warmer	climate condition)	kWh	-
	Seasonal energy efficiency of room heating (colder	Average temperature	%	93
M	climate condition)	Lowtemperature	%	140
141	Seasonal energy efficiency of room heating (warmer	Averagetemperature	%	150
	climate condition)	Lowtemperature	%	234
N	Lwa sound power level outdoors		dB	54

4.5 TABLE 2 REGULATION 813/2013 (MAGIS PRO 6 V2)

Model	MAGIS PRO 6 V2						
Air/water heat pump	,	YES Low temperature heat pump				NO	
Water/water heat pump	ter/water heat pump			With Supplementary heater			NO
Brine/water heat pump	rine/water heat pump			Mixed central heating device with heat pump	p:		NO
		plication	, except f	or low temperature heat pumps. The paramete	rs for low to	emperatu	re heat
pumps are declared for low temperature ap							
The parameters are declared for average cli		i		I			
Element	Symbol	Value	Unit	Element	Symbol	Value	Unit
Nominal heat output	Pnomi- nale	6	kW	Room central heating seasonal energy efficiency	η_s	-	%
Central heating capacity declared with a pate temperature equivalent to 20°C and outdo				$\begin{array}{c} Performance coefficient declared with indoc \\ 20^{\circ}C \ and \ outdoor \ temperature \ T_{\rm j} \end{array}$	or temperat	ureequiv	alent to
$T_j = -7$ °C	Pdh	5,3	kW	$T_j = -7$ °C	COPd	2,00	-
$T_j = + 2 ^{\circ}C$	Pdh	3,2	kW	$T_j = + 2 ^{\circ}C$	COPd	3,23	-
$T_j = +7 ^{\circ}C$	Pdh	2,1	kW	$T_j = +7 ^{\circ}C$	COPd	4,47	-
$T_j = + 12 ^{\circ}\text{C}$	Pdh	1,9	kW	$T_j = + 12 ^{\circ}\text{C}$	COPd	5,72	-
T_j = bivalent temperature	Pdh	5,3	kW	T_j = bivalent temperature	COPd	2,00	-
T_j = operating limit temperature	Pdh	5,0	kW	T_j =operatinglimittemperature	COPd	1,80	-
for air/water heat pumps: $T_j = -15$ °C (se TOL < -20 °C)	Pdh	-	kW	for air/water heat pumps: $T_j = -15$ °C (se TOL < -20 °C)	COPd	-	-
Bivalenttemperature	$T_{\rm biv}$	-7,0	°C	For air/water heat pumps: Operating limit temperature	TOL	-10	°C
Central heating capacity cycle intervals	Pcych	-	kW	Cycle intervals efficiency	COPd	1	-
Degradation coefficient	Cdh	0,9	-	Water heating temperature operating limit	WTOL	65	°C
Different mode of energy consumption fro	m the active	mode		Supplementary heater			
OFF mode	P _{OFF}	0,022	kW	Nominal heat output	Psup	1,0	kW
Thermostat mode off	P_{TO}	0,022	kW				
Standby mode	P_{SB}	0,022	kW	Type of energy supply voltage		Electric	
Guard heating mode	P_{CK}	0,000	kW				
Otheritems							
Capacity control		variable		For air/water heat pumps: nominal air output to outside	-	2580	m³\h
Indoor/outdoor sound level	L_{WA}	40/54	dB	For water or brine/water heat pumps:			
Annualenergy consumption	Q _{HE}	-	kWh or GJ	nominal flow of brine or water, outdoor heat exchanger	-	-	m₃∖h
For mixed central heating appliances with	heat pump						
Stated load profile		-		Water central heating energy efficiency	$\eta_{\rm wh}$	-	%
Daily electrical power consumption	Q _{elec}	-	kWh	Daily fuel consumption	Q_{fuel}	-	kWh
Annualenergy consumption	AEC	-	kWh	Annual fuel consumption	AFC	-	GJ
Contactinformation	Immerga	s S.p.A. vi	a Cisa Li	gure n.95			

4.6 PRODUCT FICHE MAGIS PRO 9 V2 (IN COMPLIANCE WITH REGULATION 811/2013)

A	Supplier's name or trademark	-	Immergas	
В	Supplier's model identifier	-	MAGISPRO9V2	
С	For space heating Application temperature		-	Average temperature
	For water heating	Stated load profile	-	-
	Seasonal energy efficiency class of room heating	Average temperature	-	A++
D	Seasonarenergy eniciency class of room nearing	Lowtemperature	-	A+++
	Energy efficiency class of water heating		-	-
E	Nominal heat output (average climate condition)	Average temperature	kW	8
E	Nonmarinear output (average crimate condition)	Lowtemperature	kW	9
	Annual energy consumption for room heating (average	Average temperature	kWh	5103
F	climate condition)	Lowtemperature	kWh	3949
	Annual energy consumption for water heating (average of	climate condition)	kWh	-
	Seasonal energy efficiency of room heating (average	Average temperature	%	127
G	climate condition)	Lowtemperature	%	175
	Energy efficiency of water heating (average climate cond	%	-	
Н	Lwa sound power level indoors	dB	43	
I	Operation only during dead hours	Yes\No	No	
J	Specific precautions		-	-
	N	Average temperature	kW	7
K	Nominal heat output (colder climate condition)	Lowtemperature	kW	8
K	N	Average temperature	kW	8
	Nominal heat output (warmer climate condition)	Lowtemperature	kW	9
	Annual energy consumption for room heating (colder	Average temperature	kWh	7220
	climate condition)	Lowtemperature	kWh	5252
L	Annual energy consumption for room heating (warmer	Average temperature	kWh	2720
L	climate condition)	Lowtemperature	kWh	1865
	Annual energy consumption for water heating (colder cl	imate condition)	kWh	-
	Annual energy consumption for water heating (warmer	climate condition)	kWh	-
	Seasonal energy efficiency of room heating (colder	Average temperature	%	93
M	climate condition)	Lowtemperature	%	138
141	Seasonal energy efficiency of room heating (warmer	Average temperature	%	154
	climate condition)	Lowtemperature	%	241
N	Lwa sound power level outdoors		dB	61

4.7 TABLE 2 REGULATION 813/2013 (MAGIS PRO 9 V2)

Model	MAGIS PRO 9 V2						
Air/water heat pump	,	YES Low temperature heat pump					NO
Vater/water heat pump			NO	With Supplementary heater			NO
Brine/water heat pump	rine/water heat pump			Mixed central heating device with heat pump	p:		NO
1		plication	, except f	or low temperature heat pumps. The paramete	rs for low to	emperatu	re heat
pumps are declared for low temperature ap							
The parameters are declared for average cli		i			0 1 1	1	** **
Element	Symbol	Value	Unit	Element	Symbol	Value	Unit
Nominal heat output	Pnomi- nale	8	kW	Room central heating seasonal energy efficiency	η_s	-	%
Central heating capacity declared with a patern temperature equivalent to 20°C and outdo				$\begin{array}{c} Performance coefficient declared with indoc\\ 20^{\circ}C and outdoor temperature T_{j} \end{array}$	or temperat	ureequiv	alent to
$T_j = -7$ °C	Pdh	7,1	kW	$T_j = -7$ °C	COPd	1,76	-
T _j =+ 2 °C	Pdh	4,3	kW	$T_j = + 2 ^{\circ}C$	COPd	3,23	-
$T_j = +7 ^{\circ}C$	Pdh	2,8	kW	$T_j = +7 ^{\circ}C$	COPd	4,62	-
T _j =+ 12 °C	Pdh	2,6	kW	$T_j = + 12 ^{\circ}C$	COPd	5,88	-
T_j =bivalenttemperature	Pdh	7,1	kW	T_j = bivalent temperature	COPd	1,76	-
T_j =operatinglimit temperature	Pdh	4,9	kW	T_j = operating limit temperature	COPd	1,35	-
for air/water heat pumps: $T_j = -15$ °C (se TOL < -20 °C)	Pdh	-	kW	for air/water heat pumps: $T_j = -15$ °C (se TOL < -20 °C)	COPd	-	-
Bivalenttemperature	$T_{\rm biv}$	-7,0	°C	For air/water heat pumps: Operating limit temperature	TOL	-10	°C
Central heating capacity cycle intervals	Pcych	-	kW	Cycle intervals efficiency	COPd	-	-
Degradation coefficient	Cdh	0,9	-	Water heating temperature operating limit	WTOL	65	°C
Different mode of energy consumption fro	m the active	mode		Supplementary heater			
OFF mode	P _{OFF}	0,022	kW	Nominal heat output	Psup	3,1	kW
Thermostat mode off	P_{TO}	0,022	kW				
Standby mode	P_{SB}	0,022	kW	Type of energy supply voltage		Electric	
Guard heating mode	P_{CK}	0,000	kW				
Otheritems							1
Capacity control		variable	ı	For air/water heat pumps: nominal air output to outside	-	3960	m³\h
Indoor/outdoor sound level	L_{WA}	43/61	dB	For water or brine/water heat pumps:			
Annual energy consumption	Q _{HE}	-	kWh or GJ	nominal flow of brine or water, outdoor heat exchanger	-	-	m³\h
For mixed central heating appliances with	heat pump						
Stated load profile		-		Water central heating energy efficiency	$\eta_{ m wh}$	-	%
Daily electrical power consumption	Q _{elec}	-	kWh	Daily fuel consumption	Q_{fuel}	-	kWh
Annual energy consumption	AEC	-	kWh	Annual fuel consumption	AFC	-	GJ
Contactinformation	Immerga	sS.p.A. vi	a Cisa Li	gure n.95			

4.8 PARAMETERS FOR FILLING IN THE PACKAGE FICHE

Should you wish to install an assembly starting from the Magis Pro V2 package, use the package fiche shown in (Fig. 53).

To complete it properly, fill the relevant spaces (as shown in the package fiche facsimile Fig. 52) with the values shown in tables "Paramep ters to fill in the low temperature package fiche (30/35)", "Parameters to fill in the average temperature package fiche (47/55)".


The remaining values must be obtained from the technical data sheets of the products used to make up the assembly (e.g. solar devices, integration hydronic module, temperature controllers).

Use board (Fig. 53) for "assemblies" related to the central heating mode (e.g.: heat pump + temperature controller).



Since the product is standard supplied with a temperature controller, the package fiche must always be completed.

Facsimile for filling in the package fiche for room central heating systems.

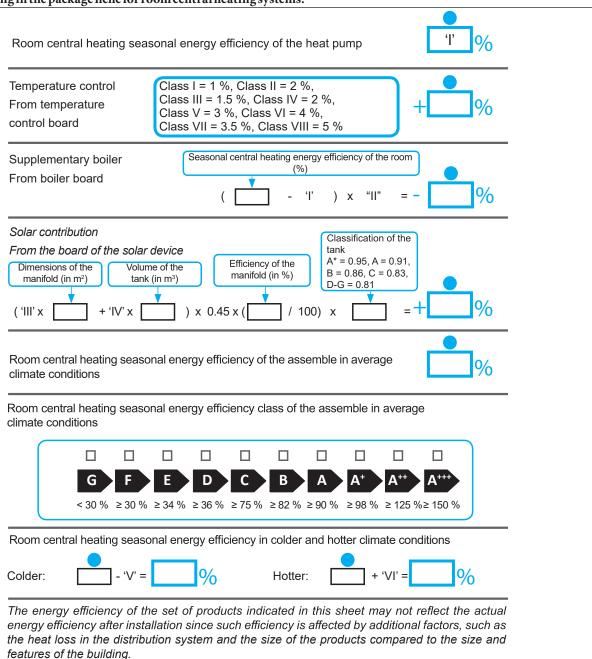

52

Parameters to fill in the low temperature package fiche (30/35)

$Mag is PRO\,4\,V2$

Parameter	Colderzones	Averagezones	Hotterzones
	-	-	-
"I"	138	180	233
"II"	*	*	*
"III"	6,68	5,35	5,35
"IV"	2,61	2,09	2,09

Magis PRO 6 V2

Parameter	Colderzones	Averagezones	Hotterzones
	•	-	-
"I"	140	180	234
"II"	*	*	*
"III"	5,35	4,45	4,45
"IV"	2,09	1,74	1,74

Magis PRO 9 V2

Parameter	Colderzones	Averagezones	Hotterzones
	-	-	_
"I"	138	175	241
"II"	*	*	*
"III"	3,34	2,97	2,97
"IV"	1,31	1,16	1,16

^{*} to be determined according to Regulation 811/2013 and transient calculation methods as per Notice of the European Community no. 207/2014.

USER

$Parameters \, to \, fill \, in \, the \, average \, temperature \, package \, fiche \, (47/55)$

Magis PRO 4 V2

Parameter	Colderzones	Averagezones	Hotterzones
	•	-	-
"I"	96	127	149
"II"	*	*	*
"III"	6,68	5,35	5,35
"IV"	2,61	2,09	2,09

Magis PRO 6 V2

Parameter	Colderzones	Averagezones	Hotterzones
	-	-	-
"I"	93	129	150
"II"	*	*	*
"III"	5,35	4,45	4,45
"IV"	2,09	1,74	1,74

Magis PRO 9 V2

Parameter	Colderzones	Averagezones	Hotterzones
	•	_	-
"I"	93	127	154
"II"	*	*	*
"III"	3,82	3,34	3,34
"IV"	1,49	1,31	1,31

^{*} to be determined according to Regulation 811/2013 and transient calculation methods as per Notice of the European Community no. 207/2014.

Room central heating system package fiche.

Room central heating seasonal energy efficiency of the heat pump



Temperature control


From temperature control board

Class I = 1 %, Class II = 2 %, Class III = 1.5 %, Class IV = 2 %, Class V = 3 %, Class VI = 4 %, Class VII = 3.5 %, Class VIII = 5 %



Supplementary boiler

From boiler board

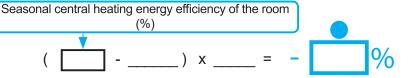

Solar contribution

From the board of the solar device

Dimensions of the manifold (in m²)

Volume of the tank (in m³)

(x + x) x 0.45 x (

Efficiency of the manifold (in %)

/ 100) x

Classification of the tank

A* = 0.95, A = 0.91,

B = 0.86, C = 0.83,


D-G = 0.81



Room central heating seasonal energy efficiency of the assemble in average climate conditions



Room central heating seasonal energy efficiency class of the assemble in average climate conditions

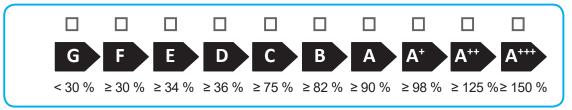

Room central heating seasonal energy efficiency in colder and hotter climate conditions

Colder:



Hotter:



The energy efficiency of the set of products indicated in this sheet may not reflect the actual energy efficiency after installation since such efficiency is affected by additional factors, such as the heat loss in the distribution system and the size of the products compared to the size and features of the building.

53

Immergas S.p.A.

42041 Brescello (RE) - Italy

Tel. 0522.689011

immergas.com

















 $This \, instruction \, booklet \, is \, made \, of \,$ ecological paper.

