

MAJOR'S
USERS

Instruction and
recommendation booklet



MAIOR EOLO 32



Dear Customer,

Our compliments for having chosen a top-quality Immergas product, able to assure well-being and safety for a long period of time. As an Immergas customer you can also count on a qualified after-sales service, prepared and updated to guarantee constant efficiency of your boiler. Read the following pages carefully: you will be able to draw useful suggestions regarding the correct use of the appliance, the respect of which, will confirm your satisfaction for the Immergas product. For assistance and scheduled maintenance contact Authorised After-Sales centres: they have original spare parts and are specifically trained directly by the manufacturer.

General recommendations

All Immergas products are protected with suitable transport packaging.

The material must be stored in dry environments protected from bad weather.

The instruction book is an integral and essential part of the product and must also be given to the new user in the case of transfer or succession of ownership.

It must be stored with care and consulted carefully, as all of the warnings provide important safety indications for installation, use and maintenance stages.

This instructions manual provides technical information for installing Immergas boilers. As for the other issues related to boiler installation (e.g. safety in the work site, environment protection, injury prevention), it is necessary to comply with the provisions specified in the regulations in force and principles of good practice.

In compliance with legislation in force, the systems must be designed by qualified professionals, within the dimensional limits established by the Law. Installation and maintenance must be performed in compliance with the regulations in force, according to the manufacturer's instructions and by an authorised company, which has specific technical expertise in the system sector, as required by Law.

Improper installation or assembly of the Immergas appliance and/or components, accessories, kit and devices can cause unexpected problems for people, animals and objects. Read the instructions provided with the product carefully to ensure proper installation.

Maintenance must be carried out by an authorised company. The Authorised After-sales Service represents a guarantee of qualification and professionalism.

The appliance must only be destined for the use for which it has been expressly declared. Any other use will be considered improper and therefore potentially dangerous.

If errors occur during installation, operation and maintenance, due to non-compliance with technical laws in force, standards or instructions contained in this book (or however supplied by the manufacturer), the manufacturer is excluded from any contractual and extra-contractual liability for any damages and the appliance warranty is invalidated.

Product not intended for EU countries.

The manufacturer declines all liability due to printing or transcription errors, reserving the right to make any modifications to its technical and commercial documents without prior notice.

INDEX

INSTALLER	page
1 Boiler installation.....	5
1.1 Installation recommendations.....	5
1.2 Main dimensions.....	6
1.3 Antifreeze protection.....	6
1.4 Gas connection.....	7
1.5 Hydraulic connection.....	7
1.6 Electrical connection.....	7
1.7 Remote controls and room chrono- thermostats (Optional).....	8
1.8 External probe (Optional).....	8
1.9 Immergas flue systems.....	9
1.10 Outdoor installation in a partially protected area.....	12
1.11 Concentric horizontal kit installation.....	13
1.12 Concentric vertical kit installation.....	14
1.13 Separator kit installation.....	15
1.14 Ducting of flues or technical slots.....	17
1.15 Configuration type B ₂₃ , open chamber and forced draught for indoors.....	17
1.16 Flue exhaust to flue/chimney.....	17
1.17 Flues, chimneys, chimney pots and terminals.....	17
1.18 System filling.....	17
1.19 Gas system start-up.....	17
1.20 Boiler start up (ignition).....	17
1.21 Circulation pump.....	18
1.22 Kits available on request.....	19
1.23 Boiler components.....	19

USER	page
2 Use and maintenance instructions.....	20
2.1 Cleaning and maintenance.....	20
2.2 General warnings.....	20
2.3 Control panel.....	20
2.4 Using the boiler.....	21
2.5 Troubleshooting.....	22
2.6 Boiler shutdown.....	23
2.7 Restoring central heating system pressure.....	23
2.8 System draining.....	23
2.9 Antifreeze protection.....	23
2.10 Case cleaning.....	23
2.11 Decommissioning.....	23

MAINTENANCE TECHNICIAN	page
3 Boiler start-up (initial check).....	24
3.1 Hydraulic diagram.....	24
3.2 Wiring diagram.....	25
3.3 Troubleshooting.....	25
3.4 Information menu.....	26
3.5 Programming the P.C.B.....	26
3.6 Converting the boiler to other types of gas.....	28
3.7 Checks following conversion to another type of gas.....	28
3.8 Possible adjustments.....	28
3.9 Slow automatic ignition function.....	28
3.10 "Chimney sweep" function.....	29
3.11 Pump anti-block function.....	29
3.12 three-way anti-block function.....	29
3.13 Radiator antifreeze function.....	29
3.14 P.C.B. periodical self-check.....	29
3.15 Solar panels coupling function.....	29
3.16 appliance check and maintenance.....	29
3.17 Casing removal.....	30
3.18 Variable heat output.....	32
3.19 Combustion parameters.....	34
3.20 Technical data.....	35
3.21 Key for data nameplate.....	36

1 BOILER INSTALLATION

1.1 INSTALLATION RECOMMENDATIONS.

The Maior Eolo boiler has been designed for wall mounted installation, for heating and production of domestic hot water for domestic use and similar purposes.

The place of installation of the appliance and relative Immergas accessories must have suitable features (technical and structural), such as to allow for (always in safe, efficient and comfortable conditions):

- installation (according to the provisions of the technical legislation and technical regulations);
- maintenance operations (including scheduled, periodic, routine and special maintenance);
- removal (outdoors in the place for loading and transporting the appliances and components) as well as their eventual replacement with appliances and/or equivalent components.

In the case of wall installation the wall surface must be smooth, without any protrusions or recesses enabling access to the rear part. They are not designed to be installed on plinths or floors (Fig. 1-1).

By varying the type of installation the classification of the boiler also varies, precisely:

- **Boiler type B₂₂** if installed without the 2 intake caps and with the top cover kit
- **Type C boiler** if installed using concentric pipes or other types of pipes envisioned for sealed chamber boilers for air intake and expulsion of flue gas.

Only professionally enabled companies are authorised to install Immergas gas appliances. Installation must be carried out according to regulation standards, current legislation and in compliance with local technical regulations and the required technical procedures.

Attention: the manufacturer declines all liability for damages caused by boilers removed from other systems or for any non-conformities of such equipment.

Before installing the appliance, ensure that it is delivered in perfect condition; if in doubt, contact the supplier immediately. Packing materials (staples, nails, plastic bags, polystyrene foam, etc.) constitute a hazard and must be kept out of the reach of children. If the appliance is installed inside or between cabinets, ensure sufficient space for normal servicing; therefore it is advisable to leave clearance of at least 3 cm between the boiler casing and the vertical sides of the cabinet. Leave adequate space above the boiler for possible water and flue removal connections.

Keep all flammable objects away from the appliance (paper, rags, plastic, polystyrene, etc.). Do not place household appliances underneath the boiler as they could be damaged if the safety valve intervenes, if the drain trap is blocked, or if there are leaks from the hydraulic connections; otherwise, the manufacturer cannot be held responsible for any damage caused to the household appliances.

For the aforementioned reasons, we recommend not placing furnishings, furniture, etc. under the boiler.

In the event of malfunctions, faults or incorrect operation, turn the appliance off and contact an authorised company (e.g. the Authorised Technical Assistance centre, which has specifically trained staff and original spare parts). Do not attempt to modify or repair the appliance alone. Failure to comply with the above implies personal responsibility and invalidates the warranty.

• Installation regulations:

- this boiler can be installed outdoors in a partially protected area. A partially protected area is one in which the appliance is not exposed to the direct action of the weather (rain, snow, hail, etc.).

N.B.: this type of installation is only possible when permitted by the laws in force in the appliance's country of destination.

- Installation of gas appliances, flue exhaust pipes and combustion air intake pipes is forbidden in places with a fire risk (for example: garages, closed parking stalls), and in potentially dangerous places.
- Installation is prohibited on the vertical projection of cooking hobs.
- Installation is forbidden in places/rooms that constitute public areas of apartment buildings, internal stairways or other escape routes (e.g. floor landings, entrance halls, etc.).
- Installation is also forbidden in places/rooms that constitute public areas of apartment buildings such as cellars, entrance halls, attics, lofts, etc., unless otherwise provided for by local regulations in force.


Attention: wall mounting of the boiler must guarantee stable and efficient support for the generator

The plugs (standard supply) are to be used only in conjunction with the mounting brackets or fixing template to fix the appliance to the wall; they only ensure adequate support if inserted correctly (according to technical standards) in walls made of solid or semi-hollow brick or block. In the case of walls made from hollow brick or block, partitions with limited static properties, or in any case walls other than those indicated, a static test must be carried out to ensure adequate support.

N.B.: the hex head screws supplied in the blister pack are to be used exclusively to fix the relative mounting bracket to the wall.

These boilers are used to heat water to below boiling temperature in atmospheric pressure. They must be attached to a heating system suitable for their capacity and voltage.

They cannot be connected directly to low-temperature systems.

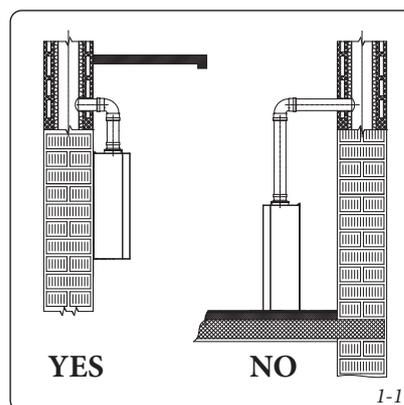


INSTALLER

USER

MAINTENANCE TECHNICIAN

1.2 MAIN DIMENSIONS.

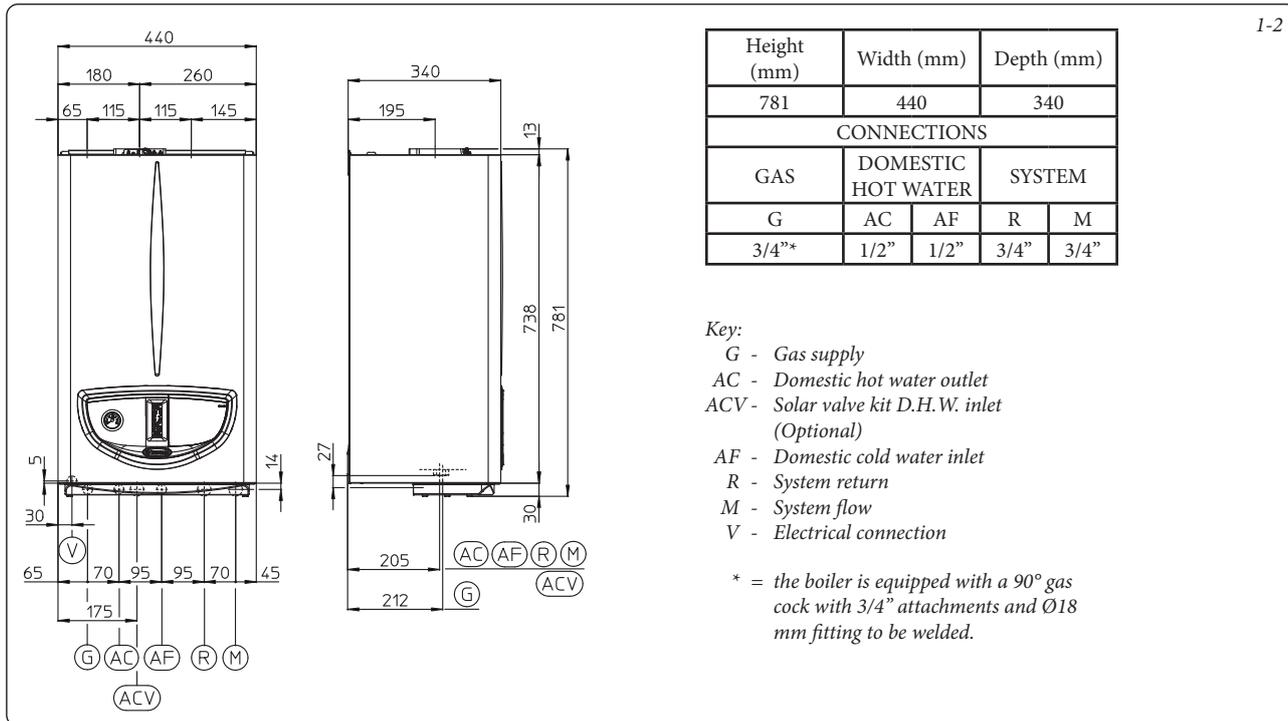

1.3 ANTIFREEZE PROTECTION.

Minimum temperature -5°C. The boiler is supplied with an antifreeze function as standard that activates the pump and burner when the system water temperature in the boiler falls below 4°C. The antifreeze function is only guaranteed if:

- the boiler is correctly connected to gas and electricity power supply circuits;
- the boiler is powered constantly;
- the boiler is not in "Off" mode;
- the boiler is not in ignition failure block (Par. 2.5);
- the boiler essential components are not faulty.

In these conditions the boiler is protected against freezing to an ambient temperature of -5°C.

Minimum temperature -15°C. If the boiler is installed in a place where the temperature falls below -3°C and in the event there is no gas (or the boiler goes into ignition failure block), the appliance can freeze.

To prevent the risk of freezing follow the instructions below:

- protects the central heating circuit from freezing by introducing a top quality anti-freeze liquid into this circuit, which is not noxious to health. The instructions of the manufacturer of this liquid must be followed scrupulously regarding the percentage necessary with respect to the minimum temperature at which the system must be kept. An aqueous solution must be made with potential pollution class of water 2 (EN 1717:2002 or local regulations in force).

Warning: the excessive use of glycol could jeopardise the proper functioning of the appliance.

The materials used for the central heating circuit of Immergas boilers withstand ethylene and propylene glycol based antifreeze liquids (if the mixtures are prepared perfectly).

For life and possible disposal, follow the supplier's instructions.

- Protect the domestic hot water circuit against freezing by using an accessory that is supplied on request (antifreeze kit) comprising two electric heating elements, the relevant cables and a control thermostat (carefully read the installation instructions contained in the accessory kit pack).

Boiler antifreeze protection is thus ensured only if:

- the boiler is correctly connected to electricity power supply circuits;
- the main switch is on;
- the antifreeze kit components are efficient.

In these conditions the boiler is protected against freezing to temperature of -15°C.

The warranty does not cover damage due to interruption of the electrical power supply and failure to comply with that stated on the previous page.

N.B.: if the boiler is installed in places where the temperature falls below 0°C, the heating attachment pipes must be insulated.

1.4 GAS CONNECTION.

Our boilers are designed to operate with methane gas (G20) and LPG. Supply pipes must be the same as or larger than the 3/4" G boiler fitting. Before connecting the gas line, carefully clean inside all the fuel feed system pipes to remove any residue that could impair boiler efficiency. Also make sure the gas corresponds to that for which the boiler is prepared (see boiler data name plate). If different, the appliance must be converted for operation with the other type of gas (see converting appliance for other gas types). The dynamic gas supply (methane or LPG) pressure must also be checked according to the type used in the boiler, which must comply with the technical standards in force, as insufficient levels can reduce generator output and cause malfunctions.

Ensure correct gas cock connection. The gas supply pipe must be suitably dimensioned according to current regulations in order to guarantee correct gas flow rate to the burner even in conditions of maximum generator output and to guarantee appliance efficiency (technical specifications). The coupling system must conform to technical standards in force.

Fuel gas quality. The appliance was designed to operate with combustible gas free of impurities; otherwise it is advisable to fit special filters upstream of the appliance to restore the purity of the fuel.

Storage tanks (in case of supply from LPG depot).

- New LPG storage tanks may contain residual inert gases (nitrogen) that degrade the mixture delivered to the appliance causing functioning anomalies.
- Due to the composition of the LPG mixture, layering of the mixture components may occur during the period of storage in the tanks. This can cause a variation in the heating power of the mixture delivered to the appliance, with subsequent change in its performance.

1.5 HYDRAULIC CONNECTION.

Attention: in order not to void the heat primary exchanger warranty, before making the boiler connections, carefully clean the heating system (pipes, radiators, etc.) with special pickling or de-scaling products to remove any deposits that could compromise correct boiler operation.

A treatment of the heating and water system water is required, in compliance with the technical standards in force, in order to protect the system and the appliance from deposits (e.g. scale), slurry or other hazardous deposits.

Water connections must be made in a rational way using the couplings on the boiler template. The boiler safety valves outlet must be connected to a draining funnel. Otherwise, the manufacturer declines any responsibility in case of flooding if the drain valve cuts in.

Attention: the manufacturer declines all liability in the event of damage caused by the installation of an automatic filling system.

In order to meet the system requirements established by the technical regulation in force in relation to the pollution of drinking water, we recommend installing the IMMERGAS anti-backflow kit to be used upstream of the cold water inlet connection of the boiler. It is also recommended that the heat transfer fluid (e.g. water + glycol) entered in the primary circuit of the boiler (heating circuit), complies with the local regulations in force.

Attention: to preserve the duration and the efficiency features of the appliance, in the presence of water whose features can lead to the deposit of scale, installation of the "polyphosphate dispenser" kit is recommended.


1.6 ELECTRICAL CONNECTION.

The "Maio Eolo" boiler has an IPX5D protection rating for the entire appliance. Electrical safety of the appliance is reached only when it is correctly connected to an efficient earthing system as specified by current safety standards.

Attention: the manufacturer declines any responsibility for damage or physical injury caused by failure to connect the boiler to an efficient earth system or failure to comply with the reference standards.

Also ensure that the electrical installation corresponds to maximum absorbed power specifications as shown on the boiler data-plate. Boilers are supplied complete with an "X" type power cable without plug. The power supply cable must be connected to a 230V \pm 10% / 50Hz mains supply respecting L-N polarity and earth connection;  this network must also have a multi-pole circuit breaker with class III over-voltage category. When replacing the power supply cable, contact a qualified firm (e.g. the Authorised After-Sales Technical Assistance Service). The power cable must be laid as shown (Fig. 1-3).

In the event of mains fuses replacement on the modulation board, use a 3.15A fast fuses. For the main power supply to the appliance, never use adapters, multiple sockets or extension leads.

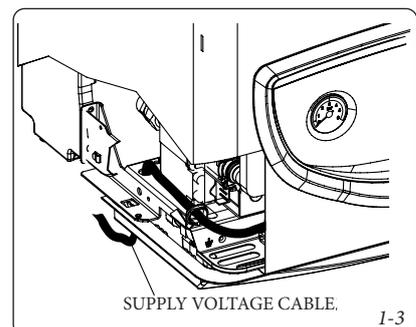

1.7 REMOTE CONTROLS AND ROOM CHRONO-THERMOSTATS (OPTIONAL).

The boiler is prepared for the application of room chrono-thermostats or remote controls, which are available as optional kits (Fig. 1-4). All Immergas chrono-thermostats are connected with 2 wires only. Carefully read the user and assembly instructions contained in the accessory kit.

- On/Off digital Immergas chrono-thermostat. The chrono-thermostat allows:
 - set two room temperature value: one for daytime (comfort temperature) and one for night-time (reduced temperature);
 - set a weekly program with four daily switch on and switch off times;
 - select the required operating mode from the various possible alternatives:
 - manual mode (with adjustable temperature).
 - automatic mode (with set program).
 - forced automatic mode (momentarily changing the temperature of the automatic program).

The chrono-thermostat is powered by two 1.5V LR 6 type alkaline batteries.

- Comando Amico Remoto remote control^{V2} (CAR^{V2}) with chrono-thermostat function. In addition to the functions described in the previous point, the CAR^{V2} panel enables the user to control all the important information regarding operation of the appliance and the heating system with the opportunity to easily intervene on the previously set parameters, without having to go to where the appliance is installed. The panel is provided with self-diagnosis to display any boiler functioning anomalies. The climate chrono-thermostat incorporated into the remote panel enables the system flow temperature to be adjusted to the actual needs of the room being heated, in order to obtain the desired room temperature with extreme precision and therefore with

evident saving in running costs. The CAR^{V2} is fed directly by the boiler by means of the same 2 wires used for the transmission of data between the boiler and device.


Important: if the system is subdivided into zones using the relevant kit, the CAR^{V2} must be used with its climate thermostat function disabled, i.e. it must be set to On/Off mode.

Comando Amico Remoto Remote Control ^{V2} or On/Off chrono-thermostat electrical connections (Optional). *The operations described below must be performed after having removed the voltage from the appliance.* Any thermostat or On/Off environment chrono-thermostat must be connected to clamps 40 and 41 eliminating jumper X40 (Fig. 3-2). Make sure that the On/Off thermostat contact is of the "clean" type, i.e. independent of the mains voltage, otherwise the P.C.B. would be damaged. Any Comando Amico Remoto Remote Control ^{V2} must be connected to clamps 41 and 44 eliminating jumper X40 on the P.C.B., paying attention not to invert the polarity in the connections (Fig. 3-2).


Important: if the Comando Amico Remoto Remote Control ^{V2} or any other On/Off chrono-thermostat is used, arrange two separate lines in compliance with current regulations regarding electrical systems. No boiler pipes must ever be used to earth the electric system or telephone lines. Ensure elimination of this risk before making the boiler electrical connections.

1.8 EXTERNAL PROBE (OPTIONAL).


The boiler is designed for the application of the Room Thermostat (Fig. 1-5) which is available as an optional kit. Refer to the relative instruction sheet for positioning of the external probe. The probe can be connected directly to the boiler electrical system and allows the max. system flow temperature to be automatically decreased when the external temperature increases, in order to adjust the heat supplied to the system according to the change in external temperature. The external probe always acts when connected independently from the presence or type of room thermostat used. The correlation between system flow temperature and outdoor temperature is determined by the position of the selector switch on the boiler control panel according to the curves shown in the diagram (Fig. 1-6). The electric connection of the external probe must be made on clamps 38 and 39 on the boiler P.C.B. (Fig. 3-2).

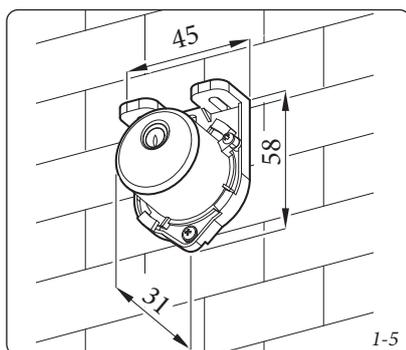

1-5

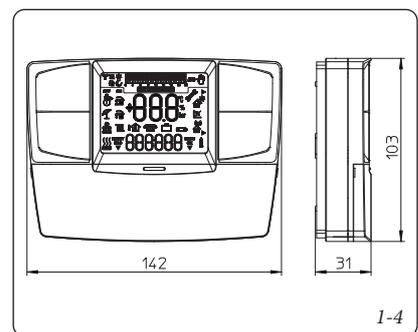

1-4

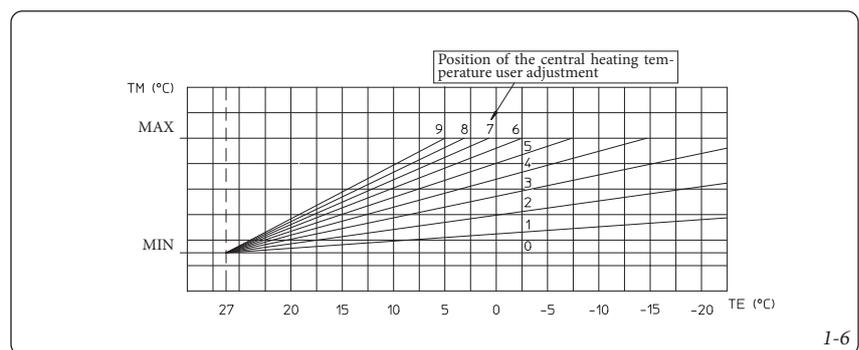

1-6

1.9 IMMERGAS FLUE SYSTEMS.

Immergas supplies various solutions separately from the boilers regarding the installation of air intake terminals and flue extraction, which are fundamental for boiler operation.

Attention: the boiler must only be installed together with an original Immergas air intake and flue gas exhaust system, except for the C6 configuration, in compliance with the standards in force. This system can be identified by an identification mark and special distinctive marking bearing the note: “not for condensing boilers”.

The flue exhaust pipes must not be in contact with or be near to flammable materials. Moreover, they must not pass through buildings or walls made of flammable material.

See following paragraphs for the detailed description of the kits available

Positioning of double lip seals. For correct positioning of lip seals on elbows and extensions, follow the direction of assembly given in figure (Fig. 1-7).

- Resistance factors and equivalent lengths. Each flue component has a *Resistance Factor* based on experimental tests and specified in the table below. The Resistance Factor for individual components is independent from the type of boiler on which it is installed and has a dimensionless size. It is however, conditioned by the temperature of the fluids that pass through the pipe and therefore, varies according to applications for air intake or flue exhaust. Each single component has a resistance corresponding to a certain length in metres of pipe of the same diameter; the so-called *equivalent length*, can be obtained from the ratio between the relative Resistance Factors. *All boilers have an experimentally obtainable maximum Resistance Factor equal to 100.* The maximum Resistance Factor allowed corresponds to the resistance encountered with the maximum allowed pipe length for each type of Terminal Kit. This information allows calculations to be made to verify the possibility of setting up various flue configurations.

- Coupling extension pipes and concentric elbows. To install push-fitting extensions with other elements of the flue, proceed as follows: Install the concentric pipe or elbow with the male side (smooth) on the female side (with lip seal) to the end stop on the previously installed element in order to ensure sealing efficiency of the coupling.

Attention: if the exhaust terminal and/or concentric extension pipe needs shortening, consider that the internal duct must always protrude by 5 mm with respect to the external duct.




- **N.B.:** for safety purposes, do not obstruct the boiler intake/exhaust terminal, even temporarily.
- **N.B.:** during the installation of the horizontal pipes one must install a section clamp with gusset every 3 metres for non-insulated pipes and one every 2 metres for insulated pipes.

Flue gas separator adjustment. For correct functioning of the boiler it is necessary to regulate the flue gas shutter positioned on the air/flue gas sample points (Fig. 1-8).

Adjustment is carried out by loosening the front retainer screw and moving the indicator to the correct position, aligning its value to the horizontal reference. Once adjustment has been performed, tighten the screw to fix the separator. The appropriate adjustment is chosen based on type of pipe and its extension: this calculation can be made using specific tables.

Intake diaphragm installation. For correct boiler functioning with Ø 80 separator kits and drain measuring > 1 m a diaphragm must be installed on the sealed chamber intake hole and before the intake pipe (Fig. 1-9). The appropriate diaphragm is chosen based on type of pipe and its maximum extension: this calculation can be made using the tables below:











N.B.: the diaphragms are supplied together with the boiler as standard.

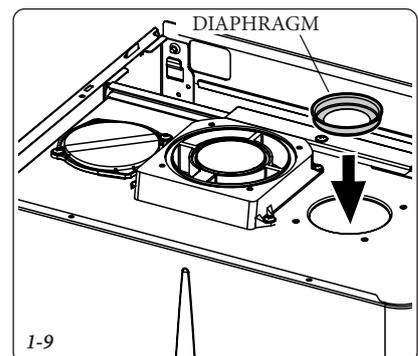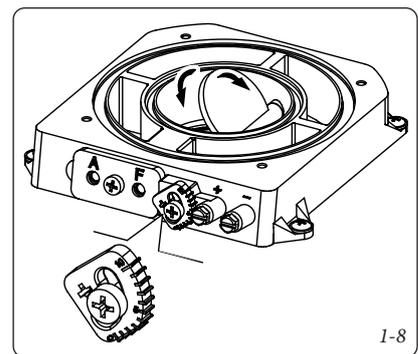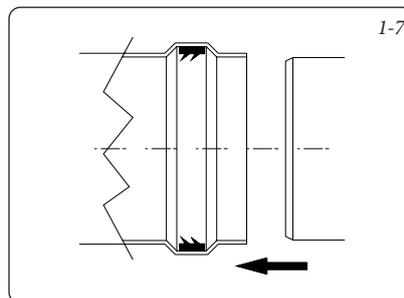

Shutter regulation table
Maior Eolo 32.

Type of installation (extension of duct in metres)	Flue gas shutter notch				
	3	4	5	6	10
Ø 60/100 horizontal concentric kit	-	-	From 0 to 0.5	From 0.5 to 1.5	From 1.5 to 3.0
Ø 60/100 vertical concentric kit	-	-	From 0 to 2.2	From 2.2 to 3.7	From 3.7 to 4.7
Ø 80/125 horizontal concentric kit	-	-	From 0 to 0.5	From 0.5 to 4.6	From 4.6 to 7.4
Ø 80/125 vertical concentric kit			From 0 to 5.4	From 5.4 to 9.5	From 9.5 to 12.2
Ø 80 vertical separator kit without bends	*From 0 to 20	*From 20 to 40	**From 0 to 22	-	**From 22 to 32
Ø 80 horizontal separator kit with two bend	*From 0 to 16	*From 16 to 35	**From 0 to 17	-	**From 17 to 28
Direct intake kit and Ø 80 drain in B ₂₂ configuration	-	From 0 to 1	-	From 1 to 12	-
* These maximum extension values are considered intake with 1 metre exhaust pipe.					
** These maximum extension values are considered in draining with 1 metre intake pipe and Ø 50 diaphragm on the intake hole.					

Tables of Resistance Factors and Equivalent Lengths.

TYPE OF DUCT	Resistance Factor (R)	Equivalent length in m of concentric pipe Ø 60/100	Equivalent length in m of concentric pipe Ø 80/125	Equivalent length of pipe in m Ø 80
Concentric pipe Ø 60/100 m 1 	Intake and Exhaust 16.5	m 1	m 2.8	Intake m 7.1 Exhaust m 5.5
Concentric bend 90° Ø 60/100 	Intake and Exhaust 21	m 1.3	m 3.5	Intake m 9,1 Exhaust m 7.0
Concentric bend 45° Ø 60/100 	Intake and Exhaust 16.5	m 1	m 2.8	Intake m 7.1 Exhaust m 5.5
Terminal complete with concentric horizontal intake-exhaust Ø 60/100 	Intake and Exhaust 46	m 2.8	m 7.6	Intake m 20 Exhaust m 15
Concentric horizontal intake- exhaust terminal Ø 60/100 	Intake and Exhaust 32	m 1.9	m 5.3	Intake m 14 Exhaust m 10.6
Concentric vertical intake-exhaust terminal Ø 60/100 	Intake and Exhaust 41.7	m 2.5	m 7	Intake m 18 Exhaust 14
Concentric pipe Ø 80/125 m 1 	Intake and Exhaust 6	m 0.4	m 1.0	Intake m 2.6 Exhaust m 2.0
Concentric bend 90° Ø 80/125 	Intake and Exhaust 7.5	m 0.5	m 1.3	Intake m 3.3 Exhaust m 2.5
Concentric bend 45° Ø 80/125 	Intake and Exhaust 6	m 0.4	m 1.0	Intake m 2.6 Exhaust m 2.0
Terminal complete with concentric vertical intake-exhaust Ø 80/125 	Intake and Exhaust 33	m 2.0	m 5.5	Intake m 14.3 Exhaust m 11.0
Concentric vertical intake-exhaust terminal Ø 80/125 	Intake and Exhaust 26.5	m 1.6	m 4.4	Intake m 11.5 Exhaust m 8.8
Terminal complete with concentric horizontal intake-exhaust Ø 80/125 	Intake and Exhaust 39	m 2.3	m 6.5	Intake m 16.9 Exhaust m 13
Concentric horizontal intake- exhaust terminal Ø 80/125 	Intake and Exhaust 34	m 2.0	m 5.6	Intake m 14.8 Exhaust m 11.3
Concentric adapter from Ø 60/100 to Ø 80/125 with condensate trap 	Intake and Exhaust 13	m 0.8	m 2.2	Intake m 5.6 Exhaust m 4.3
Concentric adapter from Ø 60/100 to Ø 80/125 	Intake and Exhaust 2	m 0.1	m 0.3	Intake m 0.8 Exhaust m 0.6
Pipe Ø 80 m 1 (with and without insulation) 	Intake 2.3 Exhaust 3	m 0.1 m 0.2	m 0.4 m 0.5	Intake m 1.0 Exhaust m 1.0
Complete air intake terminal Ø 80 m 1 (with or without insulation) 	Intake 5	m 0.3	m 0.8	Intake m 2.2
Intake terminal Ø 80 Exhaust terminal Ø 80 	Intake 3 Exhaust 2.5	m 0.2 m 0.1	m 0.5 m 0.4	Intake m 1.3 Exhaust m 0.8
Bend 90° Ø 80 	Intake 5 Exhaust 6.5	m 0.3 m 0.4	m 0.8 m 1.1	Intake m 2.2 Exhaust m 2.1
Bend 45° Ø 80 	Intake 3 Exhaust 4	m 0.2 m 0.2	m 0.5 m 0.6	Intake m 1.3 Exhaust m 1.3
Parallel split Ø 80 from Ø 60/100 to Ø 80/80 	Intake and Exhaust 8.8	m 0.5	m 1.5	Intake m 3.8 Exhaust m 2.9

INSTALLER

USER

MAINTENANCE TECHNICIAN

1.10 OUTDOOR INSTALLATION IN A PARTIALLY PROTECTED AREA.

N.B.: a partially protected location is one in which the appliance is not exposed to the direct action of the weather (rain, snow, hail, etc.).

This type of installation is only possible when permitted by the laws in force in the appliance's country of destination.

• Configuration type B, open chamber and forced draught.

Using the special coverage kit one can achieve direct air intake (Fig. 1-10) and fumes exhaust in a single flue or directly outside. In this configuration it is possible to install the boiler in a partially protected place. In this configuration the boiler is classified as type B.

With this configuration:

- air intake takes place directly from the environment in which the appliance is installed (outside);
- the fumes exhaust must be connected to its own single flue (B₂₃) or ducted directly outside via a vertical terminal for direct exhaust (B₅₃) or via an Immergas ducting system (B₅₃).

The technical regulations in force must be respected.

Flue gas separator adjustment. For correct functioning of the boiler in configuration with direct air intake it is necessary to regulate the flue gas shutter according to that stated in the relative tables (page 10).


- **Coverage kit assembly (Fig. 1-11).** Remove the two plugs and the gaskets present from the two lateral holes with respect to the central one. Now cover the right intake hole using the relevant plate, fixing it onto the left side using the 2 previously-removed screws. Install the Ø 80 outlet flange on the central hole of the boiler, taking care to insert the gasket supplied with the kit and tighten by means of the screws provided. Install the upper cover, fixing it using the 4 screws present in the kit, positioning the relevant gaskets. Engage the 90° Ø 80 bend with the male end (smooth) in the female end (with lip seal) of the Ø 80 flange unit until it stops.

Introduce the gasket, making it run along the bend. Fix it using the metal sheet plate and tighten by means of the clips present in the kit, making sure to block the 4 gasket flaps. Fit the male end (smooth) of the exhaust terminal into the female end of the bend 90° Ø 80, making sure that the relevant wall sealing plate is already fitted; this will ensure hold and joining of the elements making up the kit.


Max. length of exhaust duct. The flue pipe (vertical or horizontal) can be extended to a max. length of 12 linear metres, using insulated pipes (Fig. 1-27). To prevent problems of flue gas condensate in the exhaust pipe Ø 80, due to flue gas cooling through the wall, the length of the pipe (not insulated) must be limited to just 5 m.

• Configuration without cover kit in a partially protected location (type C boiler).

By leaving the side plugs fitted, it is possible to install the appliance externally, in partially covered places, without the cover kit. Installation takes place using the Ø 60/100 and Ø 80/125 concentric horizontal intake/ exhaust kits. Refer to the paragraph relative to indoor installation. In this configuration the upper cover kit guarantees additional protection for the boiler. It is recommended but not compulsory.

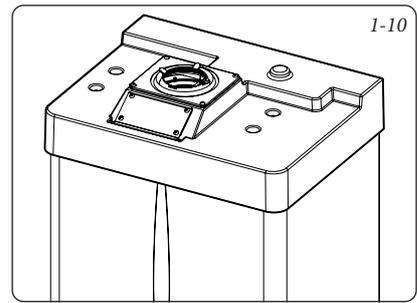


1-10

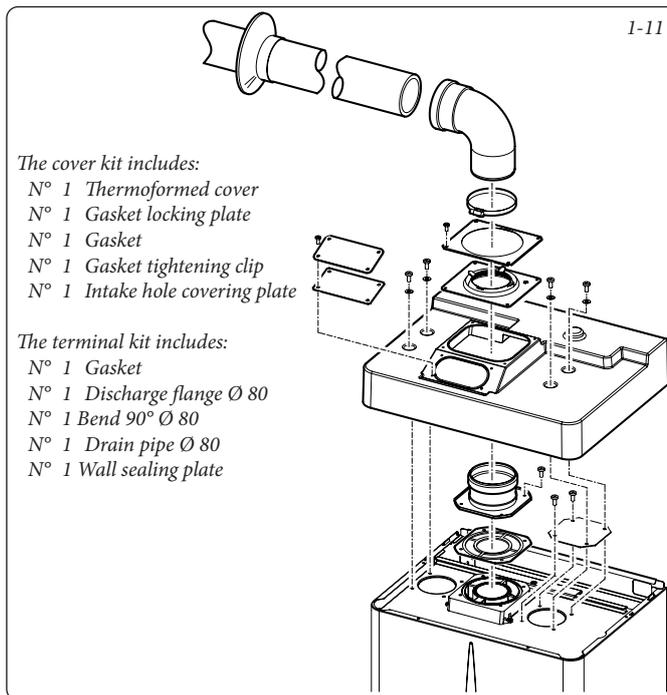

1-11

- The cover kit includes:
- N° 1 Thermoformed cover
 - N° 1 Gasket locking plate
 - N° 1 Gasket
 - N° 1 Gasket tightening clip
 - N° 1 Intake hole covering plate
- The terminal kit includes:
- N° 1 Gasket
 - N° 1 Discharge flange Ø 80
 - N° 1 Bend 90° Ø 80
 - N° 1 Drain pipe Ø 80
 - N° 1 Wall sealing plate

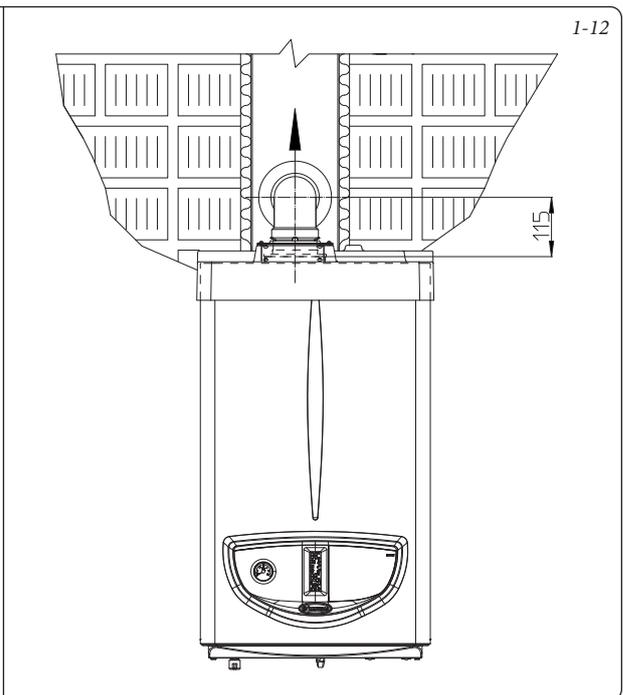

1-12

1.11 CONCENTRIC HORIZONTAL KIT INSTALLATION.

Type C configuration, sealed chamber and fan assisted.

The position of the terminal (in terms of distances from openings, overlooking buildings, floor, etc.) must be in compliance with the regulations in force.

This terminal is connected directly to the outside of the building for air intake and flue exhaust. The horizontal kit can be installed with the rear, right side, left side or front outlet. For installation with frontal outlet, one must use the fixing plate and a concentric bend coupling in order to ensure sufficient space to carry out the tests required by law upon commissioning.


Horizontal intake-exhaust kit Ø 60/100 Kit assembly (Fig. 1-13): install the bend with flange (2) onto the central hole of the boiler inserting the gasket (1) and tighten using the screws included in the kit. Couple the terminal pipe (3) with the male end (smooth) into the female end of the bend (with lip seals) up to the stop; making sure that the internal wall sealing plate and external wall sealing plate have been fitted, this will ensure sealing and joining of the elements making up the kit.

• Extensions for Ø 60/100 horizontal kit (Fig. 1-14). The kit with this configuration can be extended up to a *max. 2,82 horizontal m* including the terminal with grid and excluding the concentric bend leaving the boiler. This configuration corresponds to a resistance factor of 100. In this case the special extensions must be requested.

NOTE: when the boiler is installed in areas where very cold temperatures can be reached, a special anti-freeze kit is available that can be installed as an alternative to the standard kit.

Horizontal intake-exhaust kit Ø 80/125 Kit assembly (Fig. 1-22): install the bend with flange (2) onto the central hole of the boiler inserting the gasket (1) and tighten using the screws included in the kit. Fit the male end (smooth) of the adapter (3) up to the end stop on the female side of the bend (2) (with lip seal). Fit the Ø 80/125 (4) concentric terminal pipe with the male end (smooth) to the female end of the adapter (3) (with lip gasket) up to the end stop; making sure that the internal and external wall sealing plates have been fitted; this will ensure sealing and joining of the elements making up the kit.

• Extensions for horizontal kit Ø 80/125 (Fig. 1-16). The kit with this configuration can be extended up to a *max. horizontal length of 7.3 m* including the terminal with grid and excluding the concentric bend leaving the boiler and the adapter Ø 60/100 in Ø 80/125. This configuration corresponds to a resistance factor of 100. In this case the special extensions must be requested.

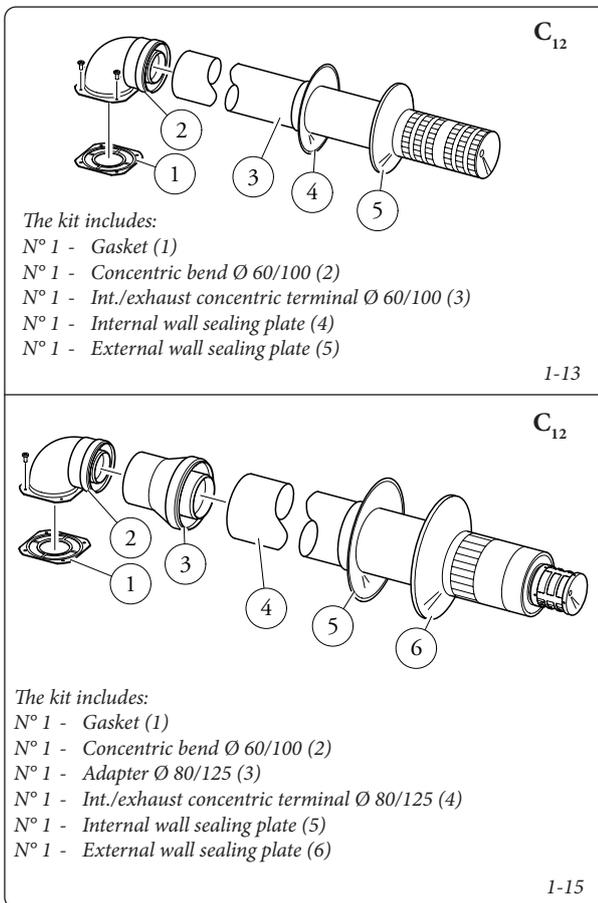

1.12 CONCENTRIC VERTICAL KIT INSTALLATION.

Type C configuration, sealed chamber and fan assisted.

Concentric vertical intake and exhaust kit. This vertical terminal is connected directly to the outside of the building for air intake and flue exhaust.

N.B.: the vertical kit with aluminium tile enables installation on terraces and roofs with a maximum slope of 45° (approx 25°) and the height between the terminal cap and half-shell (374 mm for Ø 60/100 and 260 mm for Ø 80/125) must always be observed.

Vertical kit with aluminium tile Ø 60/100.

Kit assembly (Fig. 1-17): install the concentric flange (2) on the central hole of the boiler, positioning gasket (1) with the circular projections downwards in contact with the boiler flange, and tighten using the screws contained in the kit. Installation of the fake aluminium tile: replace the tiles with the aluminium sheet (4), shaping it to ensure that rainwater runs off. Position the fixed half-shell (6) on the aluminium tile and insert the intake-exhaust pipe (5). Fit the Ø 60/100 (3) concentric terminal pipe with the

male side (5) (smooth) into the flange (2) up to the end stop; making sure that the wall sealing plate has been fitted (3), this will ensure sealing and joining of the elements making up the kit.





- Extensions for vertical kit Ø 60/100 (Fig. 1-18). The kit with this configuration can be extended to a *max. straight vertical length of 4,7 m*, including the terminal. This configuration corresponds to a resistance factor of 100. In this case specific extensions must be requested.

Vertical kit with aluminium tile Ø 80/125.

Kit assembly (Fig. 1-19): to install the kit Ø 80/125 one must use the flanged adapter kit in order to install the flue system Ø 80/125. Install the flanged adaptor (2) on the central hole of the boiler, positioning gasket (1) with the circular projections downwards in contact with the boiler flange and tighten using the screws contained in the kit. Installation of the fake aluminium tile: replace the tiles with the aluminium sheet (4), shaping it to ensure that rainwater runs off. Position the fixed half-shell (5) on the aluminium tile and insert the intake-exhaust pipe (7). Fit the Ø 80/125 concentric terminal pipe with the male side (smooth) to the female side of the adapter (1)

(with lip gaskets) up to the end stop; making sure that the wall sealing plate (3) has been fitted, this will ensure sealing and joining of the elements making up the kit.

- Extensions for vertical kit Ø 80/125 (Fig. 1-20). The kit with this configuration can be extended up to a *max. length of 12,2 m* including the terminal. If additional components are assembled, the length equivalent to the maximum allowed must be subtracted. In this case specific extensions must be requested.

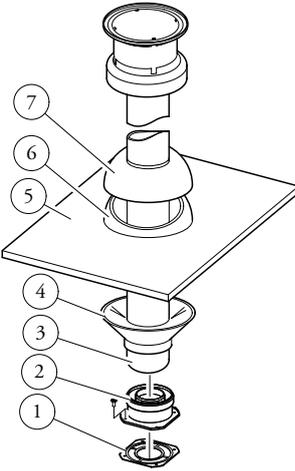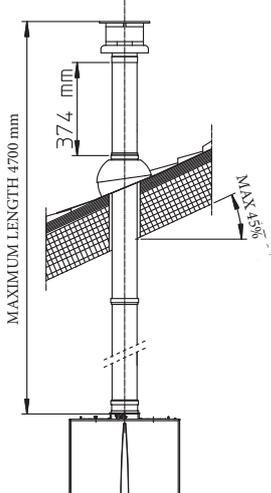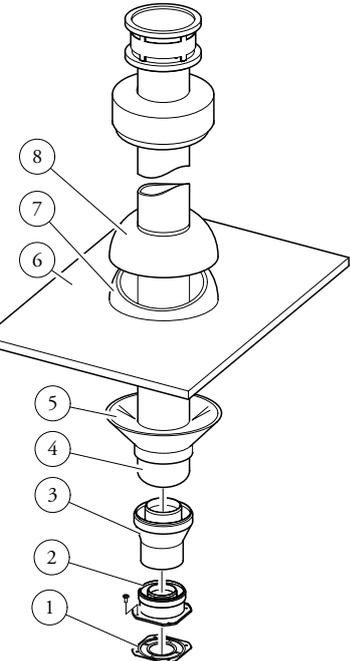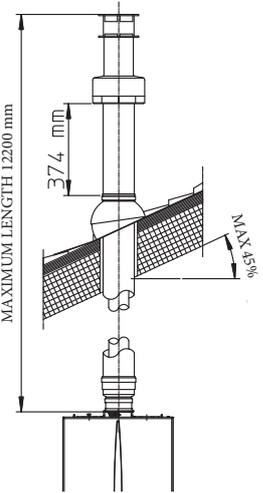 <p style="text-align: right;">C₃₂</p> <p><i>The fixing plate kit includes:</i> N° 1 - Gasket (1) N° 1 - Female concentric flange (2)</p> <p><i>The vertical kit includes:</i> N° 1 - Int./exhaust concentric pipe Ø 60/100 (3) N° 1 - Wall sealing plate (4) N° 1 - Aluminium tile (5) N° 1 - Fixed half-shell (6) N° 1 - Mobile half-shell (7)</p> <p style="text-align: right;">1-17</p>	 <p style="text-align: right;">C₃₂</p> <p style="text-align: right;">1-18</p>
 <p style="text-align: right;">C₃₂</p> <p><i>The kit includes:</i> N° 1 - Gasket (1) N° 1 - Female concentric flange (2) N° 1 - Adapter Ø 80/125 (3) N° 1 - Int./exhaust concentric pipe Ø 80/125 (4) N° 1 - Wall sealing plate (5) N° 1 - Aluminium tile (6) N° 1 - Fixed half-shell (7) N° 1 - Mobile half-shell (8)</p> <p style="text-align: right;">1-19</p>	 <p style="text-align: right;">C₃₂</p> <p style="text-align: right;">1-20</p>

1.13 SEPARATOR KIT INSTALLATION.
Type C configuration, sealed chamber and fan assisted.


This kit allows air to come in from outside the building and the exhaust to exit from the chimney, flue or intubated duct through divided flue exhaust and air intake pipes. Combustion products are expelled from pipe (S). Air is taken in through pipe (A) for combustion. Both ducts can be routed in any direction.

Separator kit Ø 80/80. Kit assembly (Fig. 1-21): install the flange (4) on the central hole of the boiler, interposing the gasket (1) and tighten with the flat-tipped hex screws included in the kit. Remove the flat flange present in the lateral hole with respect to the central one (according to needs) and replace it with the flange (3), positioning the gasket (2) already present in the boiler and tighten using the supplied self-threading screws.

Fit the male end (smooth) to the bends (5) in the female end of the flanges (3 and 4). Fit the intake terminal (6) with the male section (smooth) in the female section of the bend (5) up to the end stop, ensuring that the internal and external wall sealing plates are fitted. Fit the exhaust pipe (9) with the male end (smooth) to the female end of the bend (5) up to the stop; making sure that the internal wall sealing plate has been fitted, this will ensure sealing and joining of the elements making up the kit.

- Installation clearances (Fig. 1-22). The minimum installation clearance measurements of the Ø 80/80 separator terminal kit have been stated in some limit conditions.
- Figure 1-23 shows the configuration with vertical exhaust and horizontal intake.

- Extensions for separator kit Ø 80/80. The max. vertical straight length (without bends) usable for Ø 80 intake and exhaust pipes is 41 metres of which 40 intake and 1 exhaust. This total length corresponds to a resistance factor of 100. The total usable length obtained by summing the Ø 80 intake and exhaust pipe lengths can reach, as a maximum, the values provided in the following table. If *mixed accessories or components are used*, the maximum extension can be calculated by using a resistance factor for each component or its *equivalent length*. The sum of these resistance factors must not exceed 100.

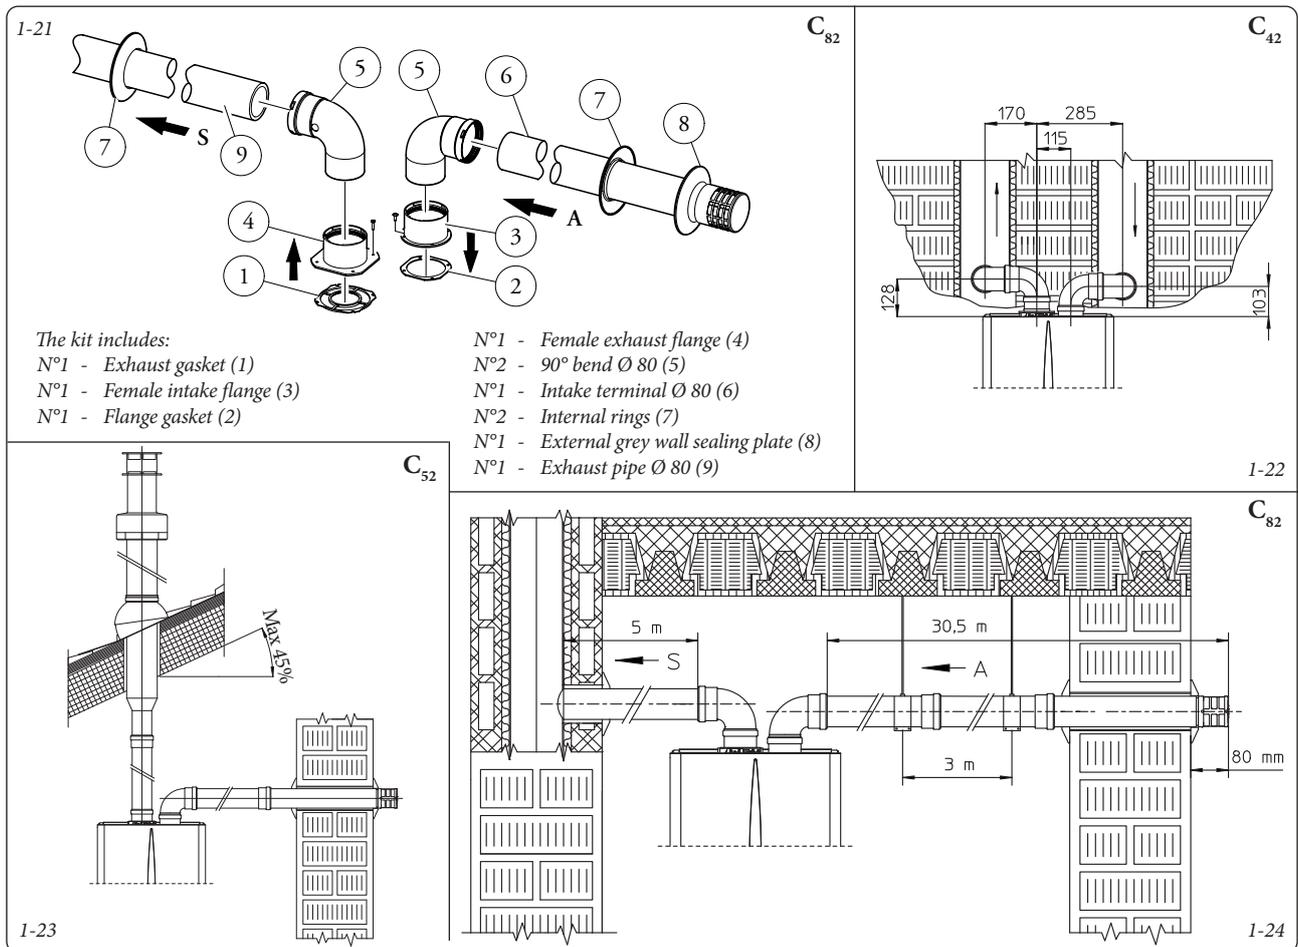

Maximum usable lengths (including intake terminal with grill and two 90° bends)			
NON-INSULATED PIPE		INSULATED PIPE	
Drain (metres)	Intake (metres)	Drain (metres)	Intake (metres)
1	36.0*	6	29.5*
2	34.5*	7	28.0*
3	33.0*	8	26.5*
4	32.0*	9	25.5*
5	30.5*	10	24.0*
* The air intake pipe can be increased to 2.5 metres if the exhaust bend is eliminated, 2 metres if the air intake bend is eliminated, 4.5 metres eliminating both bends.		11	22.5*
		12	21.5*

Attention: the boiler is designed to evacuate the combustion products up to a maximum extension of 27 linear metres from the exhaust, with 1 m plus 90° bend at the intake. If the

installation requires a development of the flue to the discharge that exceeds the recommended 12 m, due consideration must be given to the formation of condensate that could take place

inside the pipe and insulated flue kits “NOT for condensing boilers” must be used.

- Temperature loss in flue ducts (Fig. 1-24). To prevent problems of flue gas condensate in the exhaust pipe $\varnothing 80$, due to fume cooling through the wall, *the length of the exhaust pipe must be limited to just 5 metres*. If longer distances must be covered, use $\varnothing 80$ pipes with insulation (see insulated separator kit $\varnothing 80/80$ chapter).


Insulated separator kit $\varnothing 80/80$. Kit assembly (Fig. 1-25): install the flange (4) on the central hole of the boiler, interposing the gasket (1) and tighten with the flat-tipped hex screws included in the kit. Remove the flat flange present in the lateral hole with respect to the central one (according to needs) and replace it with the flange (3), positioning the gasket (2) already present in the boiler and tighten using the supplied self-threading screws. Insert and slide cap (6) onto bend (5) from the male side (smooth), and join bends (5) with the male side (smooth) in the female side of flange (3). Fit bend (11) with the male side (smooth) into the female side of flange (4). Fit the male end (smooth) of the intake terminal (7) up to the stop on the female end of the bend (5), making sure you have already inserted the wall sealing plates (8 and 9) that ensure correct installation between pipe and wall, then fix the closing cap (6) on the terminal (7). Join the exhaust pipe (10) with the male side (smooth) in the female side of the bend (11) to the end stop, ensuring that the wall sealing plate (8) is already inserted for correct installation between the pipe and flue.

- Insulation of separator terminal kit. Whenever there are flue gas condensate problems in the exhaust pipes or on the external surface of the intake pipes, on request Immergas supplies insulated intake-exhaust pipes. Insulation may be necessary on the exhaust pipe, due to excessive loss of temperature of the flue gas on their route. Insulation may be necessary on the intake pipe as the air entering (if very cold) may cause the outside of the pipe to fall below the dew point of the environmental air. The figures (Fig. 1-26 and 1-27) illustrate different applications of insulated pipes.

Insulated pipes are formed of a $\varnothing 80$ internal concentric pipe and a $\varnothing 125$ external pipe with static air space. It is not technically possible to start with both $\varnothing 80$ elbows insulated, as clearances will not allow it. However starting with an insulated elbow is possible by choosing either the intake or exhaust pipe. When starting with the insulated intake bend it must be engaged on its flange until it is taken up to end stop on the flue gas exhaust flange, a situation that takes the two intake flue gas exhaust outlets to the same height.

- Temperature loss in insulated flue ducting. To prevent problems of flue gas condensate in the insulated exhaust pipe $\varnothing 80$, due to flue gas cooling through the wall, *the length of the pipe must be limited to 12 metres*. The figure (Fig. 1-27) illustrates a typical insulation application in which the intake pipe is short and the exhaust pipe is very long (over 5 m). The entire intake pipe is insulated to prevent moist air in the place where the boiler is installed, in contact with the pipe cooled by air entering from the outside. The entire exhaust pipe, except the elbow leaving the splitter is insulated to reduce heat loss from the pipe, thus preventing the formation of fume condensate.

N.B.: when installing the insulated pipes, a section clamp with gusset must be installed every 2 metres.

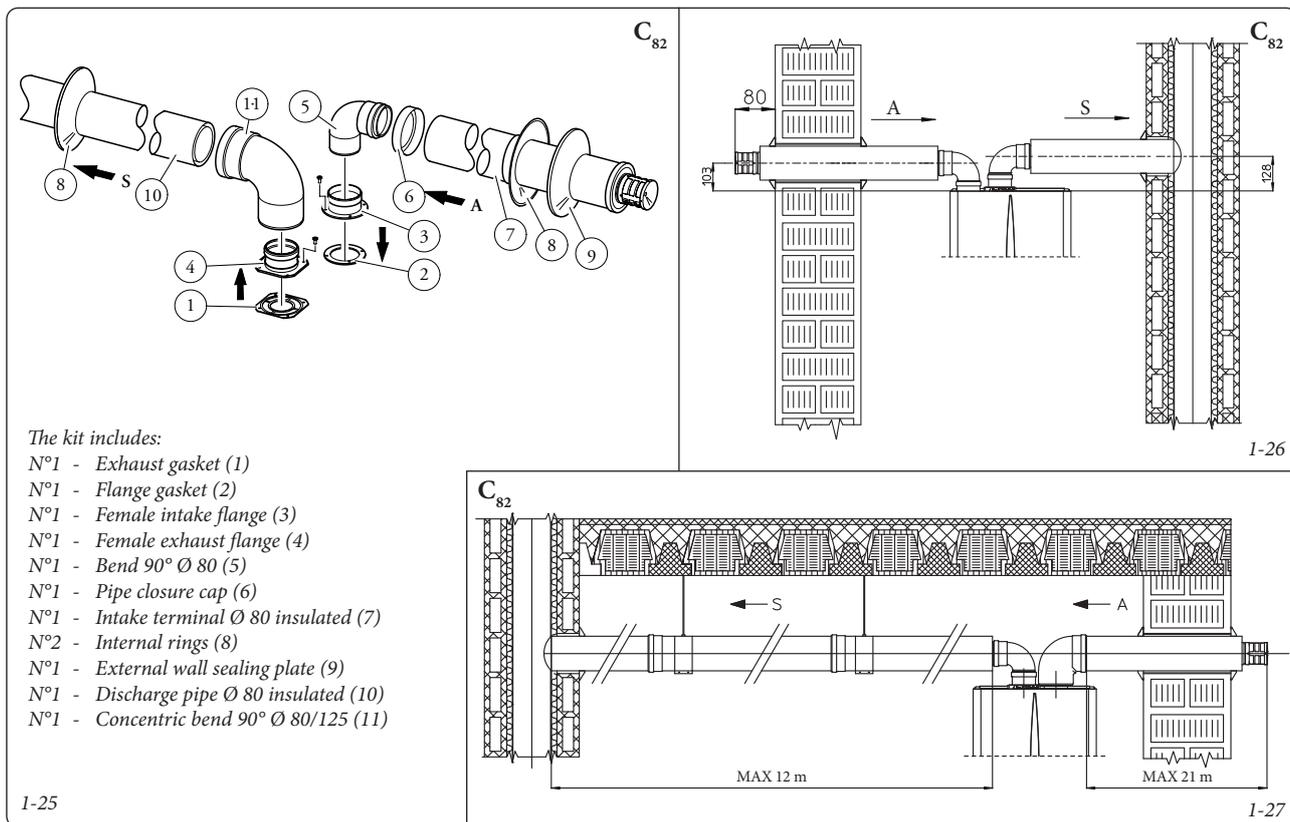

1.14 DUCTING OF FLUES OR TECHNICAL SLOTS.

Ducting is an operation through which, via the introduction of one or more relevant pipes, one achieves a system for the evacuation of the combustion products of a gas appliance, made up from the coupling of an existing or new ducting pipe with a chimney, flue or technical slot (also in new buildings). Ducting requires ducts declared to be suitable for the purpose by the manufacturer, following the installation and user instructions, provided by the manufacturer and the requirements of the standards in force.

1.15 CONFIGURATION TYPE B₂₂, OPEN CHAMBER AND FORCED DRAUGHT FOR INDOORS.

The appliance can be installed inside buildings in B₂₃ mode; in this case, all technical rules and national and local regulations in force, must be complied with.

- type B open chamber boilers must not be installed in places where commercial, artisan or industrial activities take place, which use products that may develop volatile vapours or substances (e.g. acid vapours, glues, paints, solvents, combustibles, etc.), as well as dusts (e.g. dust deriving from the working of wood, coal fines, cement, etc.), which may be harmful for the components of the appliance and jeopardise operation.
- in B₂₂ configuration, unless otherwise provided for by local regulations in force: the boilers must not be installed in bedrooms, bathrooms or bedsits. They must neither be installed in rooms containing solid fuel heat generators nor in rooms communicating with said rooms.
- The installation of appliances in B₂₃ configurations are only recommended in places that are not lived in and which are permanently ventilated.

The suitable kit referred to in paragraph 1.10 must be used for installation.

1.16 FLUE EXHAUST TO FLUE/CHIMNEY.

The flue exhaust does not necessarily have to be connected to a branched type traditional flue. The flue exhaust, for boiler clots installed in C configuration, can be connected to a special LAS type multiple flue. For B_c configurations, exhaust is only allowed into individual chimney or directly into the external atmosphere via a suitable terminal. Multiple and combined flues must be specially designed according to the calculation method and requirements of the technical standards in force, by a professionally qualified company. Chimney or flue sections for connection of the flue exhaust pipe must comply with requisites of technical standards in force.

1.17 FLUES, CHIMNEYS, CHIMNEY POTS AND TERMINALS.

The flues, chimneys and chimney pots for the evacuation of combustion products must be in compliance with applicable standards. Chimneys and roof-installed exhaust terminals must comply with the outlet height and with the distance from technical volumes set forth by the technical standards in force.

Positioning the wall flue exhaust terminals. The wall flue exhaust terminals must:

- be installed on external perimeter walls of the building;
- be positioned according to the minimum distances specified in current technical standards.

Combustion products exhaust of natural draught or fan assisted appliances in open-top closed environments. In spaces closed on all sides with open tops (ventilation pits, courtyards etc.), direct combustion product exhaust is allowed for natural draught or fan assisted gas appliances with a heat input range from 4 to 35 kW, provided the conditions as per the current technical standards are respected.

1.18 SYSTEM FILLING.

Once the boiler is connected, proceed with system filling via the filling cock (Fig. 2-2). Filling is performed at low speed and using the automatic vent functions to ensure release of air bubbles in the water via the boiler and heating system vents. The boiler has a built-in automatic venting valve on the circulator. *Check if the cap is loose.* Open the radiator vent valves.

Close radiator vent valves when only water escapes from them.

Close the filling cock when the boiler pressure gauge indicates approx. 1.2 bar.

N.B.: during these operations turn on the circulation pump at intervals, by means of the stand-by/summer winter button (2) positioned on the control panel. *Vent the circulation pump by loosening the front cap and keeping the motor running.*

Screw the cap back on after the operation.

1.19 GAS SYSTEM START-UP.

To start up the system, refer to the technical standard in force.

In particular, for new gas systems:

- open windows and doors;
- avoid presence of sparks or open flames;
- bleed all air from the pipelines;
- check that the internal system is properly sealed according to the specifications set forth by technical regulations in force.

1.20 BOILER START UP (IGNITION).

To commission the boiler (the operations listed below must only be performed by a qualified firm and without any unauthorised persons):

- check that the internal system is properly sealed according to the specifications set forth by technical regulations in force;
- make sure that the type of gas used corresponds to boiler settings;
- Check that there are external factors that may cause the formation of fuel pockets;
- switch the boiler on and check correct ignition;
- make sure that the gas flow rate and relevant pressure values comply with those given in the manual (Par. 3.18);
- ensure that the safety device intervenes in the event of gas supply failure and check the relative intervention time;
- check activation of the main switch located upstream from the boiler and in the boiler;
- check that the intake and/or exhaust terminals (if fitted) are not blocked.

The boiler must not be started up even if only one of the checks should be negative.


1.21 CIRCULATION PUMP.

The boilers are supplied with a built-in circulation pump with 3-position electric speed control. The boiler does not operate correctly with the circulation pump on first speed. To ensure optimal boiler operation, in the case of new systems (single pipe and module) it is recommended to use the pump at maximum speed. The circulation pump is already fitted with a capacitor.

Pump release. If, after a prolonged period of inactivity, the circulation pump is blocked, unscrew the front cap and turn the motor shaft using a screwdriver. Take great care during this operation to avoid damage to the motor.

By-pass Regulation (part. 25 Fig. 1-29). If necessary, the by-pass can be adjusted according to system requirements from a minimum (by-pass excluded) to a maximum (by-pass inserted) represented by the graph (Fig. 1-28). Make the regulation using a flat head screwdriver, turn clockwise and insert the by-pass, anti-clockwise it is excluded.

Head available to the system.

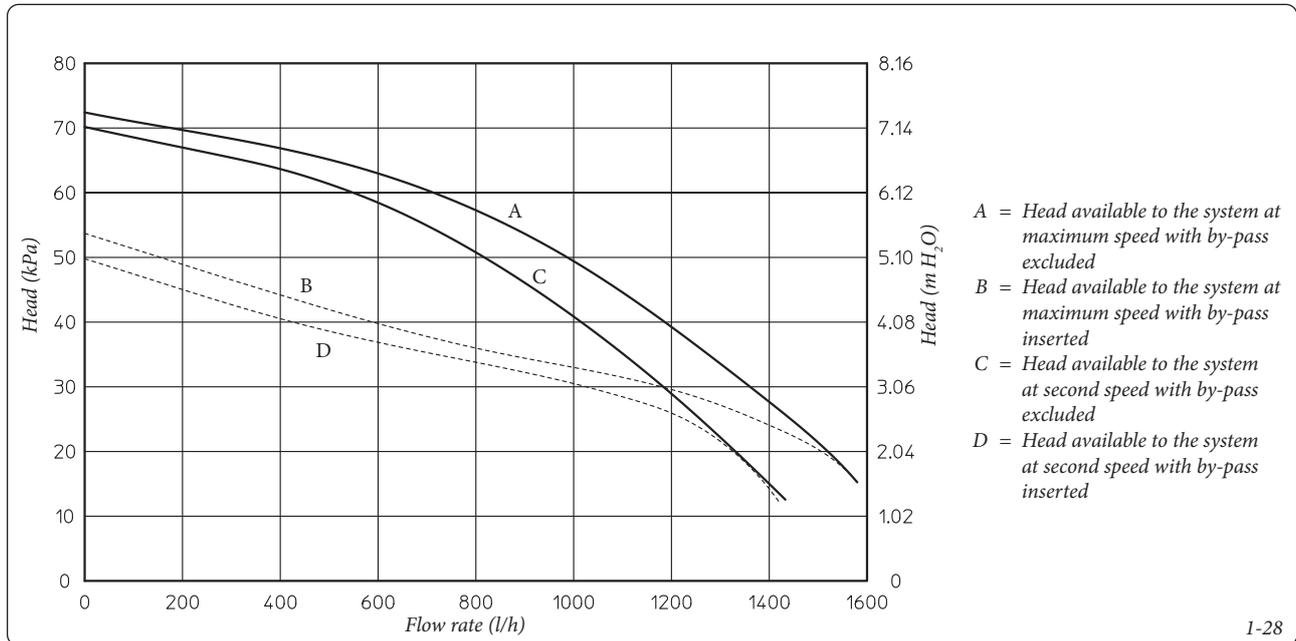

1-28

1.22 KITS AVAILABLE ON REQUEST.


- System shut off valves kit. The boiler is designed for installation of system interception cocks to be placed on flow and return pipes of the connection assembly. This kit is particularly useful for maintenance as it allows the boiler to be drained separately without having to empty the entire system.
- System zone control unit Kit. If the heating system is to be divided into several zones (**max. three**), in order to interlock them with separate adjustments and to keep water flow rate high for each zone, Immergas supplies zone system kits by request.

- Polyphosphate dispenser kit. The polyphosphate dispenser reduces the formation of lime-scale and preserves the original heat exchange and domestic hot water production conditions. The boiler is prepared for application of the polyphosphate dispenser kit.
- Cover kit. If installed outdoors in a partially sheltered place with direct air intake, it is compulsory to mount the appropriate top protection cover for the correct functioning of the water heater and to protect it from adverse weather conditions (Fig. 1-6); or, if installed indoors in configuration type B, it is compulsory to mount the appropriate top protection cover along with the flue exhaust kit.

- Anti freeze kit with resistance (on request). If the boiler is installed in a place where the temperature falls below -5°C and in the event there is no gas, the appliance can freeze. To prevent freezing of the domestic hot water system, an anti freeze kit with an electrical resistance can be fitted from the relative cable and from a control thermostat.

The above-mentioned kits are supplied complete with instructions for assembly and use.

1.23 BOILER COMPONENTS.

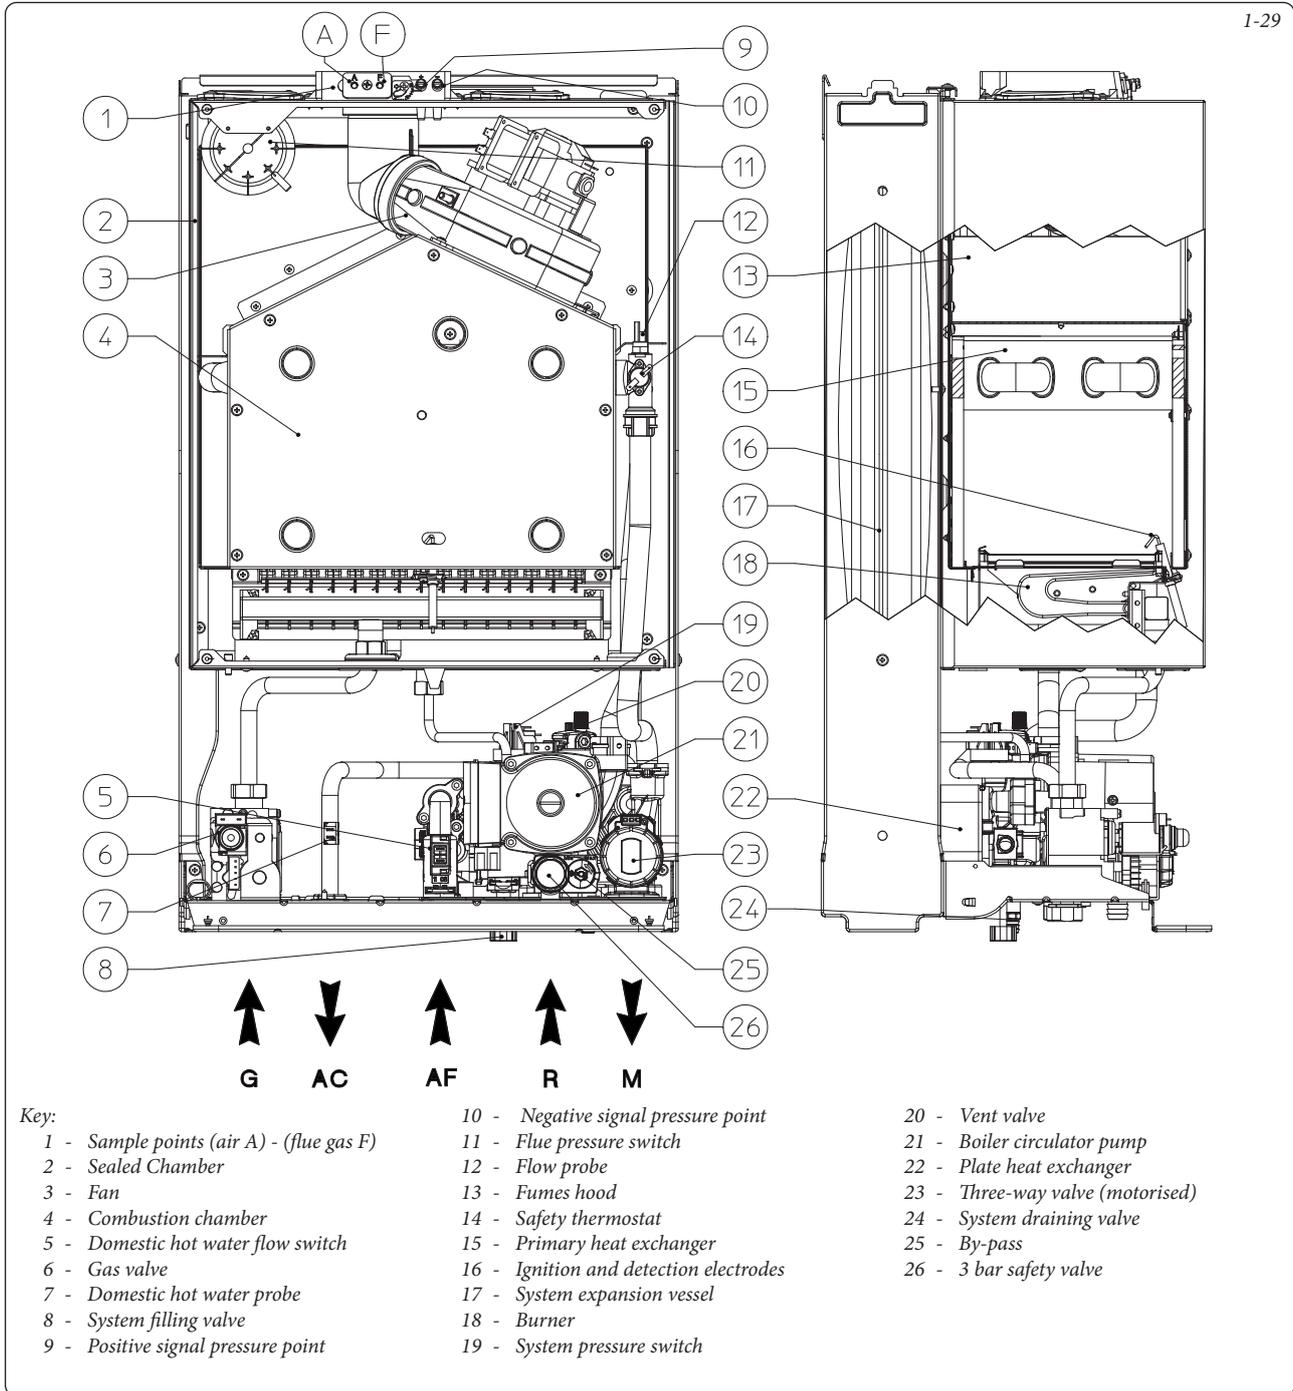

2 USE AND MAINTENANCE INSTRUCTIONS

2.1 CLEANING AND MAINTENANCE.

Attention: to preserve the boiler's integrity and keep the safety features, performance and reliability, which distinguish it, unchanged over time, you must execute maintenance operations on a yearly basis in compliance with what is stated in the relative point at "annual check and maintenance of the appliance", in compliance with national, regional, or local standards in force.

2.2 GENERAL WARNINGS.

Never expose the wall-mounted boiler to direct vapours from a cooking surface.

Use of the boiler by unskilled persons or children is strictly prohibited.

Do not touch the flue gas exhaust terminal (if present) due to the high temperatures it can reach; For safety purposes, check that the air intake/ flue exhaust terminals (if fitted) are not blocked. If temporary shutdown of the boiler is required, proceed as follows:

- a) drain the heating system if antifreeze is not used;
- b) shut-off all electrical, water and gas supplies.

In the case of work or maintenance to structures near ducting or devices for flue extraction and the relative accessories, switch off the appliance and on completion of the operations make sure that an authorised company verifies the efficiency of the ducting or the devices.

Never clean the appliance or connected parts with easily flammable substances. Never leave containers or flammable substances in the same environment as the appliance.

• **Attenzione:** the use of components involving use of electrical power requires some fundamental rules to be observed:

- do not touch the appliance with wet or moist parts of the body; do not touch when barefoot;
- never pull electrical cables or leave the appliance exposed to weathering (rain, sunlight, etc.);
- the appliance power cable must not be replaced by the user;

- if the cable is damaged, switch off the appliance and solely contact an authorised company to replace it;
- if the appliance is not to be used for a certain period, disconnect the main power switch.

N.B.: the temperatures indicated by the display have a tolerance of +/- 3°C due to environmental conditions that cannot be attributed to the boiler.

At the end of its service life, the appliance must not be disposed of like normal household waste nor abandoned in the environment, but must be removed by a professionally authorised company. Contact the manufacturer for disposal instructions.

2.3 CONTROL PANEL.

2-1

Key:

1 - Central heating temperature selector	11 - Flame presence symbol and relative power scale	19 - Functioning with external temperature probe active (optional)
2 - Domestic hot water temperature selector	12 - Room central heating phase operating mode active	20 - Booster function active
3 - On/Stand-by/Off Button	13 - Solar function active	21 - Central heating temperature set
4 - Summer/Winter Button	14 - Presence of anomalies	22 - Boiler manometer
5 - Reset button	15 - Chimney sweep function in progress	
6 - Boost button	16 - DHW production phase operating mode active	
7 - Functioning in summer mode	17 - Domestic hot water temperature set	
8 - Boiler in Stand-by mode	18 - Boiler connected to CAR V ² (optional)	
9 - Functioning in winter mode		
10 - Boiler in block requiring unblock via "RESET" button		

2.4 USING THE BOILER.

Before ignition make sure the heating system is filled with water and that the manometer (2) indicates a pressure of 1 ÷ 1.2 bar.

- Open the gas cock upstream from the boiler.
- Press the button (3) until the display switches on. The boiler now returns to the state prior to switch-off.
- If the boiler is in stand-by, press the button (3) again to activate it. If this is not the case, go to the next point.
- Then press the button (4) in sequence and set the boiler in the summer (☀) or winter (❄) position.

• **Summer (☀):** in this mode the boiler only works to produce DHW; the temperature is set via the selector (2) and the relative temperature is shown on the display via the indicator (17).

During a request for DHW the indicator (16) switches on. Upon ignition of the burner, the flame presence indicator (11) with relative power scale switches on and the indicator (17) shows the instant outlet temperature from the primary heat exchanger.

• **Winter (❄):** in this mode the boiler works both for producing domestic hot water and for central heating. The temperature of the DHW is always regulated via the selector (2), the heating temperature is regulated via selector (1) and the relative temperature is shown on the display via the indicator (21).

During a request for CH the indicator (12) switches on. Upon ignition of the burner, the flame presence indicator (11) with relative power scale switches on and the indicator (21) shows the instant outlet temperature from the primary heat exchanger. In the central heating phase, if the temperature of the water contained in the system is sufficient to heat the radiators, the boiler can only function with the activation of the boiler pump (indicator 12 on).

From this moment the boiler functions automatically. With no demand for heat (central heating or domestic hot water production) the boiler goes to “standby” function, equivalent to the boiler being powered without presence of flame. Each time the burner ignites, the relative flame present symbol is displayed (11) with relative output scale.

• **Operation with Comando Amico Remoto^{v2} (CAR^{v2}) (Optional).** If the CAR^{v2} is connected, the (📺) symbol will appear on the display. The boiler regulation parameters can be set via the CAR^{v2} control panel and the reset button

(5) remains active on the boiler control panel, along with the switch-off button (3) (“off” mode only) and the display where the functioning state is shown.

Attention: If the boiler is put into “off” mode on the CAR^{v2} the “CON” connection error symbol will appear. The CAR^{v2} is however powered constantly so as not to lose the stored programs.

• **Solar operating mode (🏠*).** This function is activated automatically if the boiler detects a probe on the DHW inlet (optional) or if the “Solar ignition delay” parameter is more than 0 seconds.

During a withdrawal, if the outlet water is hot enough, the boiler does not switch on, the DHW withdrawal symbol (🚰) appears on the display along with the flashing solar function symbol (🏠*).

When the water supplied by the solar system is at a temperature lower than that at which the boiler is set, the boiler switches on. At this point, the solar function symbol will stay on without flashing.

• **Booster function (🚰).** The boiler is equipped with a function that, once activated, ignites the boiler cyclically to pre-heat the D.H.W. heat exchanger, in order to have hot water available in a short time. To activate the function simply press the button (6) and the relative symbol (20) will light up on the display.

Attention: the activation of this function in presence of water whose characteristics may cause the onset of limescale can cause premature clogging of the D.H.W. heat exchanger (see hydraulic connection).

• **Operation with optional external probe (📺).** In the case of a system with optional external probe, the boiler flow temperature for room central heating is managed by the external probe depending on the external temperature measured (Par. 1.8). The flow temperature can be modified by selecting the

functioning curve via selector (1), selecting a value from “0 to 9” (Fig. 1-6).

With external probe present, the relative symbol (19) will appear on the display. In the central heating phase, if the temperature of the water contained in the system is sufficient to heat the radiators, the boiler can only function with the activation of the pump.

• **“Stand-by” mode.** Press button (3) until the (📺) symbol appears. The boiler remains active from this moment and the anti-freeze function, pump anti-block function and 3-way and signalling of any anomalies is guaranteed.

N.B.: in these conditions the boiler is still powered.

• **“Off” mode.** By holding the button (3) down for 8 seconds, the display switches-off and the boiler is off completely. The safety functions are not guaranteed in this mode.

IMPORTANT NOTE: in these conditions the boiler is considered still live even if there are no functions active.

• **Display operation.** The display lights up during the use of the control panel or if the burner is ignited, after 15 seconds of inactivity, the brightness drops until only the active symbols are displayed. The lighting mode can be varied via parameter P2 in the P.C.B. programming menu.

2.5 TROUBLESHOOTING.

In the event of an anomaly, it is signalled via the flashing indicator (14) on the boiler display according to the following table. On the remote control, the error code will be displayed by means of the same numeric code represented according to the following example (e.g. CAR^{V2} = Exx).

Error Code	Anomaly signalled	Cause	Boiler status / Solution
01	No ignition block	In the event of request of room central heating or domestic hot water production, the boiler does not switch on within the preset time. Upon appliance commissioning or after extended downtime, it may be necessary to eliminate the block.	Press the Reset button (1).
02	Safety thermostat block (overheating), flame control anomaly	During normal operation, if a fault causes excessive overheating internally, the boiler goes into overheating block.	Press the Reset button after cooling (1).
03	Fan anomaly	This occurs if the fan is blocked or if the intake or drain pipes are obstructed.	If normal conditions are restored the boiler restarts without having to be reset (1).
04	Contacts resistance block	The P.C.B. detects an anomaly on the gas valve supply. Check the connection. (the anomaly is detected and displayed only in the event of a request).	Press the Reset button (1).
05	Flow probe anomaly	The board detects an anomaly on the flow probe.	The boiler does not start (1).
06	Domestic hot water probe anomaly	The board detects an anomaly on the domestic hot water NTC probe.	In this case the boiler continues to produce domestic hot water but not with optimal performance. Also, in this case the .D.H.W. antifreeze function (1) is disabled.
08	Maximum N° of reset	Number of allowed resets that have already performed.	Attention: the anomaly can be reset 5 times consecutively, after which the function is inhibited for at least one hour. One attempt is gained every hour for a maximum of 5 attempts. By switching the appliance on and off the 5 attempts are re-acquired.
10	Insufficient system pressure	Water pressure inside the central heating circuit that is sufficient to guarantee the correct operation of the boiler is not detected.	Check on the boiler pressure gauge (1) that the system pressure is between 1÷1.2 bar and restore the correct pressure if necessary.
11	Flue pressure switch failure	This occurs in the event of an error on the P.C.B. that enables fan start-up incorrectly or in the event of a flue-gas pressure switch fault.	If normal conditions are restored the boiler restarts without having to be reset (1).
15	Configuration error	If the board detects an anomaly or incongruity on the electric wiring, the boiler will not start.	If normal conditions are restored the boiler restarts without having to be reset (1).
20	Parasite flame	This occurs in the event of a leak on the detection circuit or anomaly in the flame control unit.	Press the Reset button (1).
24	Push button control panel anomaly	The board detects an anomaly on the pushbutton panel.	If normal conditions are restored the boiler restarts without having to be reset (1).
27	Insufficient circulation	This occurs if there is overheating in the boiler due to insufficient water circulating in the primary circuit; the causes can be: - low system circulation; check that no shut-off devices are closed on the heating circuit and that the system is free of air (deaerated); - pump blocked; free the pump.	Press the Reset button (1).
31	Loss of remote control communication.	This occurs if an incompatible remote control is connected, or if communication between the boiler and the remote control is lost.	Power cycle the boiler. If the Remote Control is still not detected on re-starting the boiler will switch to local operating mode, i.e. using the controls on the control panel. In this case the "Central heating" mode (1) cannot be activated.
37	Low power supply voltage	This occurs when the power supply voltage is lower than the allowed limits for the correct boiler operation.	If normal conditions are restored the boiler restarts without having to be reset (1).
38	Loss of flame signal	This occurs when the boiler is ignited correctly and the burner flame switches off unexpectedly; a new attempt at ignition is performed and if normal conditions are restored, the boiler does not have to be reset.	If normal conditions are restored the boiler restarts without having to be reset (1).
43	Block due to loss of continuous flame signal	This occurs if the "Flame signal loss" error occurs 6 consecutive times in 8.5 minutes.	Press the Reset button (1).
44	Block for maximum time, partial gas valve opening	This occurs if the gas valve remains open for longer than required for normal operation, without the boiler switching on.	Press the Reset button (1).

(1) If the shutdown or fault persists, contact an authorised company (e.g. Authorised Technical After-Sales Service).

2.6 BOILER SHUTDOWN

For complete boiler switch-off, press the “off” button, disconnect the omnipolar switch outside of the boiler and close the gas cock upstream from the appliance. Never leave the boiler switched on if left unused for prolonged periods.

2.7 RESTORING CENTRAL HEATING SYSTEM PRESSURE.

Periodically check the system water pressure. The boiler pressure gauge should read a pressure between 1 and 1.2 bar.

If the pressure is below 1 bar (with the circuit cool) restore normal pressure via the filling cock located in the lower part of the boiler (Fig. 2-2).

N.B.: close the filling cock after the operation. If pressure values reach around 3 bar the safety valve may be activated.

In this case, remove water from an air vent valve of a radiator until 1 bar is reached or ask for assistance from an authorised company.

If frequent pressure drops should occur, ask an authorised company for assistance to eliminate the possible system leakage.

2.8 SYSTEM DRAINING.

To drain the boiler, use the special draining valve (Fig. 2-2).

Before draining, ensure that the filling valve is closed.

2.9 ANTIFREEZE PROTECTION.

The boiler has an anti-freeze function that switches on automatically when the temperature falls below 4°C (standard protection to minimum temperature of -5°C). In order to guarantee the integrity of the appliance and the domestic hot water heating system in areas where

the temperature falls below zero, we recommend protecting the central heating system with anti-freeze liquid and installing the the Immergas Anti-freeze Kit in the boiler (Par. 1.3). In the case of prolonged inactivity (second case), we also recommend that:

- disconnect the electric power supply;
- the central heating circuit and boiler domestic hot water circuit must be drained. In systems that are drained frequently, filling must be carried out with suitably treated water to eliminate hardness that can cause lime-scale.


2.10 CASE CLEANING.

Use damp cloths and neutral detergent to clean the boiler casing. Never use abrasive or powder detergents.

2.11 DECOMMISSIONING.

In the event of permanent shutdown of the boiler, contact an authorised company for the suitable procedures and also ensure the electrical, water and fuel supply lines are shut off and disconnected.

Bottom view.

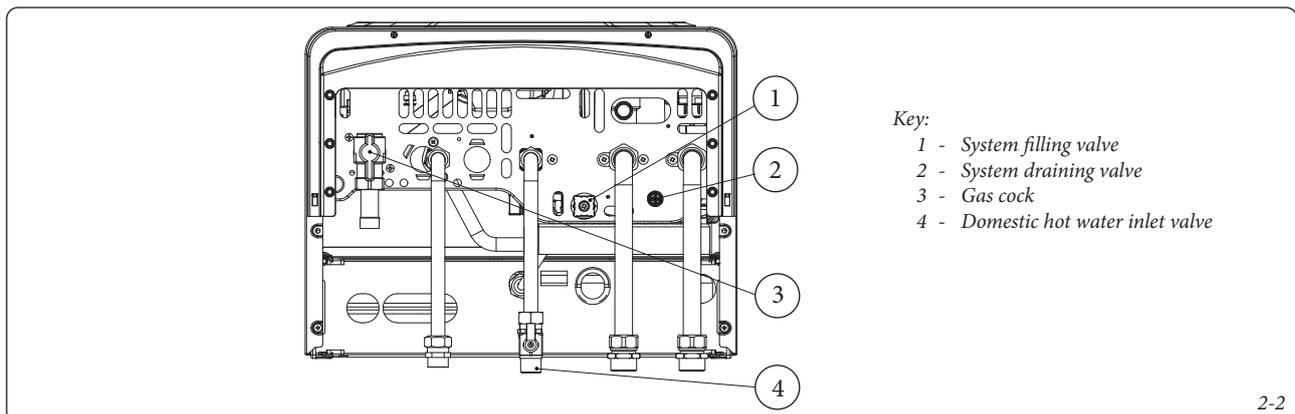

2-2

3 BOILER START-UP (INITIAL CHECK)

To commission the boiler:


- make sure that the type of gas used corresponds to boiler settings;
- check connection to a 230V-50Hz power mains, correct L-N polarity and the earthing connection;
- make sure the central heating system is filled with water and that the manometer indicates a pressure of 1÷1.2 bar.
- make sure the air valve cap is open and that the system is well deaerated;
- switch the boiler on and check correct ignition;

- make sure the gas maximum, intermediate and minimum flow rate and pressure values correspond to those given in the handbook (Par. 3.18);
- make sure the gas supply failure safety device is working, within its relative intervention time;
- check activation of the main switch located upstream of the boiler;
- check that the intake and/or exhaust terminals are not blocked;
- check activation of the “no air” safety pressure switch;
- ensure activation of all adjustment devices;


- seal the gas flow rate regulation devices (if settings are modified);
- check the production of domestic hot water;
- check sealing efficiency of water circuits;
- check ventilation and/or aeration of the installation room where required.

If even only a single safety check offers a negative result, do not commission the system.

3.1 HYDRAULIC DIAGRAM.

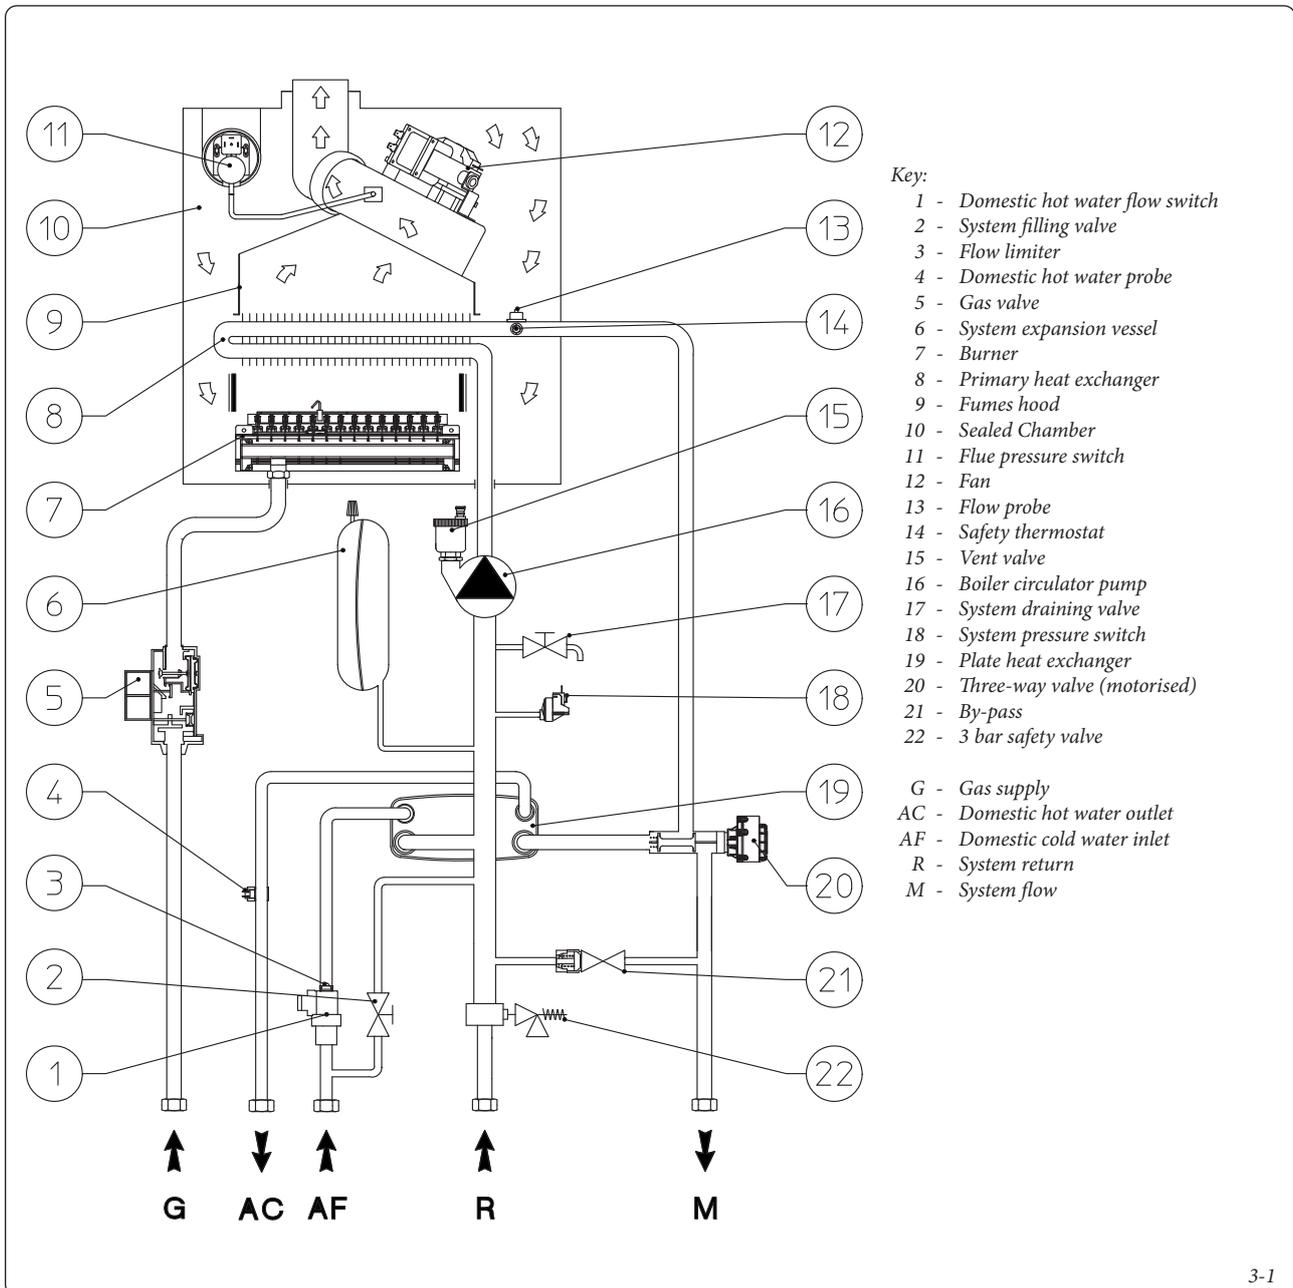

3.2 WIRING DIAGRAM.

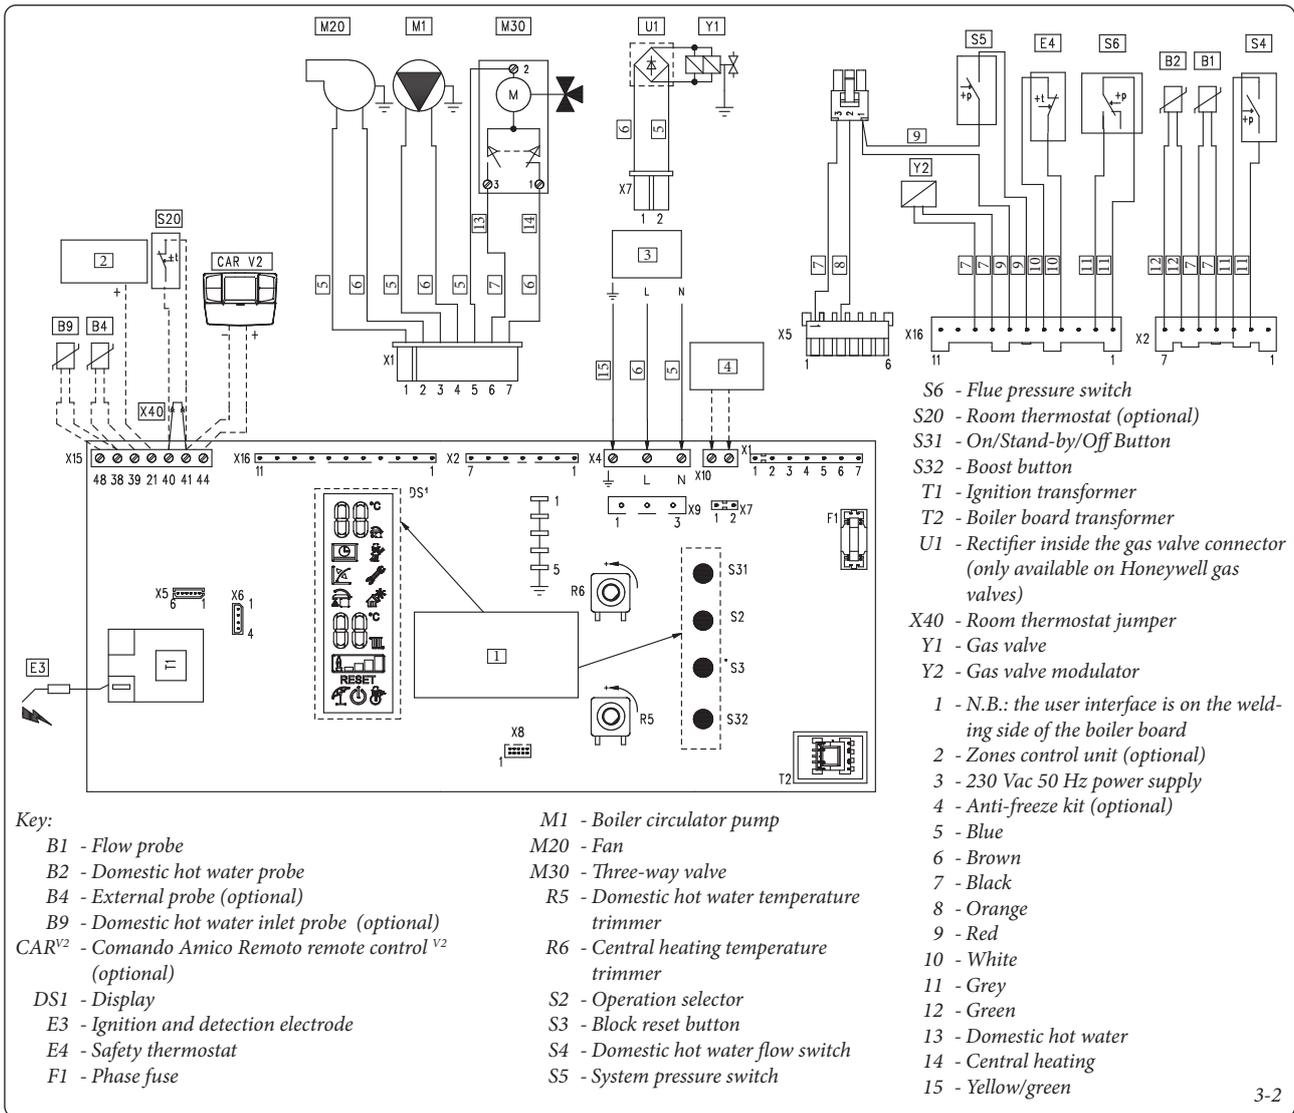

Remote control: the boiler is set-up for the application of the Comando Amico Remoto remote control^{V2} (CAR^{V2}) which must be connected to clamps 41 and 44 of connector X15 on the P.C.B., observing polarity and eliminating jumper X40.

Room thermostat: the boiler is designed for the application of the Room Thermostat (S20). Connect it to clamps 40 - 41 eliminating jumper X40.

The connector X5 is used for the connection to the relay board.

The connector X6 is for connection to a personal computer.

The connector X8 is used for software updating operations.

3.3 TROUBLESHOOTING.

N.B.: maintenance operations must be carried out by an authorised company (e.g. Authorised After-Sales Technical Assistance Service).

- Smell of gas. Caused by leakage from gas circuit pipelines. Check sealing efficiency of gas intake circuit.
- The fan works but ignition discharge does not take place on the burner ramp. The fan may start but the safety air pressure switch does not switch the contact over. Make sure:
 - 1) that the intake-exhaust duct is not too long (over allowed length).
 - 2) that the intake-exhaust duct is not partially blocked (on the exhaust or intake side).
 - 3) the diaphragm on the fumes exhaust is adequate for the length of the intake/exhaust ducts.
 - 4) that the sealed chamber is sealed perfectly.
 - 5) the fan power supply voltage is not less than 196 V.

- Irregular combustion (red or yellow flame). Can be caused by: dirty burner, clogged lamellar pack, intake - exhaust terminal not installed properly. Clean the above components and ensure correct installation of the terminal.
- Frequent interventions of the over heating safety thermostat. It can depend on reduced water pressure in the boiler, little circulation in the heating system, the blocked pump or an anomaly of the boiler P.C.B. Check on the pressure gauge that the system pressure is within established limits. Check that radiator valves are not all closed.
- The boiler produces condensate. It can be determined by functioning at boiler temperatures that are excessively low. In this case, make the boiler run at higher temperatures.
- Presence of air in the system. Check opening of the special air vent valve cap (Fig. 1-29). Make sure the system pressure and expansion vessel factory-set pressure values are within the set limits; the factory-set value for the expansion vessel must be 1.0 bar, and system pressure between 1 and 1.2 bar.
- Ignition block see par. 2.5 and 1.6 (electric connection).

INSTALLER

USER

MAINTENANCE TECHNICIAN

3.4 INFORMATION MENU.

Pressing the "Summer/Winter" button (4) for 4 seconds, the "Information menu" is activated, which allows to display some boiler functioning parameters.

Press the "Reset" button (5) to scroll the various parameters.

To exit the menu, press the "Summer/Winter" button (4) again for 4 seconds or wait for 120 seconds.

With the menu active on the indicator (17) the parameter n° is displayed while indicator (21) displays the parameter value.

Id Parameter (ref. 17)	Description
d1	Displays the flame signal (uA)
d2	Displays the primary exchanger output instant heating flow temperature
d3	Displays the instant output temperature from the DHW exchanger
d4	Displays the temperature set for the central heating set (if remote control is present)
d5	Displays the temperature set for the DHW set (if remote control is present)
d6	Displays the external environment temperature (if the external probe is present) If the temperature is below zero, the value is displayed flashing.
d7	Display the temperature of the inlet DHW.

3.5 PROGRAMMING THE P.C.B.

The boiler is prepared for possible programming of several operation parameters. By modifying these parameters as described below, the boiler can be adapted according to specific needs.

To access the programming phase, press the "Summer/Winter" (4) and "Reset" (5) buttons simultaneously for 8 seconds.

once the menu has been accessed, it is possible to scroll through the three sub-menus present (s, p, t) by pressing the "Summer/Winter" (4) button for 2 seconds.

Use the "DHW regulator" selector (2), to select the parameter and rotate the "CH regulator" (1) to

modify the value according to the range available.

With the menu active on the indicator (17) the parameter n° is displayed while indicator (21) displays the parameter value.

Press the "Reset" button (5) for 2 seconds to memorise the variation of the parameters. Memorisation is displayed by the flashing indicators (17 and 21).

Exit the programming phase by waiting for 2


minutes or by pressing the "Summer/Winter" (4) and "Reset" (5) buttons simultaneously for 5 seconds.

Id Parameter (ref. 17)	Parameter	Description	Range (ref. 21 Fig. 2-1)	Default
S0	Minimum CH output	The boiler also has electronic modulation that adapts the boiler potentiality to the effective heating demand of the house. Then the boiler works normally in a variable gas pressure field between the minimum heating output and the maximum heating output depending on the system's heating load. N.B.: the boiler is produced and calibrated in the central heating phase at nominal output. Approximately 10 minutes are needed to reach the nominal heat output changeable using parameter (S1).	0 - 60 %	Set according to factory inspection
S1	Maximum CH output	N.B.: the selection of the "Minimum heating output" and "Maximum heating output" parameters, in presence of a heating request, allows boiler ignition and power supply of the modulator with current equal to the value of the respective set value.	0 - 99 %	99
S2	Gas type selection	The setting of this function is used to adjust the boiler so that it can operate with the correct type of gas	nG - Methane lG - LPG Ci - China	The same as the type of gas being used
S3	Boiler type	Establishes the boiler type and its functioning mode 0 = combi 3 = 32kW storage tank	0 - 3	0
S4	Power block	Establishes the power at which the boiler must switch on	0 - 50 %	Set according to factory inspection

Id Parameter (ref. 17)	Parameter	Description	Range (ref. 21 Fig. 2-1)	Default
P0	DHW thermostat	Establishes the switch-off method in DHW mode. 1 Correlated: the boiler switches off according to the temperature set. 0 Fixed: the switch-off temperature is fixed at the maximum value regardless of the value set on the control panel.	0 - 1	1
P1	Solar delay timing	The boiler is set to switch-on immediately after a request. for DHW In the case of coupling with a solar storage tank positioned upstream from the boiler, it is possible to compensate the distance between the storage tank and the boiler in order to allow the water to reach the boiler. Set the time necessary to verify that the water is hot enough (see par. Solar panels coupling)	0 - 30 seconds	0
P2	Pump functioning	The pump can function in two ways. 0 intermittent: in winter "mode" the circulator is managed by the room thermostat or by the remote control 1 continuous: in "winter" mode the circulator is always powered and is therefore always in operation	0 - 1	0
P3	Relay 1 (optional)	The boiler is set-up for functioning with the relay P.C.B. (optional), which can be configured 0 = Off 1 = Main zone control 2 = General alarm 3 = CH phase active 4 = External gas valve power supply 5 = Aquaceleris PTC control (Do not use on this boiler model)	0 - 5	0
P4	Relay 2 (optional)	The boiler is set-up for functioning with the relay P.C.B. (optional), which can be configured 0 = Off 1 = General alarm 2 = CH phase active 3 = External gas valve power supply 4 = Secondary zone control (from TA on relay P.C.B. contact)	0 - 5	0
P5	Relay 3 (optional)	The boiler is set-up for functioning with the relay P.C.B. (optional), which can be configured 0 = Off 1 = Chiller remote activation 2 = General alarm 3 = CH phase active 4 = External gas valve power supply 5 = Aqua Celeris device PTC control (Do not use on this boiler model)	0 - 5	0

Id Parameter (ref. 17)	Parameter	Description	Range (ref. 21 Fig. 2-1)	Default
t0	Central heating ignitions timer	The boiler has electronic timing, which prevents the burner from igniting too often in central heating mode	0 - 600 seconds	18
t1	Central heating ramp timer	In the ignition phase, the boiler performs an ignition ramp in order to arrive at the maximum power set	0 - 840 seconds	84
t2	CH ignition delay from TA and CR request	The boiler is set to switch-on immediately after a request. In the case of particular systems (e.g. area systems with motorised thermostatic valves etc.) it may be necessary to delay ignition.	0 - 600 seconds	0
t3	Display lighting	Establishes the display lighting mode. 0 Automatic: the display lights up during use and dims after 15 seconds of inactivity. In the event of an anomaly the display flashes. 1 Off: the display is always lit with low intensity 2 On: the display is always lit with high intensity.	0 - 2	0
t4	Display	Establishes what indicators 17 and 21 display (Fig. 2-1). 0 Indicator 17: displays the set DHW setting; Indicator 21: in winter mode it displays the set CH setting, while the indicator is switched off in summer mode 1 Indicator 17: it is switched off in the presence of a request. Without any request the indicator shows the set DHW setting. Indicator 21: in the presence of a request, it shows the instant flow temperature of the boiler. Without any request in summer mode, the indicator is off. In winter mode it shows the set CH setting.	0 - 1	1

SIT 845 GAS Valve

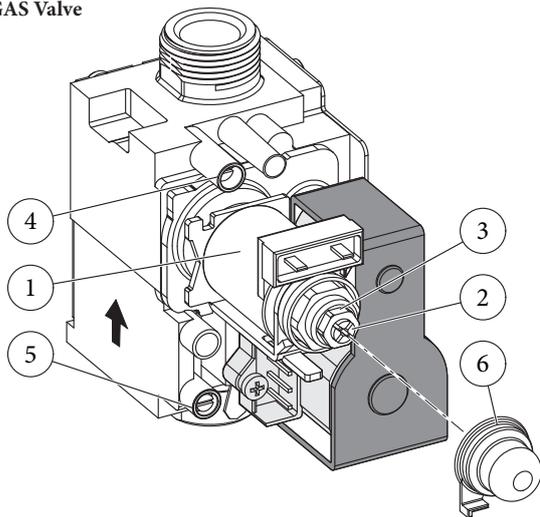

Key:

- 1 - Coil
- 2 - Minimum power adjustment screw
- 3 - Maximum power adjustment nut
- 4 - Gas valve outlet pressure point
- 5 - Gas valve inlet pressure point
- 6 - Protection hood

3-3

3.6 CONVERTING THE BOILER TO OTHER TYPES OF GAS.

If the boiler has to be converted to a different gas type to that specified on the data nameplate, request the relative conversion kit for quick and easy conversion.

The gas conversion operation must be carried out by an authorised company (e.g. Authorised Technical After-Sales Service).

To convert to another type of gas the following operations are required:

- disconnect the appliance;
- replace the main burner injectors, making sure to insert the special seal rings supplied in the kit, between the gas manifold and the injectors;
- re-power the appliance;
- from the push button panel on the boiler, select the type of gas (S2) and then select (Ng) if it runs on Methane or (Lg) if it runs on LPG;
- adjust the boiler nominal heat output;
- adjust the minimum heat power of the boiler;
- adjust the boiler nominal heat output in heating phase;
- adjust (eventually) the maximum heating power;
- seal the gas flow rate regulation devices (if settings are modified);
- after completing the conversion, apply the sticker, contained in the conversion kit, near the data nameplate. Using an indelible marker pen, delete the data relative to the old type of gas.

These adjustments must be made with reference to the type of gas used, following that given in the table (Par. 3.18).

3.7 CHECKS FOLLOWING CONVERSION TO ANOTHER TYPE OF GAS.

After making sure that conversion was carried out with a nozzle of suitable diameter for the type of gas used and the settings are made at the correct pressure, check that:

- there is no flame in the combustion chamber
- the burner flame is not too high or low and that it is stable (does not detach from burner)
- the pressure testers used for calibration are perfectly closed and there are no leaks from the gas circuit.

N.B.: all boiler adjustment operations must be carried out by a qualified company (e.g. Authorised After-Sales Assistance). Burner adjustment must be carried out using a differential "U" or digital type pressure gauge connected to the pressure socket located above the sealed chamber (part. 9 Fig. 1-29) and the gas valve pressure outlet (part. 4 Fig. 3-3), keeping to the pressure value given in the table (Par. 3.18) according to the type of gas for which the boiler is prepared.

3.8 POSSIBLE ADJUSTMENTS.

N.B.: to adjust the gas valve, remove the plastic cap (6); after adjusting, refit the cap.

- Preliminary calibration operations.
 - Set parameter S0 at 0 %.
 - Set parameter S1 at 99 %.
- Activate the chimney sweep function.
 - Enter the "DHW chimney sweep" mode, opening a DHW cock.
- Adjustment of boiler nominal thermal heat output.
 - Set the power at maximum (99%) by turning the "CH regulator" selector (1).
 - With the brass nut (3 Fig. 3-3) adjust the boiler nominal output, observing the maximum pressure values stated in the tables (Par. 3.18) according to the type of gas; by turning clockwise the heat potential increases, anti-clockwise it decreases.

- Adjustment of boiler minimum thermal heat output.

N.B.: only proceed after having calibrated the nominal pressure.

- Set the power at minimum (0%) still using

the "CH regulator" selector (1).

- Adjust the minimum thermal input by operating on the cross plastic screws (2) on the gas valve maintaining the brass nut blocked (3);
- Exit the "Chimney sweep" mode and keep the boiler functioning.
- Adjustment of the boiler minimum heat output in heating phase.

N.B.: only proceed after having calibrated the minimum boiler pressure.

- To adjust the minimum heat output during the heating phase, change parameter (S0), increasing the value the pressure increases, reducing it the pressure drops.
- The pressure to which the boiler minimum heat output must be adjusted, must not be lower than that stated in the tables (par. 3.18).
- Adjustment (any) of the boiler maximum heat output in central heating phase.

To adjust the maximum heat output during the heating phase, change parameter (S1), increasing the value the pressure increases, reducing it the pressure drops.

- The pressure to which the boiler maximum heat output must be adjusted in central heating phase, must not be carried out in reference to that stated in the tables (Par. 3.18).

3.9 SLOW AUTOMATIC IGNITION FUNCTION.

In ignition phase, the P.C.B. supplies constant gas with pressure proportional to the parameter "S4" set.

3.10 "CHIMNEY SWEEP" FUNCTION.

When activated, this function forces the boiler to variable output for 15 minutes.

In this state all adjustments are excluded and only the safety thermostat and the limit thermostat remain active. To activate the chimney sweep function, press the "Reset" button (5) event for activation in the absence of DHW requests.

Its activation is signalled by the indication of the flow temperature on the indicator (17), the power percentage on the indicator (21) and activation of the relative symbol .

This function allows the technician to check the combustion parameters.

Once the function is activated, it is possible to select whether to make the chick in CH status or DHW status by opening any hot water cock and regulating the power by turning the "CH regulation" selector (1).

Functioning in CH or DHW mode is visualised by the relative flashing symbols  or .

On completion of the checks, deactivate the function by pressing the Reset button (5) for 8 seconds.

3.11 PUMP ANTI-BLOCK FUNCTION.

The boiler has a function that starts the pump once every 24 hours for the duration of 30 seconds in order to reduce the risk of the pump becoming blocked due to prolonged inactivity.

3.12 THREE-WAY ANTI-BLOCK FUNCTION.

The boiler is supplied with a function that activates the motorised three-way unit every 24 hours, carrying out a complete cycle in order to reduce the risk of three-way block due to prolonged inactivity.

3.13 RADIATOR ANTIFREEZE FUNCTION.

If the system return water is below 4°C, the boiler starts up until reaching 42°C.

3.14 P.C.B. PERIODICAL SELF-CHECK.

During functioning in central heating mode or with boiler in standby, the function activates every 18 hours after the last boiler check/power supply. In case of functioning in domestic hot water mode the self-check starts within 10 minutes after the end of the withdrawing in progress, for duration of approx. 10 seconds.

N.B.: during self-check, the boiler remains off, including signalling.

3.15 SOLAR PANELS COUPLING FUNCTION.

The boiler is set-up to receive pre-heated water from a system of solar panels up to a maximum temperature of 65°C. In all cases, it is always necessary to install a mixing vale on the hydraulic circuit upstream from the boiler on the cold water inlet.

Note: in order for the boiler to work properly, the temperature selected on the solar valve must be 5°C greater than the temperature selected on the boiler control panel.

In this condition, parameter P0 (DHW thermostat) must be set at "1" and parameter P1 (solar delay time) must be set for a period that is sufficient to receive water from a storage tank located upstream of the boiler. The greater the distance from the storage tank, the longer the stand-by time to be set. Once these adjustments have been made, when the temperature of the boiler inlet water is the same or greater than that set by the DHW selector switch, the boiler does not switch on.

3.16 APPLIANCE CHECK AND MAINTENANCE.

The following checks and maintenance should be performed at least once a year.

- Clean the flue side of the heat exchanger.
- Clean the main burner.
- Visually check the flue hood for deterioration or corrosion.
- Check ignition and operation.
- Check correct calibration of the burner in domestic hot water and central heating phases.
- Check the operation of the appliance control and adjustment devices and in particular:
 - intervention of main electrical switch positioned outside of the boiler;
 - system control thermostat intervention;
 - domestic hot water control thermostat intervention.
- Check sealing efficiency of the gas circuit and the internal system.
- Check the intervention of the device against no gas ionisation flame control. Intervention time must be less than 10 seconds.
- Visually check for water leaks or oxidation from/on connections.
- Visually check that the water safety drain valve is not clogged.
- Check, after discharging the system pressure and bringing it to zero (read on boiler pressure gauge), that the expansion vessel charge is at 1.0 bar.
- Check that the system static pressure (with system cold and after refilling the system by means of the filling cock) is between 1 and 1.2 bar.
- Visually check that the safety and control devices have not been tampered with and/or shorted, in particular:
 - temperature safety thermostat;
 - water pressure switch,
 - air pressure switch
- Check the condition and integrity of the electrical system and in particular:
 - supply voltage cables must be inside the fairleads;
 - there must be no traces of blackening or burning.

N.B.: in addition to yearly maintenance, one must also check the thermal system, with frequency and procedures that comply with the indications of the technical regulations in force.


3.17 CASING REMOVAL.

To facilitate boiler maintenance the casing can be completely removed as follows (Fig. 3-4 / 3-5):


- 1 Undo the 2 bottom screws (b) that fasten the protection guard (a).
- 2 Release the guard (a).
- 3 Unhook the decorative frame (c) from the relative lower retainers.
- 4 Remove the decorative frame (c) from the casing (e).
- 5 Loosen the 2 front screws (d) that fasten the casing.
- 6 Loosen the 2 lower screws (f) that fasten the casing.
- 7 Pull the case towards you (e).
- 8 At the same time, push the case (e) upwards to release it from the upper hooks.

Installation drawings key:

- a** Unmistakeable component identification
- 1** Sequential identification of the operation to perform

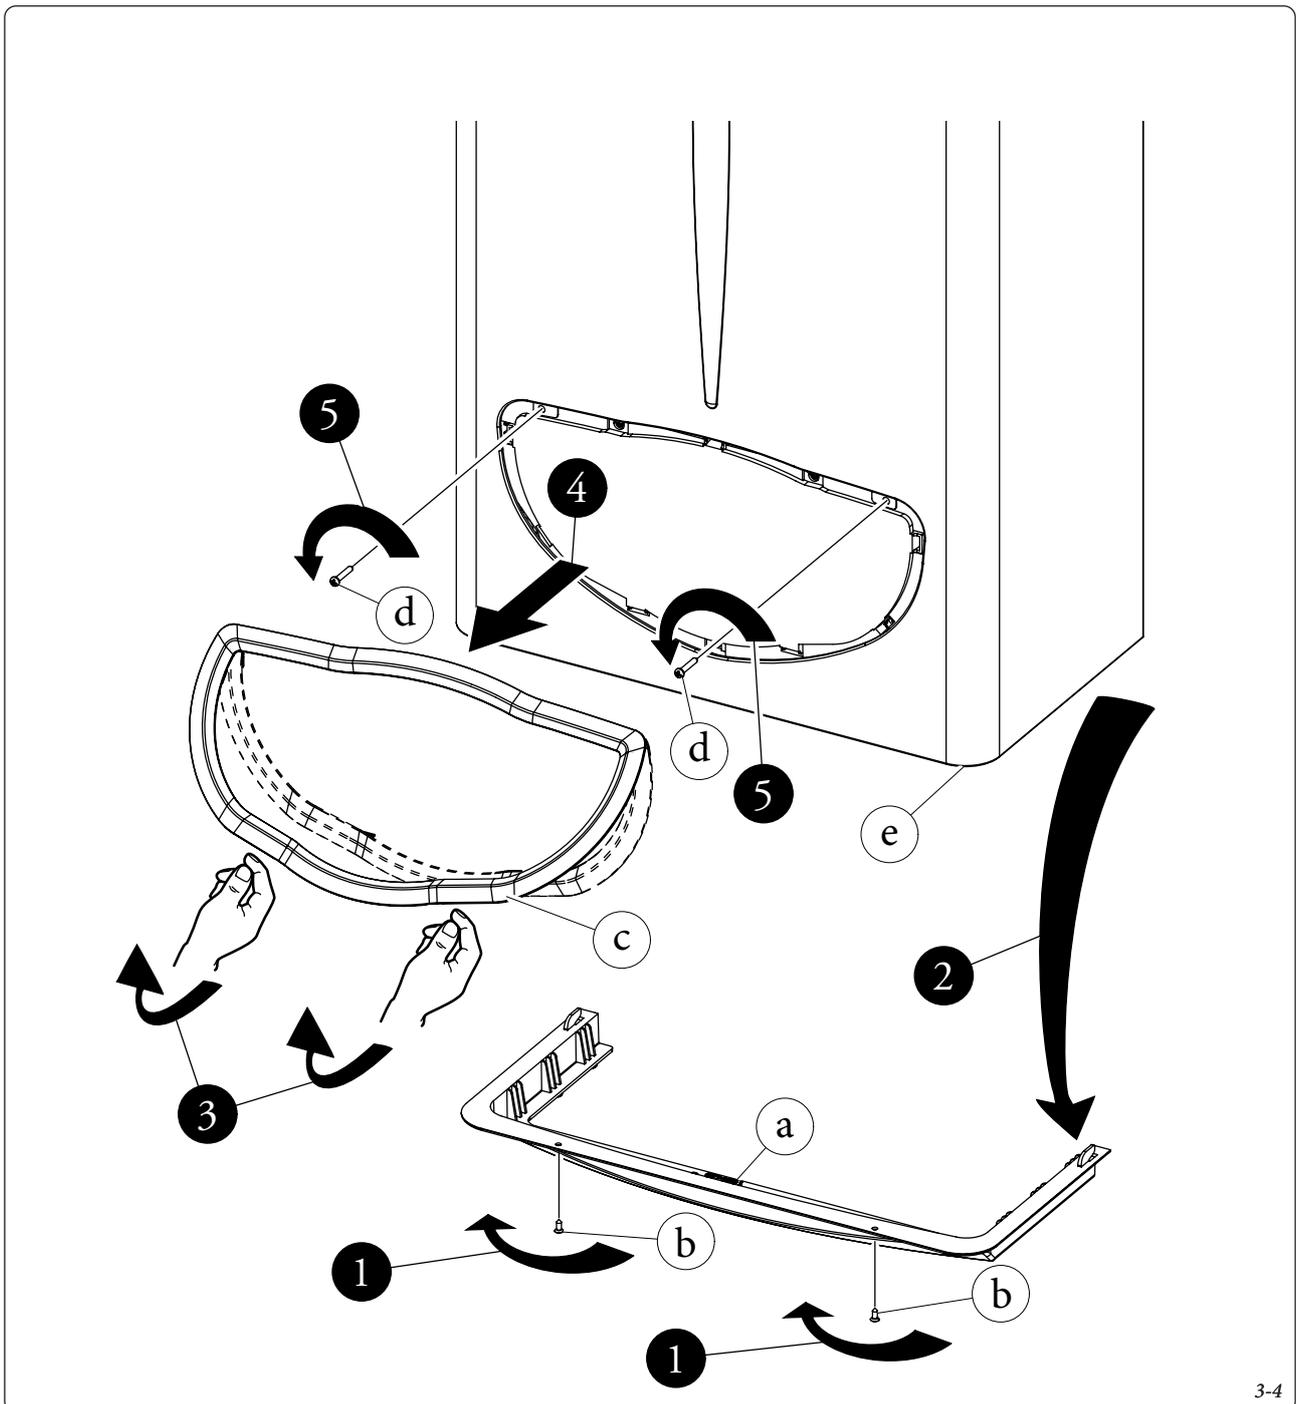

3-4

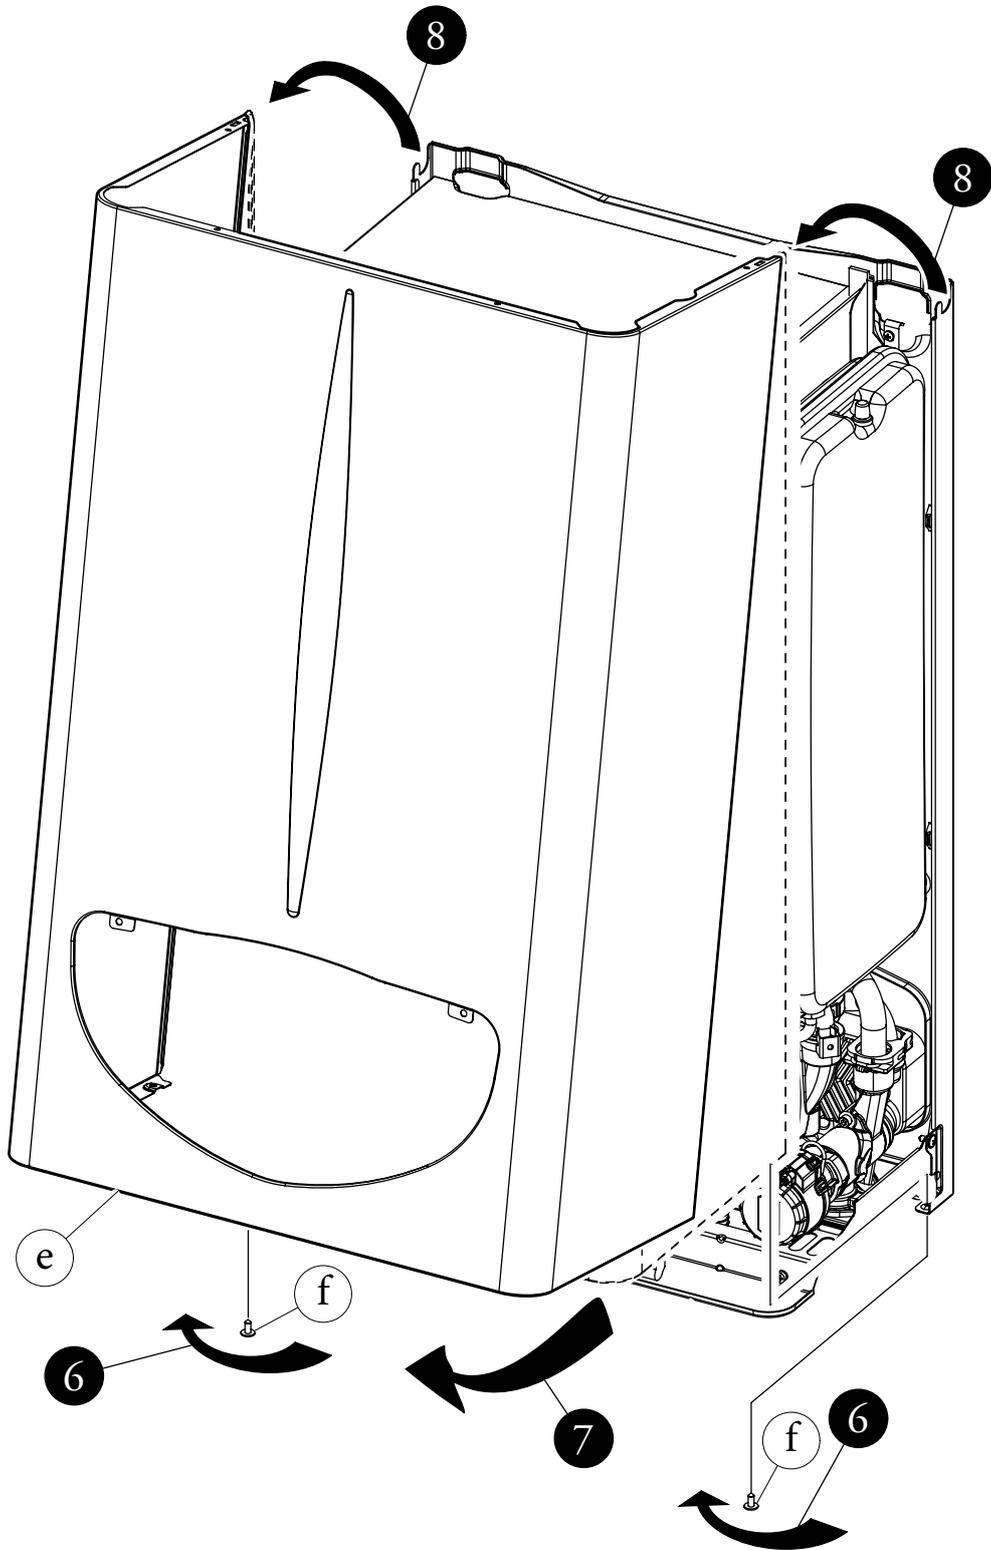

3.18 VARIABLE HEAT OUTPUT.

N.B.: the pressures indicated in the table represent the difference in existing pressures between the gas valve outlet and the combustion chamber. The adjustments should therefore, be carried out

using a differential manometer (small "U"-shaped column or digital manometer) with the probes inserted in the pressure test gas valve outlet and on the sealed chamber positive pressure test. The power data in the table has been obtained with

intake-exhaust pipe measuring 0.5 m in length. Gas flow rates refer to heating power below a temperature of 15°C and at a pressure of 1013 mbar. Burner pressure values refer to use of gas at 15°C.

Maior Eolo 32.

THERMAL POWER	THERMAL POWER		METHANE (G20)			BUTANE (G30)			PROPANE (G31)		
			BURNER GAS FLOW RATE	PRESS. BURNER NOZZLES		BURNER GAS FLOW RATE	PRESS. BURNER NOZZLES		BURNER GAS FLOW RATE	PRESS. BURNER NOZZLES	
(kW)	(kcal/h)		(m ³ /h)	(mbar)	(mm H ₂ O)	(kg/h)	(mbar)	(mm H ₂ O)	(kg/h)	(mbar)	(mm H ₂ O)
32.0	27520	CH + D.H.W.	3.62	12.31	125.6	2.70	27.63	281.7	2.66	35.37	360.6
31.0	26660		3.51	11.68	119.1	2.62	26.05	265.6	2.58	33.48	341.4
30.0	25800		3.40	11.06	112.8	2.54	24.52	250.1	2.50	31.66	322.8
29.6	25423		3.36	10.80	110.1	2.51	23.87	243.4	2.46	30.88	314.9
28.0	24080		3.19	9.88	100.7	2.38	21.63	220.6	2.34	28.18	287.3
27.0	23220		3.08	9.31	94.9	2.30	20.26	206.6	2.26	26.51	270.4
26.0	22360		2.97	8.76	89.3	2.22	18.94	193.1	2.18	24.90	253.9
25.0	21500		2.87	8.22	83.8	2.14	17.67	180.2	2.10	23.33	237.9
24.0	20640		2.76	7.70	78.5	2.06	16.44	167.6	2.03	21.81	222.4
23.0	19780		2.65	7.19	73.3	1.98	15.26	155.6	1.95	20.34	207.4
22.0	18920		2.55	6.69	68.2	1.90	14.12	144.0	1.87	18.91	192.8
21.0	18060		2.44	6.21	63.3	1.82	13.02	132.8	1.79	17.52	178.7
20.0	17200		2.34	5.74	58.5	1.74	11.97	122.0	1.71	16.17	164.9
19.0	16340		2.23	5.28	53.8	1.66	10.96	111.7	1.64	14.87	151.6
18.0	15480		2.12	4.83	49.3	1.58	9.99	101.8	1.56	13.60	138.7
17.0	14620		2.01	4.40	44.9	1.50	9.06	92.3	1.48	12.38	126.2
16.0	13760		1.91	3.98	40.6	1.42	8.17	83.3	1.40	11.19	114.1
15.0	12900		1.80	3.57	36.4	1.34	7.32	74.6	1.32	10.04	102.4
14.0	12040		1.69	3.17	32.3	1.26	6.51	66.4	1.24	8.93	91.1
13.0	11180		1.58	2.78	28.3	1.18	5.74	58.5	1.16	7.86	80.1
12.9	11087	1.56	2.74	27.9	1.17	5.66	57.7	1.15	7.75	79.0	
11.0	9460	D.H.W.	1.35	2.03	20.7	1.01	4.33	44.1	0.99	5.83	59.5
10.5	9030		1.30	1.86	18.9	0.97	4.00	40.8	0.95	5.35	54.5

3.19 COMBUSTION PARAMETERS.

		G20	G30	G31
Maio Eolo 32				
Gas nozzle diameter	mm	1.35	0.78	0.78
supply pressure	mbar (mm H ₂ O)	20 (204)	29 (296)	37 (377)
Flue flow rate at nominal heat output	kg/h	67	66	69
Flue flow rate at min heat output	kg/h	69	71	70
CO ₂ at Q. Nom./Min.	%	7.35 / 2.40	8.70 / 2.70	8.25 / 2.70
CO with 0% O ₂ at Nom./Min. Q. Nom./Min.	ppm	55 / 80	88 / 94	55 / 100
NO _x at 0% of O ₂ at Q. Nom./Min.	mg/kWh	135 / 115	195 / 130	200 / 127
Flue temperature at nominal output	°C	111	116	112
Flue temperature at minimum output	°C	82	80	81

Combustion parameters: measuring conditions of useful efficiency (flow temperature/return temperature= 80/60 °C), ambient temperature reference = 15°C.

INSTALLER

USER

MAINTENANCE TECHNICIAN

3.20 TECHNICAL DATA.

		Maio Eolo 32
Nominal heat input	kW (kcal/h)	34.2 (29433)
DHW minimum heat input	kW (kcal/h)	12.2 (10524)
CH minimum heat input	kW (kcal/h)	14.8 (12710)
Nominal heat output (useful)	kW (kcal/h)	32.0 (27520)
DHW minimum heat output (useful)	kW (kcal/h)	10.5 (9030)
CH minimum heat output (useful)	kW (kcal/h)	12.9 (11087)
Efficiency at nominal heat output	%	93.5
Efficiency at 30% nominal heat output load	%	90.7
Heat loss at case with burner On/Off	%	0.70 / 0.50
Heat loss at flue with burner On/Off	%	5.80 / 0.04
Central heating circuit max. operating pressure	bar	3.0
Maximum heating temperature	°C	90
Adjustable central heating temperature	°C	35 - 85
System expansion vessel total volume	l	7.4
Heating expansion vessel pre-charge	bar	1.0
Appliance water content	l	2.0
Head available with 1000 l/h flow rate	kPa (m H ₂ O)	39.32 (4.0)
Hot water production useful heat output	kW (kcal/h)	32.0 (27520)
Domestic hot water adjustable temperature	°C	30 -60
Domestic hot water circuit min. pressure (dynamic)	bar	0.3
Domestic hot water circuit max. operating pressure	bar	10.0
Minimum D.H.W. flow rate	l/min	1.5
Flow rate capacity in continuous duty (ΔT 30°C)	l/min	16.1
Weight of full boiler	kg	41.5
Weight of empty boiler	kg	39.5
Electrical connection	V/Hz	230 / 50
Nominal power absorption	A	0.83
Installed electric power	W	150
Pump absorbed power	W	106
Fan power absorbed power	W	32
Equipment electrical system protection	-	IPX5D
NO _x class	-	3
Weighted NO _x	mg/kWh	102
Weighted CO	mg/kWh	63
Type of appliance	C12 / C32 / C42 / C52 / C82 / B22p / B32	
Category	II2H3+	

- The data relevant to domestic hot water performance refer to a dynamic inlet pressure of 2 bar and an inlet temperature of 15°C; the values are measured directly at the boiler outlet considering that to obtain the data declared mixing with cold water is necessary.

- The max. sound level emitted during boiler operation is < 55dBA. The sound level value is referred to semianechoic chamber tests with boiler operating at max. heat output, with extension of flue gas exhaust system according to product standards.

3.21 KEY FOR DATA NAMEPLATE.

Md		Cod. Md	
Sr N°	CHK	Cod. PIN	
Type			
Q _{nw} /Q _n min.	Q _{nw} /Q _n max.	P _n min.	P _n max.
PMS	PMW	D	TM
NO _x Class			

N.B.: the technical data is provided on the data nameplate on the boiler

	ENG
Md	Model
Cod. Md	Model code
Sr N°	Serial Number
CHK	Check
Cod. PIN	PIN code
Type	Type of installation (ref. CEN TR 1749)
Q _{nw} min.	Minimum DHW heat input
Q _n min.	CH minimum heat input
Q _{nw} max.	DHW maximum heat input
Q _n max.	CH maximum heat input
P _n min.	Minimum heat output
P _n max.	Maximum heat output
PMS	Maximum system pressure
PMW	Maximum domestic hot water pressure
D	Specific flow rate
TM	Maximum operating temperature
NO _x Class	NO _x Class



This instruction booklet
is made of ecological paper




immergas.com

Immergas Europe S.r.o.
059051 Poprad - Matejovce - SK
Tel. +421.524314311
Fax +421.524314316



IMMERCAS
IMMERCAS SPA - ITALY
CERTIFIED COMPANY
UNI EN ISO 9001:2015

Design, manufacture and post-sale assistance of gas
boilers, gas water heaters and related accessories

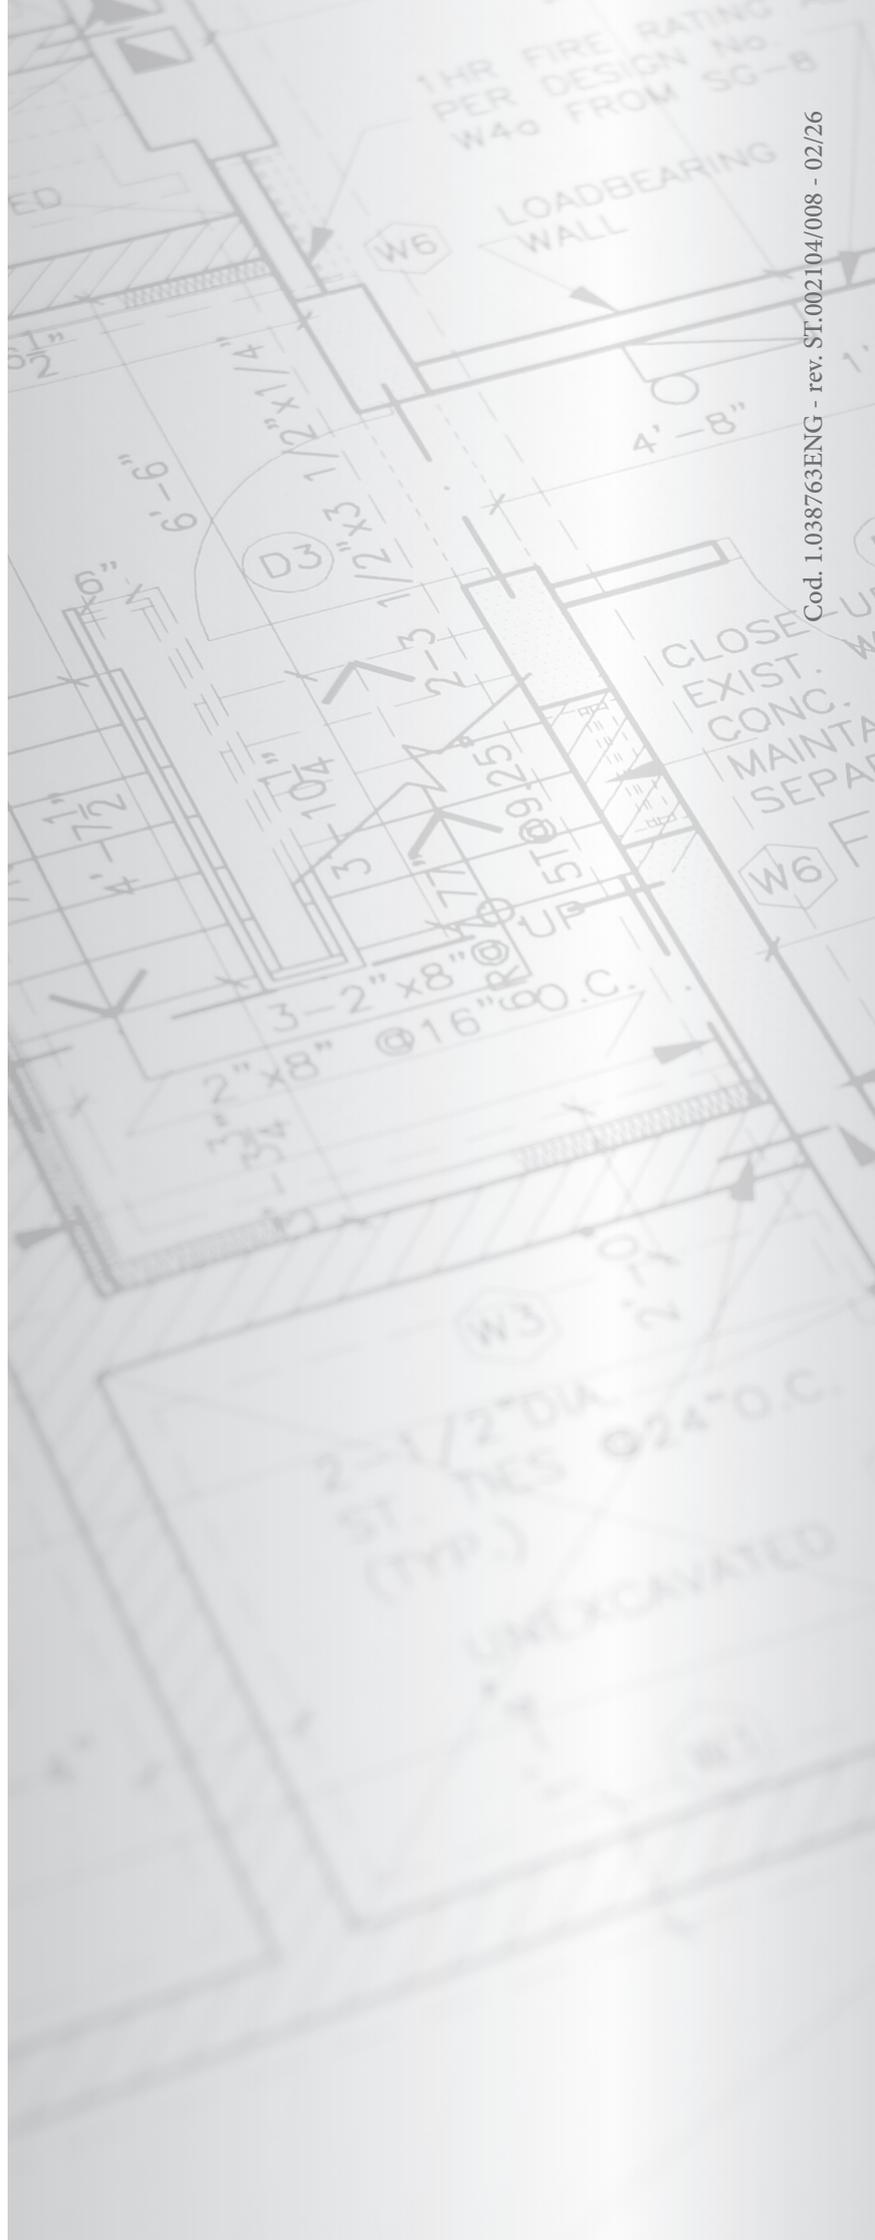

Cod. I.038763ENG - rev. ST.002104/008 - 02/26